


Panasonic

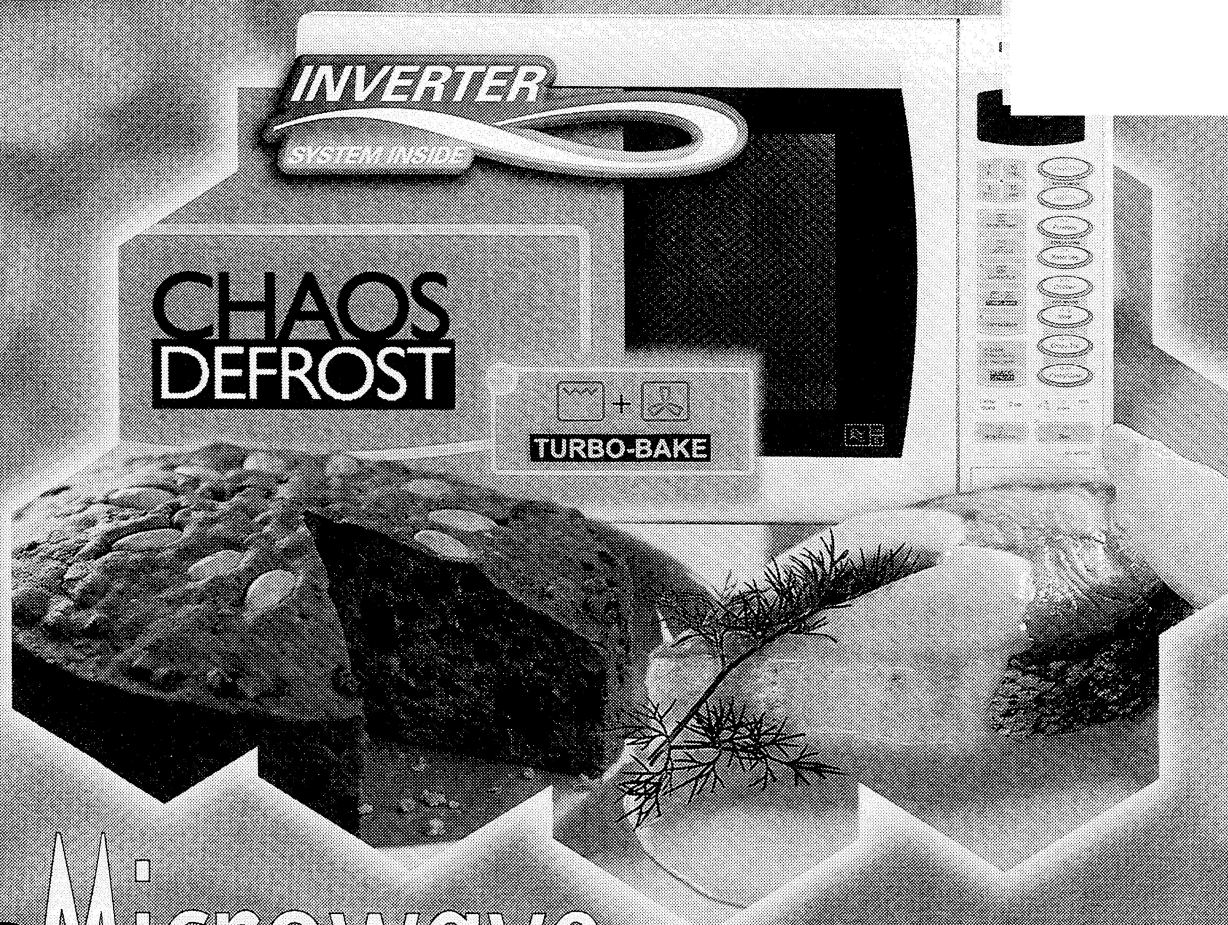

Microwave Cookery book

And Operating Instructions

For Models:

NN-A880

NN-A850

11113

Standard Conversion Chart

Weight


1/2oz	–	15g
1oz	–	25g
2oz	–	50g
3oz	–	75g
4oz	–	100g
5oz	–	150g
6oz	–	175g
7oz	–	200g
8oz	–	225g
9oz	–	250g
10oz	–	275g
11oz	–	300g
12oz	–	350g
13oz	–	375g
14oz	–	400g
15oz	–	425g
1lb/16oz	–	450g

Capacity

1/2tsp	–	3ml
1tsp	–	5ml
1tbsp	–	15ml
1/4pt	–	150ml
1/2pt	–	300ml
3/4pt	–	450ml
1pt	–	600ml
1 3/4pt	–	1 litre

When using recipes in this book always follow metric or imperial measurements. Do not combine the two. In some recipes the conversions are not a direct equivalent due to recipe result.

Important Notice

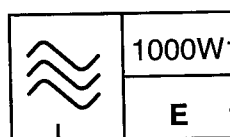

Microwave symbol

The IEC (705) power output (watts)

The heating category for small packs of food

Your oven is rated 1000 Watts (IEC). When using other cookbooks remember to adjust cooking times accordingly. The symbol above, which is displayed on your oven door, indicates the heating category for your oven when cooking or reheating convenience foods.

Your oven is rated 'E', which is very efficient. It is therefore very important that you refer carefully to the packet instructions on convenience foods. Some packet instructions only display information for B or D rated ovens. We therefore provide additional guidelines for reheating on pages 42-46 of this book. ALWAYS check the progress of the food as it cooks or reheats by simply opening the door and after checking the progress of the foods press START to continue the cooking time.

Failure to follow the instructions given in this Cookbook and Operating Instructions, may affect the recipe result and in some instances may be dangerous.

📞 COOKERY ADVICE LINE 01344 862108
Customer Support 08701 578577
Spares 01280 823523

Welcome to Panasonic Microwave Cooking

Dear Owner,

Thank you for purchasing a Panasonic Microwave Oven.

Even if this is not your first microwave oven, do please read the opening chapters of this cookbook to achieve perfect results every time.

INVERTER

SYSTEM INSIDE

This microwave oven has the benefit of the Inverter System Inside. The new unique technology has been in use with microwave ovens in Japan for many years, improving the cooking performance of the oven. It also means that you benefit from having more space inside your oven, without taking up more room on your work surface.

Microwaves leave most foods tastier and leave you with less washing up, but don't expect to become a perfect microwave cook overnight – some of the methods are very different to those used in conventional cooking.

At our busy Test and Development Kitchen in Bracknell, Home Economists program the ovens especially for the UK market. The recipes are tested many times to ensure you achieve successful results at home.

We hope you enjoy using your new oven but should you require any further help or explanation, phone our

☎ COOKERY ADVICE LINE 01344 862108

or write to the address below.

Best regards,

Carol Cook BSc (Hons)
Senior Home Economist

**The Microwave Test & Development Kitchen
Panasonic Consumer Electronics U.K.
Willoughby Road
Bracknell
Berkshire
RG12 8FP**

When writing, be sure to state your model number and daytime telephone number.



CONTENTS

Safety Information	2
Unpacking your oven	3
Care and Cleaning	4
Parts of your oven	5
Important Information	6-7
Microwaving Principles	8
General Guidelines	9-10
Containers to use	11-12
Control Panels	13
Operating Instructions	14-40
• Microwaving/defrosting	15-20
• Grilling	21-22
• Convection cooking	23-24
• TURBO-BAKE cooking	25-26
• Combination Cooking	27-33
Auto Sensor/Sensor	
Combination Programs	34-35
Auto Weight Programs - NN-A880	36-37
Auto Weight Programs - NN-A850	38-40
Cooking and Reheating Guidelines	41
Reheating Charts	42-46
Cooking Charts	47-54
Adapting Recipes	55

RECIPES

Soups and Starters	56-58
Fish	59-63
Meat and Poultry	64-72
Pasta, Rice & Beans	73-75
Cheese and Egg Dishes	76-78
Vegetables/Vegetarian	79-85
Sauces	86-87
Pastry	88-91
Desserts	92-95
Baking	96-100
Preserves	101-102
Bread	103
Sunday lunch	104
Building-in Your Oven	105
Index	106-108


For your safety read the following information carefully

This appliance is supplied with a moulded three pin mains plug for your safety and convenience. A 13 amp fuse is fitted in this plug. Should the fuse need to be replaced, please ensure that the replacement fuse has a rating of 13 amps and that it is approved by ASTA or BSI to BS1362. Check for the ASTA mark  or the BSI mark  on the body of the fuse.

If the fuse cover is detachable, never use the plug with the cover omitted. If a replacement fuse cover is required, ensure it is the same colour as that visible on the pin face of the plug (ie. red or orange). A replacement fuse cover can be purchased from your local Panasonic Dealer.

HOW TO REPLACE THE FUSE

Open the fuse compartment with a screwdriver and replace the fuse.



IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET IN YOUR HOME THEN THE FUSE SHOULD BE REMOVED AND THE PLUG CUT OFF AND DISPOSED OF SAFELY AND AN APPROPRIATE ONE FITTED. THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO ANY 13 AMP SOCKET.

If a new plug is to be fitted, please observe the wiring code as shown opposite. If in any doubt, please consult a qualified electrician (For U.K. Models only).

WARNING: THIS APPLIANCE MUST BE EARTHED.

IMPORTANT: The wires in this mains lead are coloured in accordance with the following code: Green-and-yellow: Earth, Blue: Neutral, Brown: Live.

As the colours of the wire in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured GREEN-AND-YELLOW must be connected to the terminal in the plug which is marked with the letter E or by the Earth symbol  or coloured GREEN or GREEN-AND-YELLOW.

The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter N or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal in the plug which is marked with the letter L or coloured RED.

When this oven is installed it should be easy to isolate the appliance from the electricity supply by pulling out the plug or operating a circuit breaker.

Voltage & Power

The voltage used must be the same as specified on this microwave oven. Using a higher voltage than that which is specified is dangerous and may result in a fire or other type of accident causing damage.

Do not immerse cord, plug or oven in water. Keep cord away from heated surfaces. Do not let cord hang over the edge of table or work top. Do not plug your oven in via an extension cable as this can be dangerous. It is important to plug the oven directly into a wall socket.

The back of the appliance heats up during use. Do not allow the cord to be in contact with the back of the appliance or cabinet surface.

Caution: Hot surfaces

1. Hot Surfaces

Exterior oven surfaces, including air vents on the cabinet and the oven door, will get hot during CONVECTION, COMBINATION and GRILLING. Use care when opening or closing door and when inserting or removing food and accessories. The oven has a heater situated in the top of the oven. After using the CONVECTION, COMBINATION and GRILL functions the roof and walls will be very hot.




- Children should be kept away from the oven at all times and should only be allowed to operate the oven under supervision. Ensure that children do not touch the hot outer casing after operation of the oven.



Unpacking your oven

1. Examine Your Oven

Unpack oven, remove all packing material, and examine the oven for any damage such as dents, broken door latches or cracks in the door. Notify dealer immediately if unit is damaged. Do NOT install if unit is damaged.

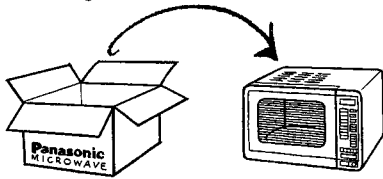

2. Guarantee

Your receipt is your guarantee, please keep safely.


3. Cord

If the supply cord of this appliance is damaged, it must be replaced by the special cord available only from the manufacturer.


N.B. The appliance should be inspected for damage to the door seals and door seal areas. If these areas are damaged the appliance should not be operated until it has been repaired by a service technician trained by the manufacturer.

Placement of your oven

- Oven must be placed on a flat, stable surface 850mm above floor level. For proper operation, the oven must have sufficient air flow, i.e. 5cm/2" at one side, the other being open; 15cm/6" clear over the top; 10cm/4" at the rear.

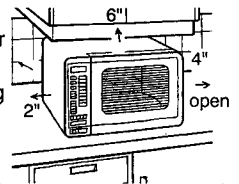

- Do not place the microwave oven on a shelf directly above a gas or electric hob. This may be a safety hazard and the oven may be damaged.
- Do not block air vents on the rear and bottom or top of the cabinet. Do not place any articles on the top of the oven over the vents. If air vents are blocked during operation, the oven may overheat. If the oven overheats, a thermal safety device will turn the oven off. The oven will remain inoperable with blank display until it has cooled.
- Do not use outdoors.

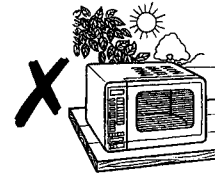

Before using your oven

1. Before Use

Before using CONVECTION, COMBINATION or GRILL function for the first time operate the oven without food and accessories (including glass turntable and roller ring) on CONVECTION 250 °C for 5 mins. This will allow the oil that is used for rust protection to be burned off. This is the only time that the oven is operated empty.

CAUTION: Grill element and oven will be hot.


DO NOT OPERATE THE OVEN EMPTY.

(Apart from in point 1 above).

The appliance must not be operated by Microwave or Combination WITHOUT FOOD IN THE OVEN. Operation when empty will damage the appliance.

2. Storage of Accessories

Do not store any objects other than oven accessories inside the oven in case it is accidentally turned on. In case of electronic failure, oven can only be turned off at wall socket.

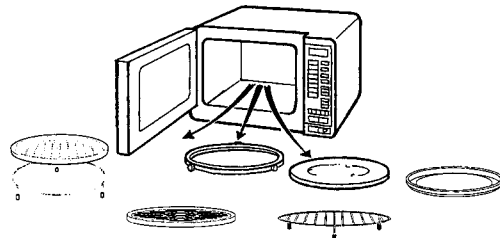

Care & Cleaning of your Microwave Oven

1. Switch the oven off before cleaning and unplug at socket if possible.
2. Keep the inside of the oven, door seals and door seal areas clean. When food splatters or spilled liquids adhere to oven walls, door seals and door seal areas wipe off with a damp cloth. Mild detergent may be used if they get very dirty. The use of harsh detergent or abrasives is not recommended.
3. The grill in the oven has a self-clean catalytic lining. It is therefore not necessary to clean the radiant grill element or above the grill in the roof of the oven.
4. After using CONVECTION, GRILL or COMBINATION cooking the enamel walls of the oven should be cleaned with a soft cloth squeezed in soapy water. Particular care should be taken to keep the window area clean particularly after cooking by CONVECTION, GRILL or COMBINATION. Stubborn spots inside the oven can be removed by using a small amount of branded conventional oven-cleaner sprayed onto a soft damp cloth. Wipe onto problem spots, leave for recommended time and then wipe off. Avoid the microwave feed guide area, the roof of the oven, and the door. DO NOT SPRAY DIRECTLY INSIDE THE OVEN.
5. The outside oven surface should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
6. If the Control Panel becomes dirty, clean with a soft, dry cloth. Do not use harsh detergents or abrasives on Control Panel. When cleaning the Control Panel, leave the oven door open to prevent the oven from accidentally turning on. After cleaning touch STOP/CANCEL Pad to clear display window.
7. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity conditions and in no way indicates a malfunction of the unit or microwave leakage.
8. It is occasionally necessary to remove the glass turntable for cleaning. Wash the tray in warm soapy water. Do not place in the dishwasher.
9. The roller ring and oven cavity floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent and hot water then dry with a clean cloth. The roller ring may be washed in mild soapy water. Cooking vapours collect during repeated use but in no way affect the bottom surface or the roller ring wheels. After removing the roller ring from cavity floor for cleaning, be sure to replace it in the proper position.
10. When GRILLING or cooking by COMBINATION or CONVECTION some foods may splatter grease onto the enamel oven walls. If the oven is not cleaned to eliminate this grease, it can accumulate and cause the oven to 'SMOKE' during use. These marks will be more difficult to clean later.


Maintenance of your oven

1. **Service**
WHEN YOUR OVEN REQUIRES A SERVICE call your local Panasonic engineer (08701 578577 Customer Support). It is dangerous for anyone other than a service technician trained by the manufacturer to perform repair service. Do not attempt to remove the outer casing of the oven.
2. **Door Seals**
Do not attempt to tamper with or make any adjustments or repairs to door, control panel housing, safety interlock switches or any other part of the oven. Do not remove outer panel from oven. The door seals and door seal areas should always be kept clean – use a damp cloth.




N.B. The appliance should be inspected for damage to the door seals and door seal areas. If these areas are damaged the appliance should not be operated until it has been repaired by a service technician trained by the manufacturer.

3. **Oven Light**
The oven lamp must be replaced by a service technician trained by the manufacturer. DO NOT attempt to remove the outer casing from the oven.
4. **Spare Parts**
These may be ordered from SEME (01280 823523). Ensure you quote correct model number.

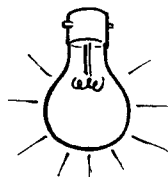

Parts of Your Oven

1. Do not operate the oven without the Roller Ring and Glass Turntable in place.
2. Only use the Glass Turntable specifically designed for this oven. Do not substitute with any other Glass Turntable.
3. If Glass Turntable is hot, allow to cool before cleaning or placing in water.
4. Do not cook directly on Glass Turntable. Always place food in a microwave safe dish. The only exception to this is when cooking Jacket Potatoes on microwave only.
5. If food or utensil on Glass Turntable touches oven walls, causing the turntable to stop moving, it will automatically rotate in the opposite direction. This is normal. Open oven door, reposition the food and restart.
6. The Glass Turntable can rotate in either direction.
7. While cooking by MICROWAVE or COMBINATION, turntable may vibrate. This will not affect cooking performance.
8. The metal accessories provided must ONLY be used as directed for Grilling, Convection and Combination cooking. Never use them on microwave only. Do not use if operating the oven with less than 200g (7oz) of food on a manual Combination program. FAILURE TO USE ACCESSORIES CORRECTLY COULD DAMAGE YOUR OVEN.
9. Arcing may occur if the incorrect weight of food is used, a metal container has been used incorrectly, or the accessories have been damaged. If this occurs, stop the machine immediately. You can continue to cook by GRILL OR CONVECTION ONLY.
10. Always refer to instructions for correct accessories to use on all programs. The glass turntable and roller ring are the only accessories used for Microwave Cooking. For CONVECTION and COMBINATION cooking the metal tray must ALWAYS be in place on the glass turntable.

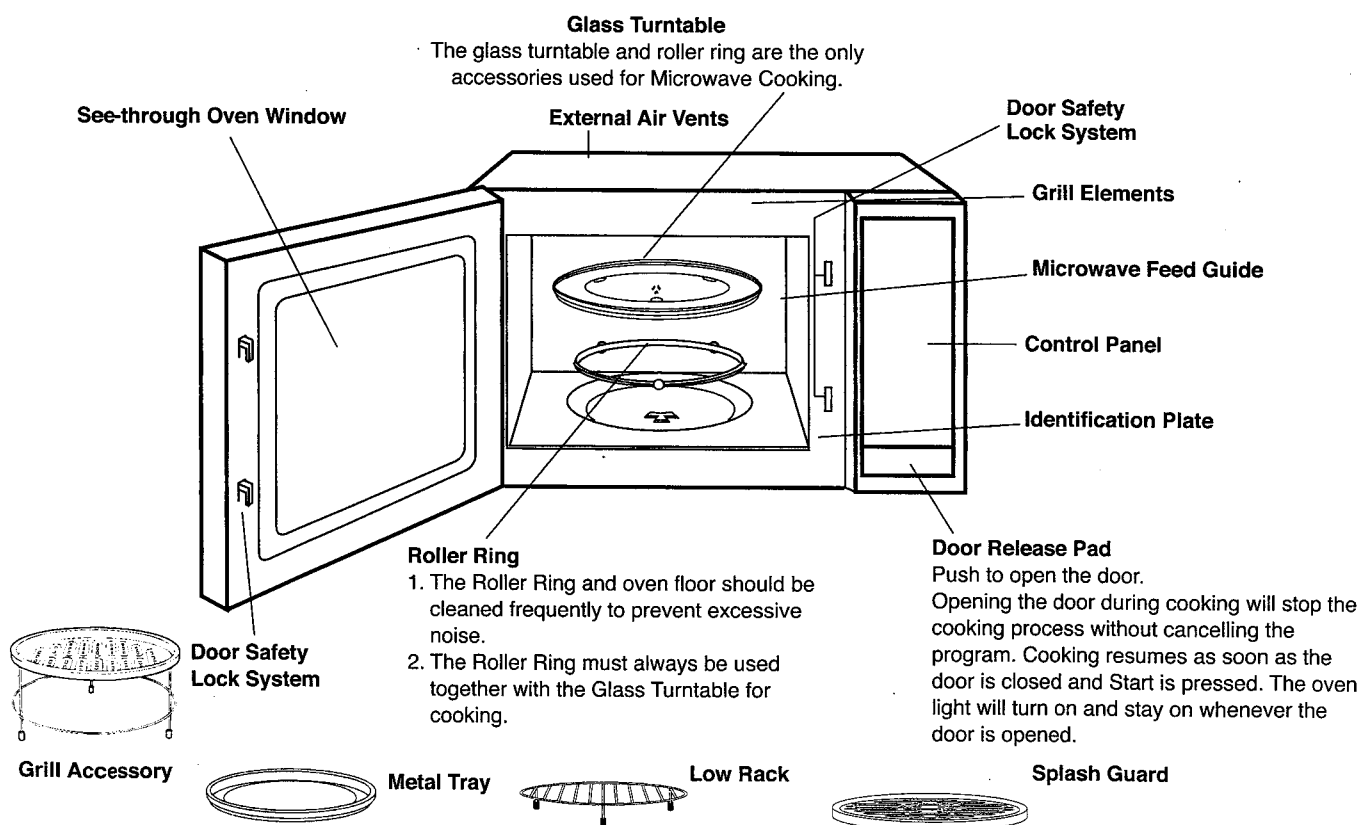

Important Information – Read Carefully

Safety

If smoke or a fire occurs in the oven, press Stop/Cancel button and leave the door closed in order to stifle any flames. Disconnect the power cord, or shut off power at the fuse or the circuit breaker panel.

Short Cooking Times

As microwave cooking times are much shorter than other cooking methods it is essential that recommended cooking times are not exceeded without first checking the food.

Cooking times given in the cookbook are approximate. Factors that may affect cooking times are: preferred degree of cooking, starting temperature, altitude, volume, size and shape of foods and utensils used. As you become familiar with the oven, you will be able to adjust these factors.


It is better to undercook rather than overcook foods. If food is undercooked, it can always be returned to the oven for further cooking. If food is overcooked, nothing can be done. Always start with minimum cooking times.

Important.

If the recommended cooking times are exceeded the food will be spoiled and in extreme circumstances could catch fire and possibly damage the interior of the oven.

1. Small Quantities of Food.


Take care when heating small quantities of food as these can easily burn, dry out or catch fire if cooked too long. Always set short cooking times and check the food frequently.

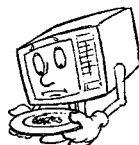

NEVER OPERATE THE OVEN WITHOUT FOOD INSIDE ON MICROWAVE OR COMBINATION.

2. Foods Low in Moisture.

Take care when heating foods low in moisture, e.g. bread items, chocolate, popcorn, biscuits and pastries. These can easily burn, dry out or catch on fire if cooked too long.

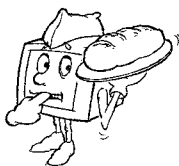


3. Christmas Pudding.

Christmas puddings and other foods high in fats or sugar, e.g. jam, mince pies, must not be over heated. These foods must never be left unattended as with over cooking these foods can ignite.



4. Boiled Eggs.

Do not boil eggs in their shell in your microwave. Raw eggs boiled in their shells can explode causing injury.

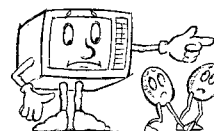

5. Foods with Skins.

Potatoes, apples, egg yolk, whole vegetables and sausages are examples of food with non porous skins. These must be pierced using a fork before cooking to prevent bursting.



6. Liquids.

When heating liquids, e.g. soup, sauces and beverages in your microwave oven, overheating the liquid beyond boiling point can occur without evidence of bubbling.


This could result in a sudden boil over of the hot liquid. To prevent this possibility the following steps should be taken:

a) Avoid using straight-sided containers with narrow necks.

b) Do not overheat.

c) Stir the liquid before placing the container in the oven and again halfway through the heating time.

d) After heating, allow to stand in the oven for a short time, stirring again before carefully removing the container.

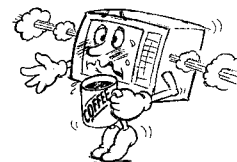

7. Lids.

Always remove the lids of jars and containers and takeaway food containers before you microwave them. If you don't then steam and pressure might build up inside and cause an explosion even after the microwave cooking has stopped.

8. Deep Fat Frying.

Do not attempt to deep fat fry in your oven.



Important Information – Read Carefully


9. Meat Thermometer.

Use a meat thermometer to check the degree of cooking of roasts and poultry only when meat has been removed from the microwave. If undercooked, return to the oven and cook for a few more minutes at the recommended power level. Do not leave a conventional meat thermometer in the oven when microwaving.



10. Paper, Plastic.

Carefully attend the appliance if paper, plastic or other combustible materials are used as containers or for covering. Do not use wire twist-ties with roasting bags as arcing will occur.

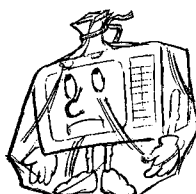


Do not use re-cycled paper products, e.g. Kitchen roll unless they say they are specifically designed for use in a microwave oven. These products contain impurities which may cause sparks and/or fires when used.

11. Reheating.

It is essential that reheated food is served "piping hot".


Remove the food from the oven and check that it is "piping hot", i.e. steam is being emitted from all parts and any sauce is bubbling. (If you wish you may choose to check the food has reached 72°C with a food thermometer – but remember do not use this thermometer inside the microwave.)

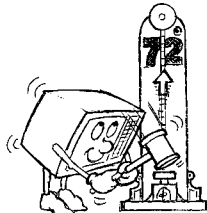

For foods that cannot be stirred, e.g. lasagne, shepherd's pie, the centre should be cut with a knife to test it is well heated through. Even if a manufacturer's packet instructions have been followed always check the food is piping hot before serving and if in doubt return your food to the oven for further heating.


12. Standing Time.

Standing time refers to the period at the end of cooking or reheating when food is left before being eaten, i.e. it is a rest time which allows the heat in the food to continue to conduct to the centre, thus eliminating cold spots.

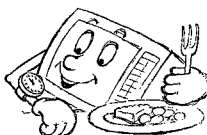

13. Keeping Your Oven Clean.

It is essential for the safe operation of the oven that it is wiped out regularly. Use warm soapy water, squeeze the cloth out well and use to remove any grease or food from the interior. Pay particular attention to the door seal area and also the areas around the microwave feed guide situated on the right hand side of the cavity wall. The oven should be unplugged when cleaning.

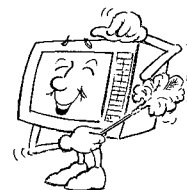

14. Grilling.

The oven will only operate on the GRILL function with the door closed.

15. Fan Motor Operation.


After using the microwave oven, the fan motor may operate to cool the electric components. This is normal and you can take out food even though the fan motor operates. You can continue using the oven during this time.

16. Containers.

Before use check that utensils/containers are suitable for use in microwave ovens.

17. Babies Bottles and Food Jars.

When reheating babies bottles always remove top and teat. Liquid at the top of the bottle will be much hotter than that at the bottom and must be shaken thoroughly before checking the temperature. The lid must also be removed from babies food jars, the contents must also be stirred or shaken before the temperature is checked.

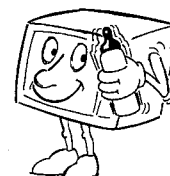

18. Arcing

Arcing may occur if a metal container has been used incorrectly, if the incorrect weight of food is used, or if the accessories have been damaged. Arcing is when blue flashes of light are seen in the microwave oven. If this occurs, stop the machine immediately. If the oven is left unattended and this continues it can damage the machine.


You can continue to cook by GRILL OR CONVECTION ONLY.

Microwaving Principles


Microwave energy has been used in this country to cook and reheat food since early experiments with RADAR in World War II. Microwaves are present in the atmosphere all the time, both naturally and from manmade sources.

Manmade sources include radar, radio, television, telecommunication links and car phones.

HOW MICROWAVES COOK FOOD

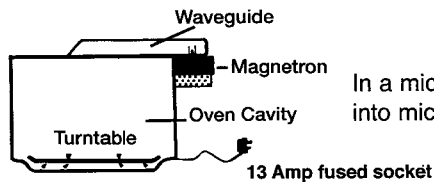


In a microwave oven, electricity is converted into microwaves by the MAGNETRON.

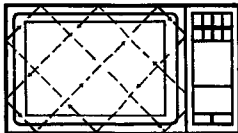


REFLECTION

The microwaves bounce off the metal walls and the metal door screen.

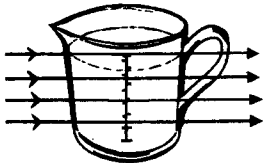

TRANSMISSION

Then they pass through the cooking containers to be absorbed by the water molecules in the food, all foods contain water to a more or lesser extent.

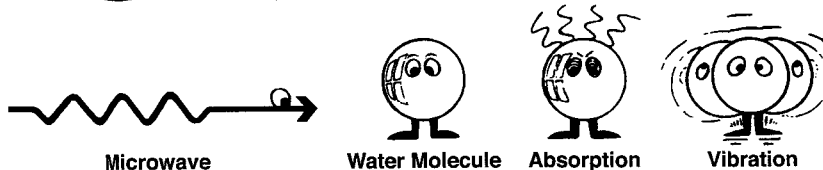

The microwaves cause the water molecules to vibrate which causes FRICTION, i.e. HEAT. This heat then cooks the food. Microwaves are also attracted to fat and sugar particles, and foods high in these will cook more quickly. Microwaves can only penetrate to a depth of 1½-2 inches (4-5 cm) and as heat spreads through the food by conduction, just as in a traditional oven, the food cooks from the outside inwards.

IMPORTANT NOTES

The dish used to cook or reheat the food will get warm during cooking, as the heat conducts from the food. Even in microwaving, oven gloves are required!

MICROWAVES CANNOT PASS THROUGH METAL AND THEREFORE METAL COOKING UTENSILS CAN NEVER BE USED IN A MICROWAVE, FOR COOKING ON MICROWAVE ONLY

Foods Not Suitable for Cooking by Microwave Only

Yorkshire Puddings, Souffles, Double Crust Pastry Pies.

Because these foods rely on dry external heat to cook correctly, do not attempt to cook by microwave.

Foods that require deep fat frying cannot be cooked either.

Boiled Eggs

Do not boil eggs in your microwave. Raw eggs boiled in their shells can explode and cause serious injury


STANDING TIME

When a microwave oven is switched off, the food will continue to cook by conduction – NOT BY MICROWAVE ENERGY. Hence STANDING TIME is very important in microwaving, particularly for dense foods i.e. meat, cakes and reheated meals (Refer to page 9).

Auto Weight Cook Programs for NN-A850

Auto programs must ONLY be used for the foods described below. Programs 9 to 16 use a combination of Microwave and Convection and/or Grill.

9 Meat - Beef/Lamb

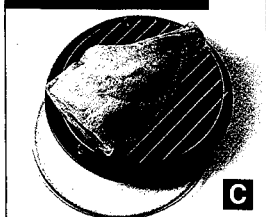

To cook a joint of beef or lamb. Place joint on Low Rack with Splash Guard on Metal Tray and place on Glass Turntable. Press pad once, enter the weight and press START. Turn halfway.

meat

10 Meat Casserole



For cubed meat (e.g. Braising steak, lamb, pork, not chicken) and vegetables. Place in a suitable sized casserole dish with stock. Use a minimum of 450 ml of stock. If using a cook-in-sauce, also add the same quantity of water. Cover with lid. Place on Metal Tray on Glass Turntable. Press pad twice, enter the weight (excluding the dish) and press START. When oven beeps, stir the casserole.

11 Chilled Crispy Top



For reheating and browning chilled, purchased savoury dishes e.g. Lasagne or Shepherds Pie. Remove any lid or covering. If in a foil container, transfer to a similar sized heatproof dish and place on Low Rack on Metal Tray and place on Glass Turntable. If using a heatproof plastic-based dish in which food is purchased, take care and support underneath when removing from the oven. Press pad once, enter the weight

and press START. DO NOT COVER. Stand for 1 minute before serving. Ensure the food is piping hot.

crispy top


12 Frozen Crispy Top



For reheating and browning frozen purchased savoury dishes e.g. Lasagne. Remove any lid or covering. If in a foil container, transfer to a similar sized heatproof dish and place on Low Rack on Metal Tray and place on Glass Turntable. If using a heatproof plastic-based dish in which food is purchased, take care and support underneath when removing from the oven.

Press pad twice, enter the weight and press START. DO NOT COVER. Allow to stand for 1 minute. Ensure food is piping hot.

13 Chilled Pizza

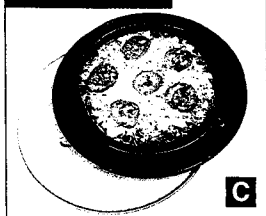

For reheating and browning chilled, purchased pizza. Remove all packaging and place on Low Rack on Metal Tray on Glass Turntable. Press pad once, enter the weight and press START.

pizza

14 Frozen Pizza



For reheating and browning frozen, purchased pizza. Remove all packaging and place on Low Rack on Metal Tray on Glass Turntable. Press pad twice, enter the weight and press START.


15 Bake Pastry



Always use metal pie plates with solid base or round baking sheets. Preheat the oven to Convection 210°C with metal tray in place. When preheated, cancel the Convection program. Place the pie plate onto Metal Tray on Glass Turntable. Press pad once, enter the weight (excluding the dish) and press START.

pastry/crumble

16 Fruit Crumble

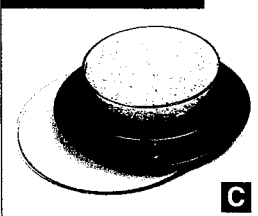

For cooking fresh fruit crumbles*. Place fruit and crumble topping in a heatproof dish. Place on Low Rack on Metal Tray on Glass Turntable. Press pad twice, enter the weight (excluding the dish) and press START.

Note: If using packet crumble mix, check 5-10 minutes before end of cooking, as they have a high sugar content and may over-brown.


* See recipe on page 95.

Auto Weight Cook Programs for NN-A850

Auto Programs must ONLY be used for the foods described below. Programs 1 to 4 use Microwave Power only. Programs 5 to 16 use a Combination program.

***IMPORTANT NOTE:** These programs are not suitable for foods that cannot be stirred e.g. Lasagne/Shepherds Pie. These convenience meals can be cooked on the Crispy Top program for 'Chilled and Frozen' dishes.


1 Chilled Meal

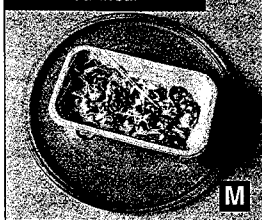

This program is for reheating a chilled convenience meal that can be stirred.* Foods must be in a suitable microwaveable container and have the film pierced. Place on turntable. Press the pad once, enter the weight and press START. Stir halfway. Allow to stand for 1 minute. Ensure that the food is piping hot. Stir the food before serving.

1
reheat meal

2 Frozen Meal

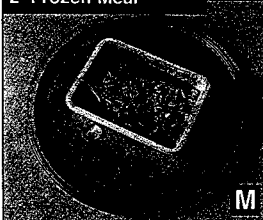

For reheating a frozen convenience meal that can be stirred.* Foods must be in a suitable microwaveable container and have the film pierced. Place on turntable. Press the pad twice, enter the weight and press START. When the oven beeps, remove film and STIR. Then re-cover and continue to cook for the remaining time. Allow to stand for 1 minute. Ensure food is piping hot. Stir again before serving.


3 Fresh Vegetables



To cook FRESH vegetables. Place prepared vegetables in a shallow container and add 90 ml (6 tbsp) of water. Cover with pierced cling film or lid. Place on Glass Turntable. Press the pad once, enter the weight and press START.

3
veg/fish

4 Fresh Fish

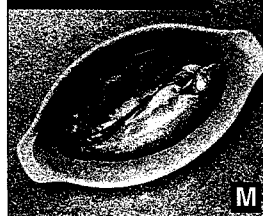

To cook FRESH fish. Shield the thinner portions. Place in a shallow container and add 15 ml (1tbsp) of liquid. Cover with pierced cling film or lid. Place on Glass Turntable. Press the pad twice, enter the weight and press START.

5 Jacket Potatoes



To cook jacket potatoes with a crisper, drier skin. Choose medium sized potatoes 200-250g (7-9oz), for best results. Wash and dry potatoes and prick several times with a fork. Place on Low Rack on Metal Tray on Glass Turntable. Press the pad once, enter the weight and press START.

5
potatoes

6 Frozen Potato Products



To cook FROZEN oven chips and potato products, e.g. Hash Browns, Croquettes, etc., which are suitable for GRILLING. Spread potato products out on Grill Accessory, place on Metal Tray on Glass Turntable. Press the pad twice, enter the weight and press START. Turn during cooking. For best results, cook in a single layer.

Note: Potato products vary considerably. We suggest checking a few minutes before the end of cooking to access preferred browning.


7 Whole Chicken



To cook WHOLE FRESH unstuffed chicken. Cook stuffing separately. Place chicken on Low Rack with Splash Guard on Metal Tray and place on Glass Turntable. Press pad once, enter the weight and press START. Start cooking breast side down and turn halfway.

7
chicken

8 Chicken Portions

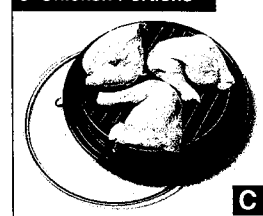


For cooking chicken quarters e.g. leg quarters, breast quarters with bone. DO NOT use for drumsticks, boneless breasts or thighs. Place chicken on Low Rack with Splash Guard on Metal Tray on Glass Turntable. Press pad twice, enter the weight and press START. Turn during cooking if necessary.

M = Microwave Power only **C** = Combination e.g. Convection + Micro Power

Auto Weight Cook Programs for NN-A850

This feature allows you to cook or reheat sixteen foods by setting the weight only. The oven determines the Microwave power level and/or Combination setting, then the cooking time automatically. Select the category of food and then just enter the weight. The weight can be entered in grams or pounds and ounces.

- Select the desired Auto Weight Program, by pressing the pad. The pad can be pressed once or twice to select one of the two programs available.

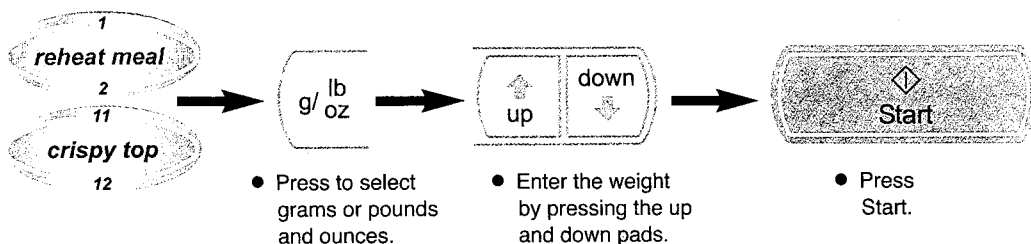

Guidelines for Use

The Auto Weight Programs are designed to take the guesswork out of cooking or reheating your food. They must ONLY be used for foods described.

1. Only cook foods within the weight ranges described (see table below).
2. Only use the accessories as indicated on pages 39 and 40.
3. Do NOT cover food unless stated, as programs 5 - 16 use a Combination of Microwave and Grill and/or Convection, and it will prevent the food from browning. The heat of the grill and/or oven will also melt any plastic covering.
4. Most foods benefit from a **STANDING** time after cooking on an Auto Program, to allow heat to continue conducting to the centre.
5. To allow for some variations that occur in food, check that food is thoroughly cooked and piping hot before serving.

Minimum/Maximum Weights to use on Auto Weight Programs

Program	Minimum	Maximum
Chilled Meal	300 g (11oz)	600 g (1lb 5oz)
Frozen Meal	300 g (11oz)	600 g (1lb 5oz)
Fresh Vegetables	100 g (4oz)	900 g (2lb)
Fresh Fish	100 g (4oz)	900 g (2lb)
Jacket Potatoes	200 g (7oz)	1500 g (3lb 5oz)
Frozen Potato Products	200 g (7oz)	500 g (1lb 2 oz)
Whole Chicken	1000 g (2lb 2oz)	2600 g (5lb 12oz)
Chicken Portions	300 g (11oz)	1500g (3lb 5oz)
Beef/Lamb	500 g (1lb 2oz)	2500 g (5lb 8oz)
Casserole	800 g (1lb 12oz)	2000 g (4lb 6oz)
Chilled Crispy Top	300 g (11oz)	600 g (1lb 5oz)
Frozen Crispy Top	300 g (11oz)	600 g (1lb 5oz)
Chilled Pizza	200 g (7oz)	600 g (1lb 5oz)
Frozen Pizza	200 g (7oz)	600 g (1lb 5oz)
Bake Pastry	600 g (1lb 5oz)	1000 g (2lb 2oz)
Fruit Crumble	500 g (1lb 2oz)	1000 g (2lb 2oz)

Auto Weight Cook Programs for NN-A880

Auto Programs must **ONLY** be used for the foods described below.

9-10

Chicken

9 Whole Chicken



To cook **WHOLE FRESH** unstuffed chickens. Cook stuffing separately. Place chicken on Low Rack with Splash Guard on Metal Tray and place on Glass Turntable. Press pad once, enter the weight of the chicken, then press **START**. Start cooking breast side down and turn halfway.

10 Chicken Portions



For cooking chicken quarters e.g. leg quarters, breast quarters with bone. **DO NOT** use for drumsticks, boneless breasts or thighs. Place chicken on Low Rack with Splash Guard on Metal Tray on Glass Turntable. Press pad twice, enter the weight of the chicken, then press **START**. Turn during cooking if necessary.

11-12

Meat

11 Meat - Beef/Lamb



To cook a joint of beef or lamb. Place joint on Low Rack with Splash Guard on Metal Tray and place on Glass Turntable. Press pad once, enter the weight of the joint and press **START**. Turn halfway.

12 Meat - Casserole



For cubed meat (e.g. braising steak, lamb, pork, not chicken) and vegetables. Place in a suitable sized casserole dish with stock. Use a minimum of 450 ml of stock. If you use a 'cook-in-sauce', also add the same quantity of water. Cover with lid. Place on Metal Tray on Glass Turntable. Press pad twice, enter the weight (excluding the dish) and press **START**. When oven beeps, stir the casserole.

13-14


Crispy Top

13 Chilled Crispy Top



For reheating and browning chilled purchased savoury dishes e.g. Lasagne or Shepherds Pie. Remove any lid or covering. If in a foil container, transfer to a similar sized heatproof dish and place on Low Rack on Metal Tray and place on Glass Turntable. If using a heatproof plastic-based dish in which food is purchased, take care and support underneath when removing from oven.

14 Frozen Crispy Top

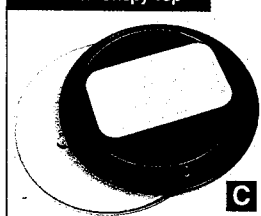


For reheating and browning frozen purchased savoury dishes e.g. Lasagne. Remove any lid or covering. If in a foil container, transfer to a similar sized heatproof dish and place on Low Rack on Metal Tray and place on Glass Turntable. If using heatproof plastic-based dish in which food is purchased, take care and support underneath when removing from oven. Press pad twice, enter the weight and press **START**. **DO NOT COVER**. Allow to stand for 1 minute. Ensure the food is piping hot.

Press pad once. Enter weight. Press **START**. **DO NOT COVER**. Stand for 1 minute before serving. Ensure the food is piping hot.

15-16

Pastry/Cake

15 Bake Pastry

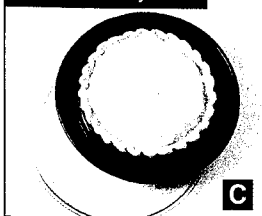

Always use metal pie plates with solid bases or round baking sheets. Preheat the oven to Convection 210°C with Metal Tray in place. When preheated cancel the convection program. Place the pie plate onto Metal Tray on Glass Turntable. Press pad once, enter the weight of the pie (excluding the dish) and press **START**.

16 Bake Cake




A range of medium textured cakes can be cooked. Use smooth, and preferably seamless, metal cake tins. Place directly onto the Metal Tray on the Glass Turntable. **DO NOT** use spring form tins. Preheat oven to convection 160°C with Metal Tray in place. When preheated cancel the convection program. Press pad twice, enter the weight of the cake (excluding tin) and press **START**.

M = Microwave cooking only **C** = Combination e.g. Convection + Micro power or Grill + Micro Power

Auto Weight Cook Programs for NN-A880

This feature allows you to cook or reheat eight foods by setting the weight only. The oven determines the Microwave power level and/or Combination setting, then the cooking time automatically. Select the category of food and then just enter the weight. The weight can be entered in grams or pounds and ounces.

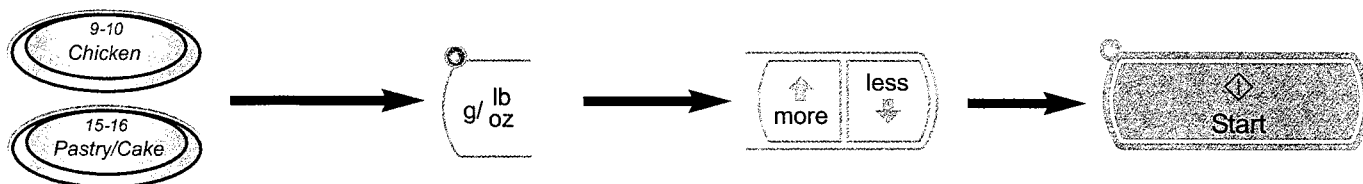

- Select the desired Auto Weight Program, by pressing the pad.
The pad can be pressed once or twice to select one of the two programs available.
- Press to select grams or pounds and ounces.
- Enter the weight by pressing the more and less pads.
- Press Start.

Guidelines for Use

The Auto Weight Programs are designed to take the guesswork out of cooking or reheating your food. They must ONLY be used for foods described.

1. Only cook foods within the weight ranges described (see table below).
2. Only use the accessories as indicated on page 37.
3. Do NOT cover food unless stated, as programs 9 - 16 use a Combination of Microwave and Grill and/or Convection, and it will prevent the food from browning. The heat of the grill and/or oven will also melt any plastic covering.
4. Most foods benefit from a STANDING time after cooking on an Auto Program, to allow heat to continue conducting to the centre.
5. To allow for some variations that occur in food, check that food is thoroughly cooked and piping hot before serving.

Minimum/Maximum Weights to use on Auto Weight Programs


Program	Minimum	Maximum
Whole Chicken	1000 g (2lb 2oz)	2600 g (5lb 12oz)
Chicken Portions	300 g (11oz)	1500 g (3lb 5oz)
Beef/Lamb	500 g (1lb 2oz)	2500 g (5lb 8oz)
Casserole	800 g (1lb 12oz)	2000 g (4lb 6oz)
Chilled Crispy Top	300 g (11oz)	600 g (1lb 5oz)
Frozen Crispy Top	300 g (11oz)	600 g (1lb 5oz)
Bake Pastry	600 g (1lb 5oz)	1000 g (2lb 2oz)
Bake Cake	400 g (14oz)	1300 g (2lb 14oz)

Auto Sensor and Sensor Combi Cook Programs for NN-A880

Auto Programs must ONLY be used for the foods described below. Programs 1-4 use Microwave power only, Programs 5-8 use Combination of Convection and/or Grill and Microwave. For perfect results ensure that the oven is cold before using any sensor program.


1-2 Reheat Meal

1 Chilled Meal

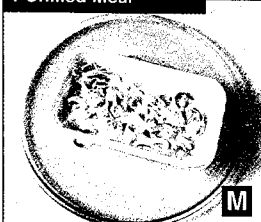

This program is for reheating a chilled convenience meal that can be stirred.* Foods must be in a suitable microwaveable container and have the film pierced. Place on turntable, press the pad once. Press START. Stir halfway. Allow to stand for 1 minute. Ensure that the food is piping hot, stir before serving. Note: Large pieces of fish/meat in a thin sauce, may require longer cooking.

2 Frozen Meal

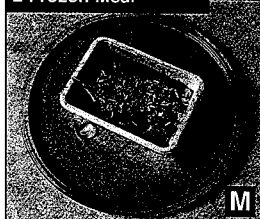

This program is for reheating a frozen convenience meal that can be stirred.* Foods must be in a suitable microwaveable container which is covered. Press the pad twice. Press START. After the oven beeps, stir the food and re-cover with pierced cling film. Continue to cook for remainder of the time. Allow to stand for 2 minutes. Ensure food is piping hot. Stir again before serving.

***IMPORTANT NOTE:** This program is not suitable for foods that cannot be stirred e.g. Lasagne/Shepherds Pie. These foods can be cooked on the Crispy Top program for 'Chilled and Frozen' dishes.


3-4 Veg/Fish

3 Fresh Vegetables



To cook FRESH vegetables e.g. carrots, cauliflower, not suitable for potatoes. Place prepared vegetables into a shallow container on turntable. Add 90ml (6tbsp) of water. Cover with pierced cling film or lid. Press the pad once. Press START.

4 Fresh Fish

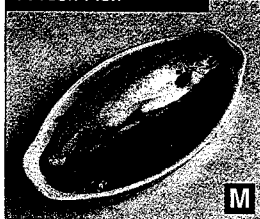

To cook FRESH fish. Shield the thinner portions. Place in a shallow container on turntable. Add 15ml (1tbsp) liquid. Cover with pierced cling film or lid. Press the pad twice. Press START.


5-6 Potatoes

5 Jacket Potatoes



To cook jacket potatoes with a crisper drier skin. Choose medium sized potatoes 200-250g (7-9oz), for best results. Wash and dry potatoes and prick with a fork several times. Place on Low Rack on Metal Tray on Glass Turntable. Press the pad once. Press START.


6 Frozen Potato Products

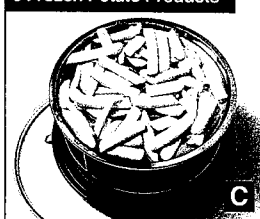

To cook FROZEN oven chips and potato products, e.g. Hash Browns, Croquettes, etc., that are suitable for GRILLING. Spread potato products out on Grill Accessory place on Metal Tray on Glass Turntable. Press the pad twice. Press START. Turn during cooking. For best results cook in a single layer.


7-8 Roast Veg.

7 Roast Potatoes

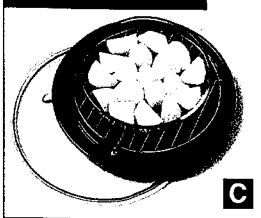

For roasting potatoes. Cut potatoes into even sized pieces and place in heatproof ceramic or Pyrex® dish with 45ml (3tbsp) oil. Place dish on Low Wire Rack on Metal Tray on Glass Turntable. Press the pad once. Press START. Turn at least twice during cooking.

8 Roast Vegetables

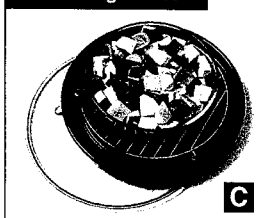


For roasting assorted vegetables. Cut vegetables into even sized chunks and place in heatproof ceramic or Pyrex® dish with 45ml (3tbsp) oil. Place dish on Low Wire Rack on Metal Tray on Glass Turntable. Press the pad twice. Press START. Turn at least twice during cooking.

M = Microwave cooking only **C** = Combination e.g. Convection + Micro power or Grill + Micro Power

Auto Sensor and Sensor Combi Cook Programs for NN-A880

These features allow you to cook or reheat foods automatically. There is no need to enter the weight, as these programs use a humidity sensor which will automatically select the correct Microwave power level and/or Combination setting and calculate the correct cooking time.

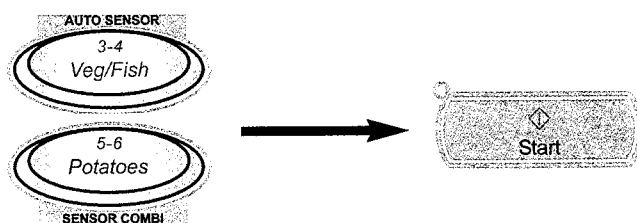

Adjust to Taste

The Sensor programs cook foods for average tastes. You are able to adjust the cooking programs to your own taste by pressing the MORE/LESS pad.



After selecting the Sensor program, but BEFORE pressing START. The oven will automatically cook the food 10% More or 10% Less.

- Select the desired Auto Sensor program, by pressing the pad. The pad can be pressed once or twice to select one of the two programs available.
- Press Start. The food category will be repeated in the display window until the oven calculates the cooking time after detecting a burst of steam. DO NOT open the oven door until the remaining cooking time appears in the display window.

IMPORTANT NOTES:

1. If you select an Auto Sensor program directly after plugging in the oven an initial warm up period will automatically count down in the display window, after which the sensor programs may be operated.
2. The Sensor Programs cannot be used when the oven is hot. If a second sensor program is selected "HOT" will appear in the display and a fan will automatically operate to cool the oven. If in a hurry, cook the food manually, i.e. select the correct power level and cooking time.

Guidelines for Use

The Auto Sensor Programs are designed to take the guesswork out of cooking or reheating your food. They must ONLY be used for the foods described.

1. Only cook foods within the weight ranges described (see table below).
2. Only use the accessories as indicated on page 35.
3. It is essential when using the Auto Sensor programs 1-4, which use microwave only, to cover the food with pierced cling film or a lid that is designed to fit the dish.
4. DO NOT cover food on Sensor Combi programs 5-8, as they use a Combination of Microwave and Convection oven and/or Grill and it will prevent the food browning. The heat of the grill will also melt any plastic covering.
5. Always choose a container size that is suitable for the quantity of food i.e. do not allow too large a headspace or the food may not be cooked correctly.
6. Most foods benefit from a STANDING time after cooking on an Auto Program, to allow heat to continue conducting to the centre.
7. To allow for some variations that occur in food, check that food is thoroughly cooked and piping hot before serving.

Minimum/Maximum Weights to use on Auto Programs

Auto Sensor Programs (Blue Wording)


Sensor Combi Programs (Red Wording)

Program	Minimum	Maximum	Program	Minimum	Maximum
Chilled Meal	300 g (11oz)	600 g (1lb 5oz)	Jacket Potatoes	200 g (7oz)	1500 g (3lb 5oz)
Frozen Meal	300 g (11oz)	600 g (1lb 5oz)	Frozen Potato Products	200 g (7oz)	500 g (1lb 2oz)
Fresh Vegetables	100 g (4oz)	900 g (2lb)	Roast Potatoes	400 g (14oz)	1000 g (2lb 2oz)
Fresh Fish	100 g (4oz)	900 g (2lb)	Roast Vegetables	400 g (14oz)	1000 g (2lb 2oz)

Combination 3. TURBO-BAKE and Microwave

OVEN ACCESSORIES TO USE

When using Combination cooking the Glass Turntable should be in position and must have the Metal Tray on top.

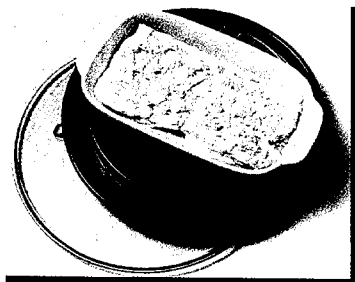

Non-metallic dishes or items of food can be placed directly onto Low Rack on the Metal Tray on the Glass Turntable. Small items should be placed in a heatproof dish on the Low Rack.



Food should be placed directly onto the Grill Accessory with the Splash Guard and Metal Tray on the Glass Turntable.

GUIDELINES

- Food is always cooked UNCOVERED.
- After cooking it is important that the accessories are removed for cleaning before re-use and that the oven walls and floor are wiped with a cloth squeezed in hot soapy water to remove any grease. DO NOT PUT ACCESSORIES IN THE DISHWASHER.

We suggest the following options for this Combination mode.

TURBO-BAKE (Oven temp)	Grill	Microwave Power	Use
220°C	1	WARM	Small items normally grilled
220°C	2	WARM	As above but denser items
220°C/230°C	3	LOW	Reheating savoury items
250°C	3	SIMMER	Frozen potato products, flapjacks
230°C	3	WARM	Reheating foods with high sugar/fat content

For advice on cooking times refer to cooking charts and recipes in this book.
Foods should always be cooked until browned and piping hot.


CAUTION:
ALWAYS USE OVEN GLOVES
WHEN REMOVING DISHES
FROM THE OVEN -
ESPECIALLY WHEN TURNING
OR STIRRING FOODS, AS THE
ACCESSORIES AND
SURROUNDING OVEN WILL
GET VERY HOT.

Combination 3. TURBO-BAKE and Microwave

This Combination mode is very useful for foods which require quick browning or crisping.

Unsuitable foods are casseroles, cakes, meringues, pastries with sweet fillings, foods containing whisked eggs and yorkshire puddings.

It is not necessary to preheat and food should always be cooked uncovered.

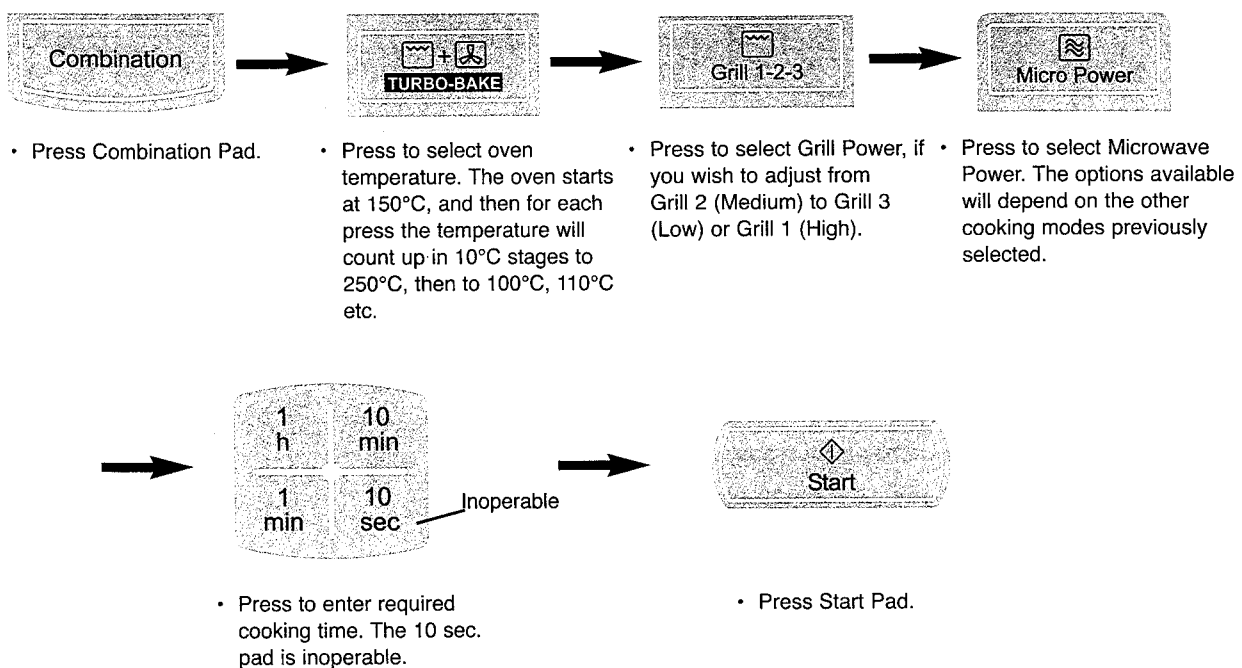


CAUTION:

The oven will automatically work on HIGH Microwave Power if a cooking time is entered without the power level previously being selected.

Combination 2. Grill and Microwave

OVEN ACCESSORIES TO USE

When using Combination cooking the Glass Turntable should be in position and must have the Metal Tray on top.

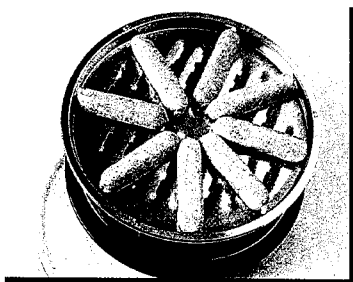

Food should be placed directly onto the Grill Accessory which stands on the Splash Guard inside the Metal Tray. This is then placed on the Glass Turntable.

GUIDELINES

- Food is always cooked UNCOVERED.
- To turn food just press the door release pad, remove the Metal Tray and Grill Accessory, turn the food, return to the oven, close the door and press START pad. The oven will continue to count down the remaining cooking time.
- After Grilling it is important that the Grill accessories are removed for cleaning before re-use and that the oven walls and floor are wiped with a cloth squeezed in hot soapy water to remove any grease. DO NOT PUT ACCESSORIES IN THE DISHWASHER.

We suggest the following options for this Combination mode.

Grill Setting	Microwave Power	Use
1	WARM	Sausages, Frozen Potato Products
2	SIMMER	Frozen Breaded Fish
3	SIMMER	Reheating snacks
3	WARM	Reheating small pastry items

For advice on cooking times refer to cooking charts and recipes in this book.

Foods should always be cooked until browned and piping hot.

CAUTION:

ALWAYS USE OVEN GLOVES WHEN REMOVING DISHES FROM THE OVEN - ESPECIALLY WHEN TURNING OR STIRRING FOODS, AS THE ACCESSORIES AND SURROUNDING OVEN WILL GET VERY HOT.

Combination 2. Grill and Microwave


This Combination mode is suitable for foods which are normally grilled and for reheating small savoury items.

Do not use this program with less than 200 g (7 oz) of food.

It is necessary to preheat when using this Combination mode and food should always be cooked uncovered.


Grill 1 - HIGH
Grill 2 - MEDIUM
Grill 3 - LOW

To Preheat Grill

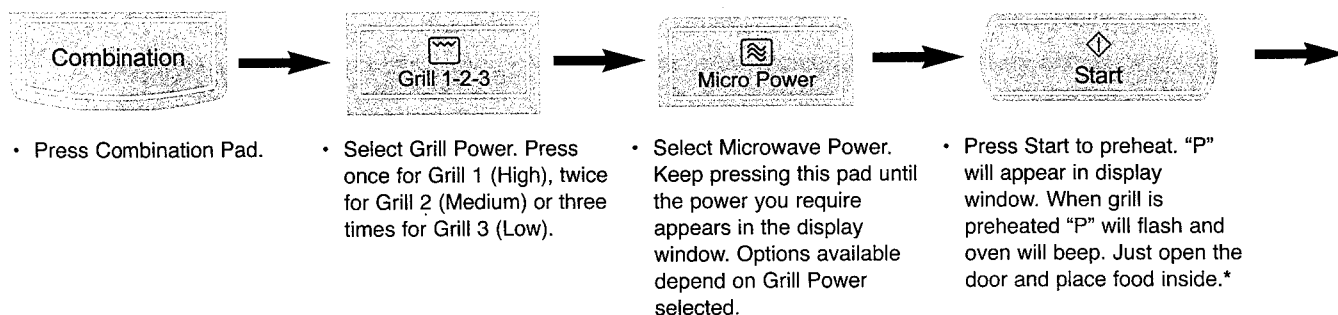

NOTE: If you preheat the Grill as shown above the Microwave Power will not operate until the time pads are entered.

* After preheating just open the oven door and place food inside. Do not press Stop/Cancel Pad as you may cancel the program, then if time is entered the oven would revert to cooking on Microwave only.

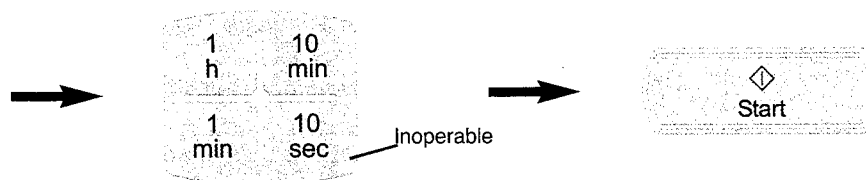

- Press to enter required cooking time. 10 sec. pad is inoperable. Maximum cooking time is 2 hours.
- Press Start Pad.

CAUTION:

The oven will automatically work on HIGH Microwave Power if a cooking time is entered without the power level previously being selected.

Combination 1. Convection and Microwave

GUIDELINES

- Food is usually cooked UNCOVERED.
- After cooking it is important that the accessories are removed for cleaning before re-use and that the oven walls and floor are wiped with a cloth squeezed in hot soapy water to remove any grease. DO NOT PUT ACCESSORIES IN THE DISHWASHER.

The chart below gives suggestions for Combination programs. For cooking times refer to cooking charts or a similar recipe in the book. It is not possible to use HIGH or DEFROST Microwave Power in this mode.

Press Combination Pad first, then select CONVECTION temperature. Lastly, select Microwave Power and set cooking time.		
Oven Temperature	Microwave Power	Use
230°C	WARM	Cooking: Chicken Portions and Breasts, Crisp Jacket Potatoes, Chops Reheating: Pizza, Garlic Bread, Savouries
220°C	SIMMER	Cooking: Pastry Pies and Plaits, Pizza, Bread, Chicken Portions in breadcrumbs, Sweet Crumbles, Cobblers Reheating: Lasagnes, Cannelloni, Cauliflower Cheese
190°C	WARM	Cooking: Quiche, Custard Tarts, Sponge-based Puddings, Bread and Butter Pudding
190°C	SIMMER	Roasting: Chicken, Duck, Turkey Cooking: Savoury Crumbles, Lasagnes, Potato Topped Pies
170°C	LOW	Roasting: Joints of Pork, Lamb and Beef well done
160°C	WARM	Cooking: Cakes (e.g. Madeira, Light Fruit etc.) Casseroles, Rice Puddings, Meat Terrines

Foods should always be cooked until browned and piping hot.

CAUTION:

ALWAYS USE OVEN GLOVES WHEN REMOVING DISHES FROM THE OVEN - ESPECIALLY WHEN TURNING OR STIRRING FOODS, AS THE ACCESSORIES AND SURROUNDING OVEN WILL GET VERY HOT.

Combination 1. Convection and Microwave

This is the most popular combination mode combining convection heat with microwave power. Casseroles, meat joints, jacket potatoes and pastries are very successful using this combination. Unsuitable foods are those which contain whisked eggs, meringues, rich fruit cakes, biscuits and yorkshire puddings.

It is not necessary to preheat except when cooking pastry dishes, when you will achieve a better result. Preheat oven to 210°C on Convection before selecting a Combination program.




- Press Combination Pad.



- Press to select oven temperature. The oven starts at 150°C, and then for each press the temperature will count up in 10°C stages to 250°C, then to 100°C, 110°C etc.



- Press Micro Power Pad to select Microwave setting. HIGH & DEFROST are not available.

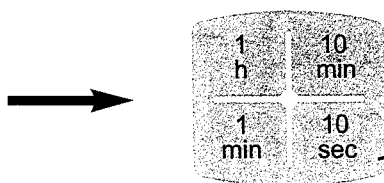

- Press to enter required cooking time. 10 sec pad is inoperable.




- Press Start Pad.

CAUTION:


The oven will automatically work on HIGH Microwave Power if a cooking time is entered without the power level previously being selected.

OVEN ACCESSORIES TO USE


When using Combination cooking the Glass Turntable should be in position and must have the Metal Tray on top.

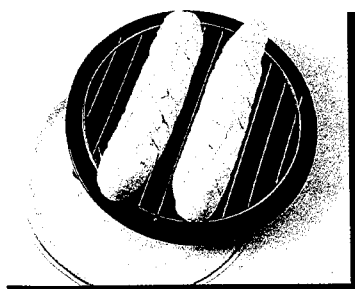

Non-metallic dishes or items of food can be placed directly onto the Low Rack on the Metal Tray on the Glass Turntable. Small items should be placed in a heatproof dish on the Low Rack.

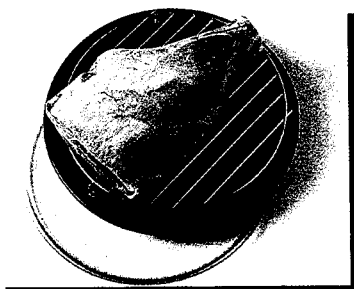

Joints and portions of meat should be placed on the Low Rack with Splash Guard on the Metal Tray on the Glass Turntable.

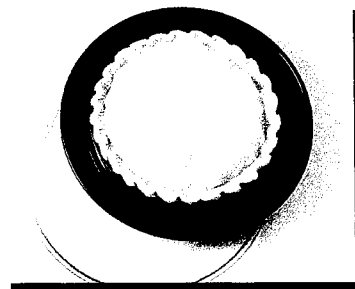

Recipes using foil or metal containers e.g. cakes and pastries should be placed directly onto the Metal Tray on Glass Turntable.

Combination Cooking

Your oven has three methods of cooking by Combination.

1. Convection and Microwave
2. Grill and Microwave
3. TURBO-BAKE and Microwave

COMBINATION cooking is ideal for many foods. The microwave power cooks them quickly, whilst the oven, grill or both gives the traditional browning and crispness.

All this happens simultaneously resulting in most foods being cooked in $\frac{1}{2}$ - $\frac{2}{3}$ of the conventional cooking time.


There is no need to preheat on COMBINATION programs, **EXCEPT when cooking pastry** and using a COMBINATION program of Grill and Microwave.

It is possible to use smooth sealed metal tins and foil containers on COMBINATION but they must be placed directly onto the metal tray on the glass turntable. They must not be placed directly onto the Low Rack, or arcing will occur.


If you experience arcing, which is when you see blue sparks or hear crackling noises, the metal container is unsuitable or you have insufficient food in the oven. You should stop the program immediately and change the

container or re-program to CONVECTION only.

To cook successfully by COMBINATION you should always use a minimum of 200 g (7oz) food. Small quantities should be cooked by Convection, Grill or TURBO-BAKE.

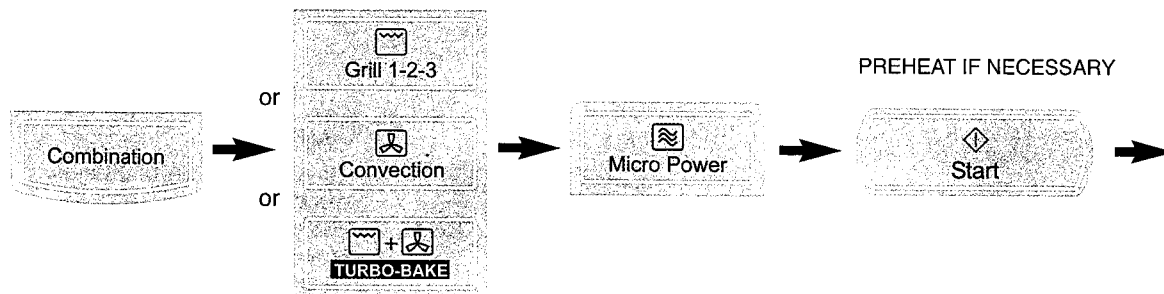

- Press Combination pad.
- Select first cooking mode.
- Select microwave power. Options available depend on first cooking mode selected.
- Press if preheating.*

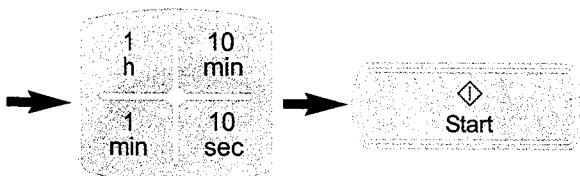

- Set cooking time. 10 sec. pad is inoperable.
- Press Start pad.

CAUTIONS:

The oven will automatically work on HIGH microwave power if a cooking time is entered without the power level previously being selected.

Take care to use oven gloves when removing dishes from the oven - especially when turning or stirring foods as the oven walls and roof will be very hot.

* NOTE:

When placing food in the oven after preheating, just open the door using the Door Release Pad, because if STOP/CANCEL Pad is pressed the program may be cancelled. Then, if the time was entered, the oven would revert to cooking on microwave only.

CONTAINERS TO USE

DO NOT use plastic MICROWAVE containers on Combination Programs (unless suitable for combination cooking). Dishes must be able to withstand the heat of the top grill - heatproof glass e.g. Pyrex® or ceramic are ideal. But do not put dishes on Grill Accessory directly under the grill, use the Low Rack.

OVEN ACCESSORIES


When using any Combination cooking program the Glass Turntable should be in position and must have the Metal Tray placed on top.

TURBO-BAKE Cooking

OVEN ACCESSORIES TO USE

When using TURBO-BAKE the Glass Turntable should be in position and must have the Metal Tray placed on top.

Food can be placed on the Low Rack or Grill Accessory - see individual recipe for guidelines. When cooking meat or fatty foods, the Splash Guard should be placed inside the Metal Tray, but underneath the Low Rack (see below).

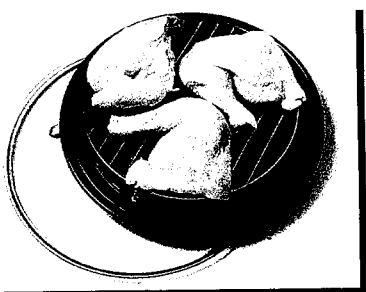

The Splash Guard reduces splattering of hot fat from the otherwise open Metal Tray.



Individual small items can be placed on the Grill Accessory, then the Splash Guard and Metal Tray on the Glass Turntable.

GUIDELINES

Always place food in a preheated oven.

Food is cooked UNCOVERED.

DO NOT USE PLASTIC CONTAINERS.

Using TURBO-BAKE can reduce traditional oven cooking times (see table below).

FOOD	WEIGHT	TRADITIONAL OVEN	TURBO-BAKE
Cheese and Tomato Thin and Crispy Pizza	350 g	10-12 mins. 200°C	5-6 mins. 250°C + Grill 1
Southern Fried Chicken portions	800 g	30-35 mins. 200°C	20 mins. 250°C + Grill 1
Chicken Samosas	200 g	14 mins. 200°C	10 mins. 220°C + Grill 2
Chargrilled Vegetable Ciabatta	355 g	14 mins. 200 °C	10 mins. 250°C + Grill 2

TURBO-BAKE Cooking

The oven can be programmed to cook or reheat food by the grill and the convection oven working simultaneously, to give foods that extra crispness and colour. This is known as TURBO-BAKE and can often reduce traditional oven cooking times.


ALWAYS PREHEAT BEFORE USE.

The Metal Tray must be on the Glass Turntable when preheating.



- Press to select oven temperature. The oven starts at 150°C, and then for each press the temperature will count up in 10°C stages to 250°C, then to 100°C, 110°C etc.
- Press to select Grill power, if you wish to adjust from Grill 2 (Medium) to select Grill 3 (Low), or Grill 1 (High).
- Press Start to preheat. "P" will appear in the display window. When the oven is preheated the oven will beep and the "P" will flash. Then open the door and place the food inside.*

***NOTE:** Open the door using the door release pad, because if the STOP/CANCEL pad is pressed the program may be cancelled. Then if the time was entered the oven would revert to cooking on Microwave only.

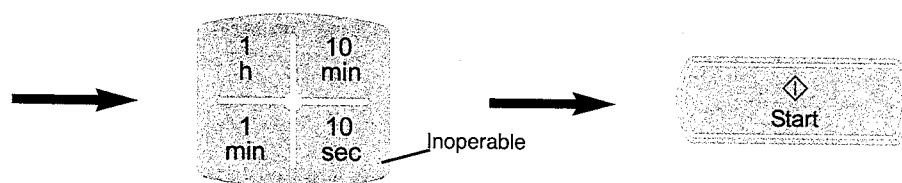

- Press Time Pads to enter cooking time. Maximum time is 4 hours. The 10 sec. pad is inoperable.
- Press Start.

CAUTIONS:

The oven will automatically work on HIGH Microwave Power if a cooking time is entered without the oven temperature and Grill setting previously being selected.

THE ACCESSORIES AND THE SURROUNDING OVEN WILL GET VERY HOT. USE OVEN GLOVES.


Convection Cooking

OVEN ACCESSORIES TO USE


When using the convection oven the Glass Turntable should be in position and must have the Metal Tray placed on top.

The food is then placed on the Low Rack or directly onto the Metal Tray. When cooking meat or other fatty foods ensure that the Splash Guard is also in position. Follow your individual recipe guidelines.

Roasting Meat: Glass Turntable, Metal Tray, Splash Guard and Low Rack.

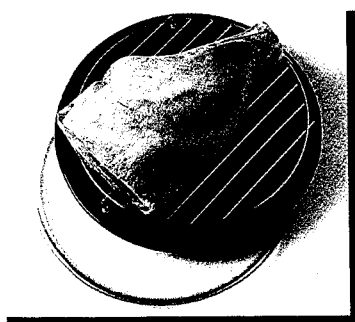

Baking: Glass Turntable, Metal Tray, Low Rack.

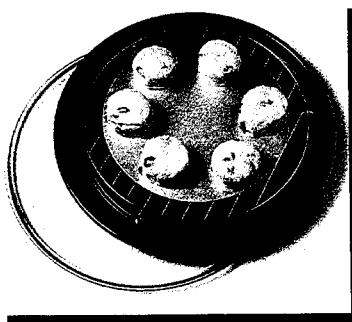

When using the oven as a CONVECTION oven, there is NO MICROWAVE POWER, i.e.. the oven is operating as a conventional oven and you can use all your standard metal baking tins and ovenware.

If a very large dish is used that will not turn on the Turntable then the Roller Ring and Turntable should be removed, the Low Rack should be placed directly onto the base of the oven floor and the food must be carefully placed on the low rack and turned manually during cooking.

It is not recommended to cook on more than one level when using the CONVECTION oven. When cooking 2 trays of buns etc, cook in two batches.

Guideline to Oven Temperatures

TEMP °C	USE	TEMP °F	GAS MARK	TEMP °C	USE	TEMP °F	GAS MARK
40°C	Proving Bread	90°F	1/8	180°C	Souffle, Victoria Sandwich	350°F	4
100°C	Pavlova	200°F	1/4	190°C	Lemon Meringue Pie, Mince Pies, Treacle Tarts, Stuffed Chicken, Roulades	375°F	5
110°C	Meringues	225°F	1/4				
120°C	Slow drying Herbs	250°F	1/2	200°C	Choux Pastry, Scones, Bread,	400°F	6
130°C	Large Rich Fruit Cakes	275°F	1	210°C	Sausage Rolls, Vol-au-Vents,	425°F	7
140°C	To start Rich Fruit Cakes	300°F	2	220°C	Roast Potatoes, Yorkshires		
150°C	(then reduce)			230°C	Biscuits	450°F	8-9
160°C	Gingerbread, Biscuits	325°F	3	240°C		475°F	
170°C	Shortbread, Small Tarts			250°C			

For best results always place food in a preheated oven.

Don't forget that for ease of programming of the most commonly used temperatures, your oven will start at 150°C and count up in 10°C stages to 250°C, then back to 40°C, 100°C and 110°C etc.


Food is generally cooked UNCOVERED - unless it is a casserole or you wish to use roasting bags for joints.

Convection Cooking

Your Dimension 4 Combination Oven can be used as a conventional oven using the CONVECTION mode which incorporates a heating element with a fan.

For best results always place food in a preheated oven.

The Metal Tray must be on the Glass Turntable when preheating.

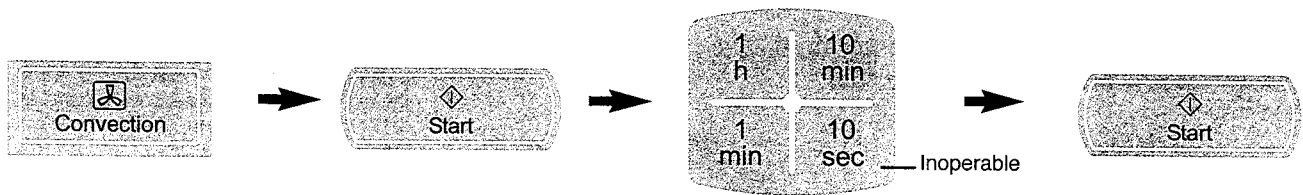

- Press to select oven temperature. The oven starts at 150 °C and then for each press the temperature will count up in 10 °C stages to 250 °C, then to 40 °C, 100 °C, 110 °C etc.
- Press Start to preheat. A "P" will appear in the display window. When the oven is preheated the oven will beep and the "P" will flash. Then open the door and place the food inside.*
- Press Time Pads to enter cooking time. Maximum cooking time is 4 hours. The 10 sec pad is inoperable.
- Press Start Pad.

* **Note:** Open the door using the Door Release Pad, because if the Stop/Cancel Pad is pressed the program may be cancelled. Then if the time was entered the oven would revert to cooking on microwave only.

The oven will maintain the selected temperature for approximately 30 minutes. If no food has been placed inside the oven or a cooking time set, then it will automatically cancel the cooking program and revert to time of day.

CAUTIONS:

The oven will automatically work on HIGH Microwave Power if a cooking time is entered without the oven temperature previously being selected.

THE ACCESSORIES AND THE SURROUNDING OVEN WILL GET VERY HOT. USE OVEN GLOVES.

Grilling

OVEN ACCESSORIES TO USE

When grilling foods the Glass Turntable should be in position, with the Metal Tray, then the Splash Guard and the Grill Accessory on top.

Place food on Grill Accessory on Splash Guard in the Metal Tray on the Turntable.



The Grill Accessory will allow fat to drip through into the Metal Tray while the Splash Guard sitting in the Metal Tray will prevent excess splatter and smoke when grilling steaks, chops and other fatty foods.

Most foods require turning halfway during cooking. When turning food, open oven door and CAREFULLY remove the Metal Tray, Splash Guard and Grill Accessory by holding the accessories firmly. Use oven gloves when removing

accessories as they will be very hot, and so will the roof and walls of the oven.

After turning, return food to the oven, close door and press START. The oven will continue to count down the remaining cooking time. It is quite safe to open the oven door at any time to check the progress of the food as it is grilling.

GUIDELINES


1. There is no microwave power on the GRILL only program.
2. Use the accessories provided, as explained above.
3. The Grill will only operate with the oven door closed.
4. Most meat items e.g. bacon, sausages, chops can be cooked on the hottest setting - GRILL 1.
5. GRILL 2 and GRILL 3 are used for more delicate foods or those that require a longer grill time e.g. fish or chicken portions.
6. ALWAYS PREHEAT THE GRILL WITH THE METAL TRAY ON GLASS TURNTABLE.
7. NEVER COVER THE FOOD WHEN GRILLING.
8. ALWAYS USE OVEN GLOVES WHEN REMOVING THE FOOD AND ACCESSORIES AFTER GRILLING AS THE OVEN AND ACCESSORIES WILL BE VERY HOT.
9. After Grilling it is important that the Grill accessories are removed for cleaning before reuse and that the oven walls and floor are wiped with a cloth squeezed in hot soapy water to remove any grease. DO NOT PUT ACCESSORIES IN DISH WASHER.

Grilling

The radiant Grill system on the oven gives efficient cooking for a wide variety of foods e.g. chops, sausages, steak, toast, oven chips etc.

ALWAYS PREHEAT THE GRILL BEFORE USE.

The metal tray must be on the glass turntable when preheating.

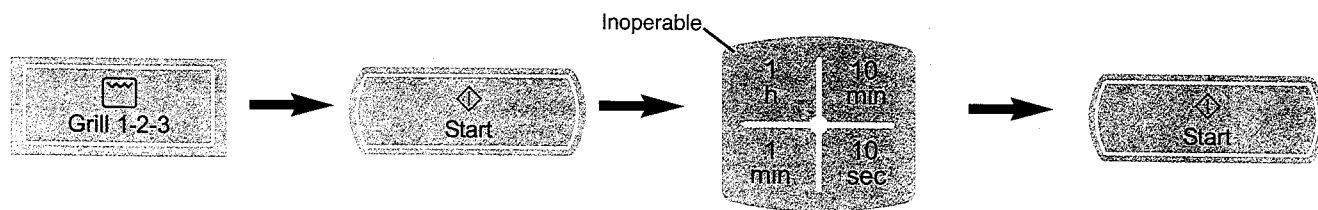

- **Select Grill power.**
Press once for Grill 1 (High), twice for Grill 2 (Medium) or three times for Grill 3 (Low).
- **Press Start to preheat.**
“P” will appear in the display window. When the grill is preheated the oven will beep and the “P” will flash. Then open the door and place the food inside.
- **Press Time pads** to enter cooking time. Maximum time is 99 mins., 90 secs. 1 h pad is inoperable.
- **Press Start.**
The cooking program will start and the time in the display will count down.

NOTE: The Grill will only operate with the oven door closed, and there is no microwave power on the GRILL only program.

GRILLING TIMES

When using the grill to cook foods, once the grill is preheated the cooking times will be similar to traditional grilling. Most foods will require turning halfway through the cooking time (see section on oven accessories page 22).

The Grill has three variable settings, Grill 1 (High), Grill 2 (Medium) and Grill 3 (Low). Grill 1 will be the hottest.

CAUTIONS:



The oven will automatically work on HIGH microwave power if a cooking time is entered without the Grill level previously being selected.

THE GRILL ACCESSORY AND SURROUNDING OVEN WILL GET VERY HOT. USE OVEN GLOVES.

Using the the Delay/Stand Feature



The Delay/Stand Pad is used as a timing pad either before, during or after a cooking program. When the Delay/Stand Pad is selected with a time, there is no microwave power in the oven during this time.

1. To Set a Standing Time:

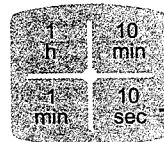

- Set the desired Cooking Program, by selecting power level and time required.
- Then Press the Stand Pad.
- Set desired standing time (max 9hrs 99mins) (10 sec. pad is inoperable). An "H" will appear in the display to denote hours.
- Press Start Pad. Cooking program will commence after which the standing time will count down.

2. To Set a Delay Start:

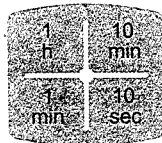

- Press the Delay Pad
- Set Delay time (max 9hrs 99mins) (10 sec. pad is inoperable). An "H" will appear in the display to denote hours.
- Set the complete cooking program, by entering power level and time required.
- Press Start Pad. Delayed time will count down then the cooking program will start.

NB

1. If the oven door is opened during the stand or delay time, the time in the display window will continue to count down.
2. Delay Start cannot be used before an Auto Program.

Defrosting Foods Using Defrost Power & Time

The times given below are a guideline only. Always check the progress of the food by opening the oven door and then re-starting. For larger quantities adjust times accordingly. Food should not be covered during defrosting.

Meat	Defrosting Time	Method	Standing Time
Beef/Lamb/ Pork Joint	14-16 mins 450g (1lb)	Place in a suitable dish or on an upturned saucer or use a rack. Turn 3-4 times. Shield	60 mins.
Minced Beef	12 mins 450g (1lb)	Place in a suitable dish. Break up and turn 3-4 times.	15 mins.
Chops	10 mins 450g (1lb)	Place in a suitable dish in a single layer. Turn twice. Shield if necessary.	15 mins.
Sausages	12 mins. 450g (1lb)	Place in a suitable dish in a single layer. Turn twice. Shield if necessary.	15 mins.
Bacon	6-7 mins 450g (1lb)	Place in a suitable dish in a single layer. Turn twice. Shield if necessary.	10 mins.
Stewing Steak	12 mins. 450g (1lb)	Place in a suitable dish. Break up frequently.	15 mins.
Chicken	13 mins. 450g (1lb)	Place in a suitable dish on an upturned saucer or use a rack. Turn 3-4 times. Shield.	60 mins.
Chicken Portions	10-12 mins. 450g (1lb)	Place in a suitable dish in a single layer. Turn twice. Shield if necessary.	30 mins.
Fish			
Whole	9-10 mins. 450g (1lb)	Place in a suitable dish. Turn twice. Shield.	15 mins.
Fillet/Steak	7-8 mins. 450g (1lb)	Place in a suitable dish. Turn twice, separate if necessary.	15 mins.
Prawns	6-7 mins. 450g (1lb)	Place in a suitable dish. Stir twice during defrosting.	10 mins.
General			
Bread Sliced	5 mins. 400g (14oz)	Place on the turntable. Separate and rearrange during defrosting.	10 mins.
Slice of bread	30sec. 30g (1oz)	Place on the turntable on a piece of kitchen paper.	1-2 mins.
Pastry	5½ mins. 450g (1lb)	Place on a plate. Turn over half way.	10-15 mins.
Soft Fruit	6-7 mins. 450g (1lb)	Place in a suitable dish. Stir twice during defrosting.	10 mins.

Defrosting Guidelines


By selecting the DEFROST power level from the microwave power pad, and setting a time, you can defrost food in your microwave. The biggest problem is getting the inside defrosted before the outside starts to cook.

For this reason a defrost program alternates between a defrost power and a standing time. The name for this type of defrost is cyclic and during the


standing stages there is not any microwave power in the oven, although the light will remain on and the turntable will turn. The automatic stand times ensure a more even defrost but it is still necessary to allow for standing time before use. Place foods in a suitable container. Meat joints and chickens should be placed on an upturned saucer or on a plastic rack if you have one.




Separate chops and small items e.g. bread slices where possible.

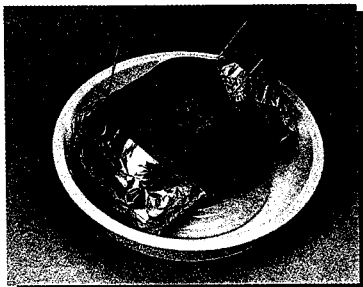

Chickens and joints of meat will require shielding during defrosting.

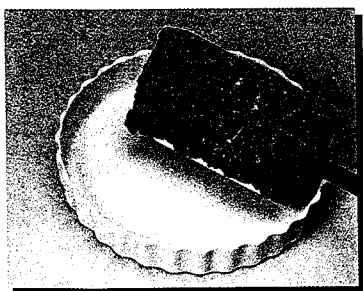

Turn dense foods and meat 2/3 times during defrosting.

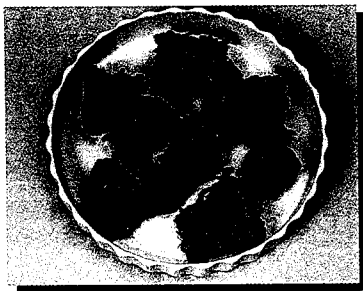

Break up small items e.g. minced meat, frequently during defrosting.

TIPS

- 1 *Check foods during defrosting. Foods vary in their defrosting speed.*
- 2 *It is not necessary to cover the food.*
- 3 *Always turn or stir the food especially when the oven "beeps". Shield if necessary (see point 5).*
- 4 *Minced meat/chops/chicken portions should be broken up or separated as soon as possible and placed in a single layer.*
- 5 *Shielding prevents food cooking. It is essential when defrosting chickens and joints of meat. The outside thaws out first, so protect wings/breast/fat with smooth pieces of aluminium foil secured with cocktail sticks.*
- 6 *Allow standing time so that the centre of the food thaws out. (minimum 1 hour for joints of meat and whole chickens)*

Auto Weight Defrost Programs

This feature allows you to defrost minced meat, chops, chicken portions, meat joints and bread.

The CHAOS defrost pad should be pressed to select the correct category and then enter in the weight of the food in grams or pounds and ounces using the appropriate pads (See page 16).

Foods should be placed in a suitable dish, whole chickens and joints of meat should be on an upturned saucer or on a rack. Chops, chicken portions and slices of bread should be placed in a single layer. It is not necessary to cover the foods.

The **CHAOS Theory** principle is used in Auto Weight defrost programs to give you a quick and more even defrost.


The CHAOS system uses a random sequence of pulsing microwave energy which speeds up the defrosting process.

During the program the oven will beep to remind you to check the food.

IT IS ESSENTIAL THAT YOU TURN AND STIR THE FOOD FREQUENTLY AND SHIELD IF NECESSARY (See page 18).

On hearing the first beep you should TURN and SHIELD (if possible). On the second beep you should turn the food or break it up.

1st Beep

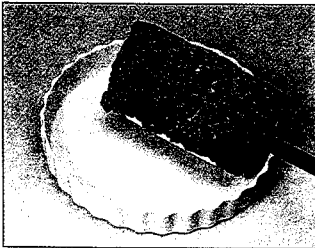

Turn

1st Beep



Shield

or


2nd Beep



Turn or break up

CATEGORY 1 BREAD

The Bread Program is suitable for defrosting small items e.g. rolls, buns and slices of bread which are required for immediate use. Small items may feel warm immediately after defrosting. Loaves can also be defrosted on this program but these will require standing time to allow the centre to thaw out. Standing time can be shortened if slices are separated and buns and loaves cut in half. Items should be turned halfway during defrosting. THIS PROGRAM IS NOT SUITABLE FOR CREAM CAKES OR DESSERTS e.g. cheesecake.

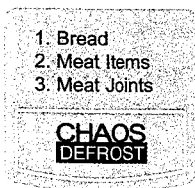

CATEGORY 2 MEAT ITEMS (MINCE/CHOPS/CHICKEN PORTIONS)


It is necessary for mince to be broken up frequently during defrosting and this is best carried out in a large shallow dish. Chops and chicken portions should be arranged in a single layer and turned frequently.

CATEGORY 3 MEAT JOINTS/WHOLE CHICKENS

Meat joints and chickens will require shielding during defrosting especially if they are particularly fatty pieces. This is to prevent over defrosting on the outside edges. Smooth foil secured with cocktail sticks should be used. DO NOT ALLOW THE FOIL TO TOUCH THE WALLS OF THE OVEN. Back fat of joints, legs, wings and breast bones need shielding (see photograph above). Standing time of at least 1 hour should be allowed (rolled joints may require longer) before cooking to ensure the centre is fully defrosted.

Microwave Cooking and Defrosting

ACCESSORY TO USE:

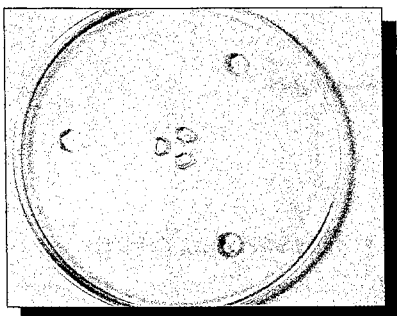

When using your oven on MICROWAVE only, the glass turntable provided must always be in position. DO NOT attempt to use microwave only with any metal accessory in the oven.

DO NOT place food directly onto the turntable except in the case of Jacket Potatoes cooked by MICROWAVE only.

Foods reheated or cooked by MICROWAVE only are normally covered with a lid or cling film, unless otherwise stated.

Two Stage Cooking:



e.g. High power 10 minutes followed by Simmer power 20 minutes; Select High power and program 10 minutes then select second power (Simmer) with second cooking time (20 minutes) then press Start.

Three Stage Cooking:

e.g. High power 5 minutes, Delay 5 minutes, High power 2 minutes; Select first Power level and cooking time, then press DELAY and time, then select final power level and final cooking time. Then press Start.

Auto Weight Defrost


With this feature you can defrost frozen foods according to the weight. Select the category and set the weight of the food. The weight can be programmed in pounds and ounces or grams. The weight starts from the minimum weight for each category.

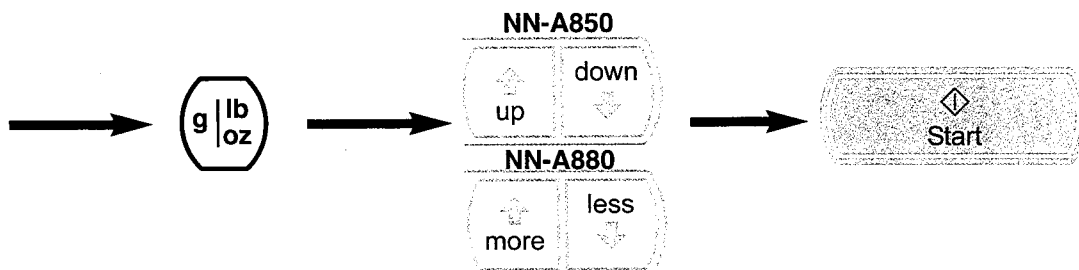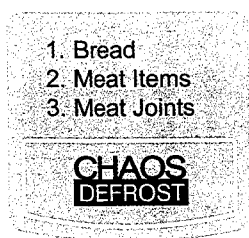

- Select the desired program by pressing pad once, twice or three times.
- Press to select g or lb and oz.
- Enter the weight by pressing the Up & Down or More & Less pads. The "up" (more) pad will start with the minimum weight for each food.
- Press Start.

Program	Weight Range	Suitable Foods
1 Bread	100 - 800g (4oz - 1lb 12oz)	Bread and rolls. Turn at beep.
2 Meat Items	200 - 1200g (7oz - 2lb 10oz)	Small pieces of meat, minced meat, chicken portions, steaks, chops. Turn at beeps.
3 Meat Joints	400 - 2500g (14oz - 5lb 8oz)	Whole chicken, meat joints. Turn at beeps and shield.

Setting the Clock

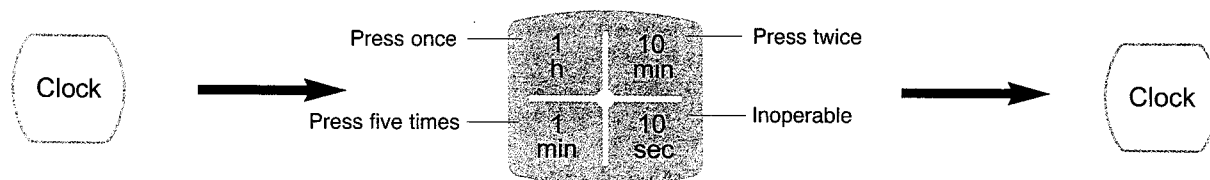

• Press Clock Pad

"SET TIME" will appear in the display window, and the colon starts to blink.

• Press Time Pads

Enter time of day by pressing Time Pads e.g. 1.25pm (12hr clock).

• Press Clock Pad

Colon stops blinking. Time of day is now locked into the display.

N.B.

1. To reset time of day, repeat step 1 through to step 3.
2. The clock will keep the time of day as long as the oven is plugged in and electricity is supplied.
3. This is a 12 hour clock.

Microwave Cooking and Defrosting


There are 6 different microwave power levels available.

Selecting Microwave Power Level



- Press this pad until the power you require appears in the display window.

Press	Power Level	Wattage
once	High	1000 W
twice	Defrost	270 W
3 times	Medium	600 W
4 times	Low	440 W
5 times	Simmer	250 W
6 times	Warm	100 W

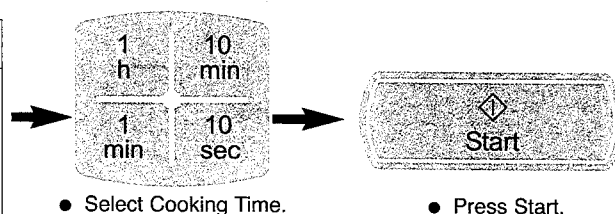

CAUTION: The oven will automatically work on HIGH microwave power if a cooking time is entered without the power level previously being selected.

N.B.

1. Maximum time that can be set on HIGH power is 30 min.
2. Maximum time on Defrost is 2 hours. The 10 sec pad is inoperable.
3. The hour pad is inoperable except for Defrost.

Let's Start to Use your Oven

1 Plug in

NN-A850

Plug into a 13 amp fused electrical socket. You will be reminded to read your operating instructions.

2 Press Clock Pad

Set clock as a 12hr clock. Set time using time pads. Press clock pad again. (See page 15 for details).

3 Press Convection Pad

(This procedure is to burn off the oil used for rust protection in the oven.) Keep pressing this pad until 250C is in the display window. Remove all accessories from the oven.

4 Press Time Pad

Press 1 min pad until 5 minutes is displayed in the window.

5 Press Start Pad

The time will be displayed in the window and count down. The oven will beep at the end of the program. The oven is now ready to use. Caution: Grill elements and oven will be hot.


6 Demonstration Mode

This is to enable you to experiment setting various programs. (The letter D will always appear in the display window. This is to confirm that there is no microwave power produced and it is safe to use the oven without any food). To select this mode press the clock pad three times. "Demo mode press any key" will appear. To cancel press the clock pad a further three times.

7 Child Lock

To operate the child lock facility press the Start pad three times, this will deactivate the microwave. "Lock" will appear in the display and none of the controls will operate. To clear child lock facility press Stop/Cancel three times.


NN-A880

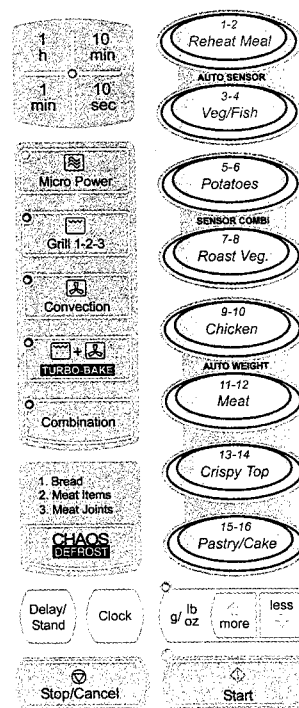

NN-A880

Control Panels


NN-A850*

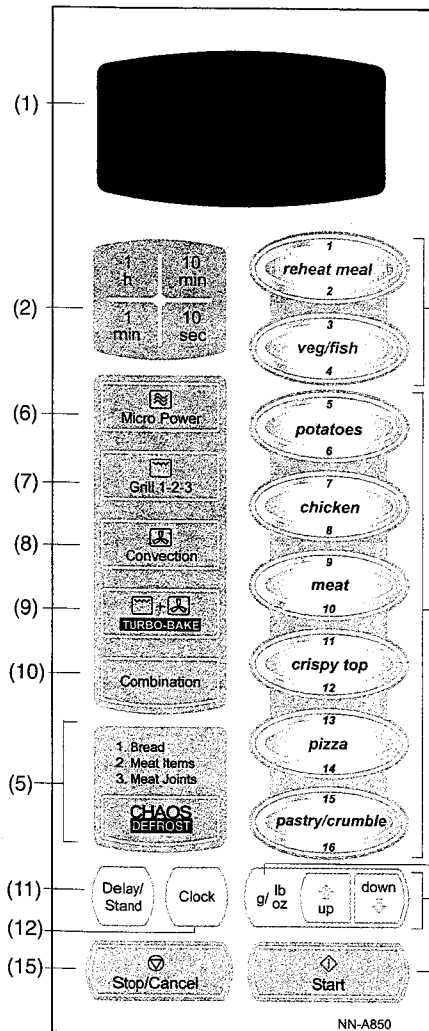

* The design of your control panel may vary from the panel displayed (depending on colour), but the words on the pads will be the same.

- (1) Display Window
- (2) Time Pads
- (3a) Auto Weight Microwave Programs
- (3b) Auto Sensor Microwave Programs
- (4a) Auto Weight Combination Programs
- (4b) Auto Sensor Combination Programs
- (5) Auto Weight Defrost Programs
- (6) Microwave Power Setting
- (7) Grill Setting
- (8) Convection Pad
- (9) TURBO-BAKE Pad
- (10) Combination Pad
- (11) Delay/Stand Pad:
This can be used to delay a cooking program for up to 9 hrs 99 mins., or used to time or for standing (non-cooking) time.
- (12) Clock Pad:
Refer to page 15 for setting the clock.
- (13) lb/oz Conversion Pad
- (14a) Weight Selection Pads
- (14b) More/Less Pads
- (15) Stop/Cancel Pad:
Before Cooking:
one press clears your instructions.
During Cooking:
one press temporarily stops the cooking program. Another press cancels all your instructions and the time of day will appear in the display.
- (16) Start Pad:
Press to start operating the oven. If during cooking the door is opened or Stop/Cancel Pad is pressed once, Start Pad has to be pressed again to continue cooking.

NN-A880

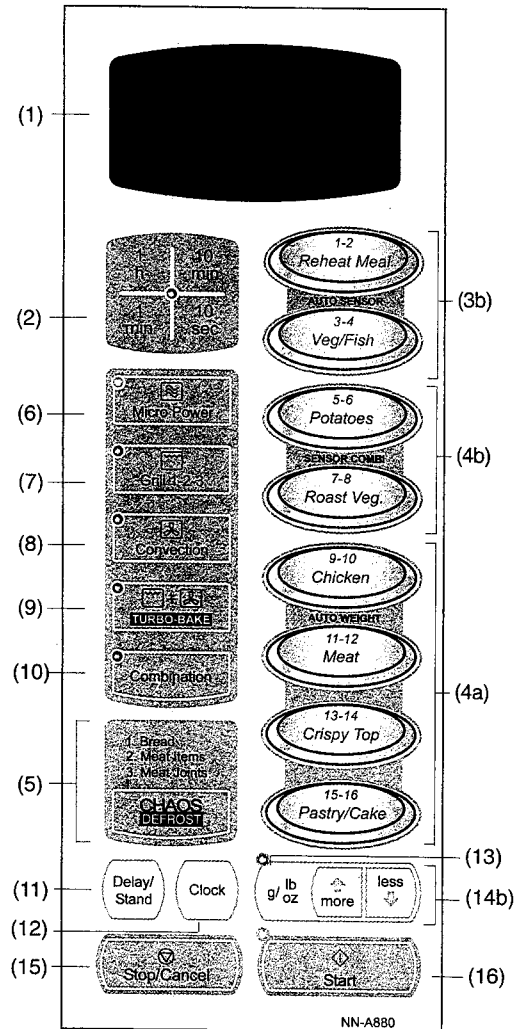


Beep Sound:


A beep sounds when a pad is pressed. If this beep does not sound, the setting is incorrect. When the oven changes from one function to another, two beeps sound. After completion of cooking, five beeps sound.

PLASTIC

Many plastic containers are designed for microwave use, but do not use for cooking foods high in sugar or fat or for foods that require long cooking times e.g. brown rice.

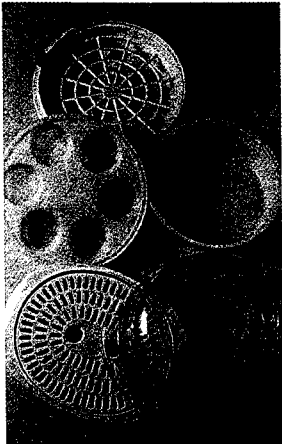


Only use Tupperware® containers if they are designed for microwave use. Do not use Melamine. Never cook in margarine cartons or yoghurt pots, as these will melt with the heat from the food. If heatproof they can be used for Convection or Combination cooking. **DO NOT USE UNDER THE GRILL.**

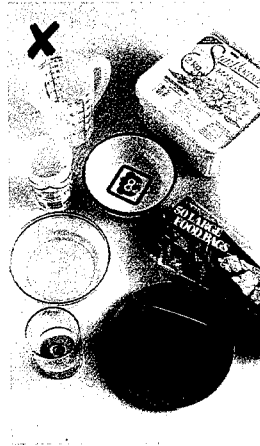

PAPER

Plain white absorbent kitchen paper (kitchen towel) can only be used for microwave cooking e.g. covering blind pastry cases and for covering bacon to prevent splattering. **ONLY USE FOR SHORT COOKING TIMES. NEVER RE-USE A PIECE OF KITCHEN TOWEL. ALWAYS USE A FRESH PIECE OF PAPER FOR EACH DISH.**

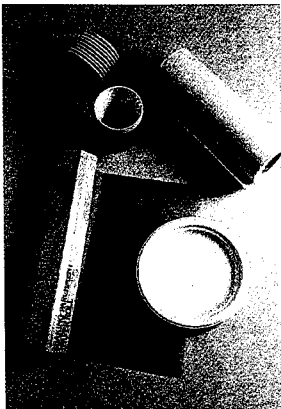

Avoid kitchen paper containing manmade fibres. If you are using branded re-cycled kitchen towel, check first that it is recommended for microwave use. Do not use waxed or plastic coated cups or plates as the finish may melt. Greaseproof paper can be used to line the base of dishes and to cover fatty foods e.g. bacon rashers, to stop splattering. White paper plates can be used for **SHORT REHEATING TIMES**, on Microwave only.



WICKER. WOOD. STRAW BASKETS

Dishes will crack and could ignite. Do not use wooden dishes in your microwave. **DO NOT USE ON ANY COOKING MODE.**

CLING FILM

Microwave cling film can only be used for covering food that is reheated by microwave. It is also useful for covering food to be cooked, but care should be taken to avoid the film being in direct contact with the food. **DO NOT USE ON ANY OTHER COOKING MODE.**



ROASTING BAGS

Roasting bags are useful when slit up one side to tent a joint, for roasting by power and time. Do not use the metal twists supplied, when using Microwave or Combination.



ALUMINIUM FOIL

Small amounts of smooth aluminium foil can be used to **SHIELD** joints of meat during defrosting and cooking by Microwave, as the microwaves cannot pass through the foil, this prevents the parts shielded from overcooking or over-defrosting. Take care that the foil does not touch the sides or roof of the oven, as this may cause arcing and damage your oven. Aluminium foil can be used for Convection cooking.

Containers to use

Choosing the correct container is a very important factor in deciding the success or failure of your cooking.

Testing Dishes for Suitability - For Microwave Cooking Only.



When unsure that a cooking container is suitable for use in your microwave, check by the following test:


1. Fill a microwave safe measuring jug with 300ml ($\frac{1}{2}$ pt) cold water.
2. Place it on the turntable alongside the dish to be tested. If the dish you are testing is a large dish, then stand the measuring jug on top of the empty dish.
3. Heat on HIGH power for 1 minute.

Result

If the dish is suitable for microwaving, it will remain cool, whilst the water in the jug will begin to feel warm. If the testing dish feels warm, do not use as it is obviously absorbing microwave energy.

N.B. This test does not apply to plastic or metal based containers e.g. Le Creuset® style dishes, which should not be used as they are cast iron covered with enamel.

QUICK CHECK GUIDE TO COOKING UTENSILS


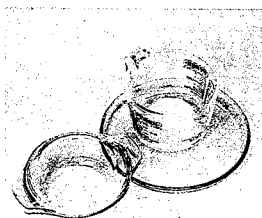


OVEN GLASS

Everyday glass that is heat resistant e.g. Pyrex®, is ideal for Microwave, Convection or Combination cooking. **DO NOT USE FOR GRILLING.** Do not use delicate glass or lead crystal which may crack or arc.

POTTERY, EARTHENWARE, STONEWARE

If completely glazed, these dishes are suitable. Do not use if partially glazed or unglazed, since they are able to absorb water which in turn absorbs microwave energy, making the container very hot and slows down the cooking of food.

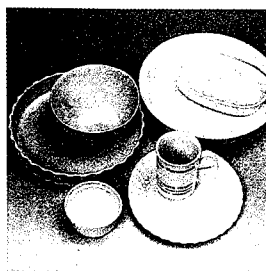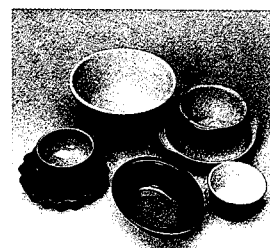


CHINA AND CERAMIC


Everyday glazed china, porcelain or ceramic plates, bowls, mugs and cups can be used if they are heat resistant. Fine bone china should only be used for reheating for short periods. Do not use dishes with a metal rim or pattern. Do not use jugs or mugs with glued handles, since the glue can melt.

If dishes are heat resistant they may be used on Convection and Combination but not directly under the Grill.

FOIL/METAL CONTAINERS


NEVER ATTEMPT TO COOK IN FOIL OR METAL containers on Microwave only as the microwaves cannot pass through and the food will not heat evenly, it may also damage your oven. Small items in shallow foil containers can be **REHEATED** in the microwave, as long as containers do not touch the oven walls or door. Foil and metal containers can be used on Grill and Convection modes and may be used with care during certain Combination cooking, as long as they are not damaged or dented.

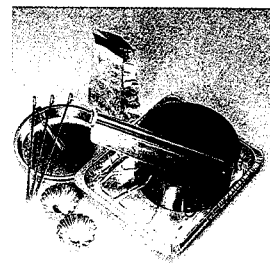

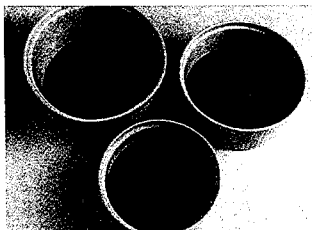


DISH SIZE

Follow the dish sizes given in the recipes, as these affect the cooking and reheating times. A quantity of food spread in a bigger dish cooks and reheats more quickly.

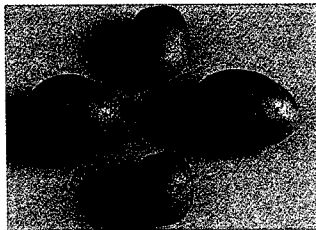


QUANTITY

Small quantities cook faster than large quantities, also small meals will reheat more quickly than large portions.

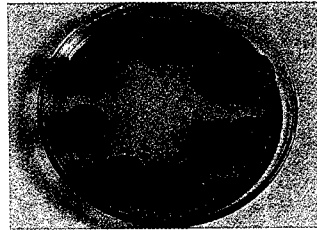


SPACING

Foods cook more quickly and evenly if spaced apart. **NEVER** pile foods on top of each other.

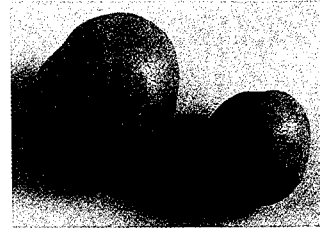


SHAPE

Even shapes cook evenly. Food cooks better by microwave when in a round container rather than square.

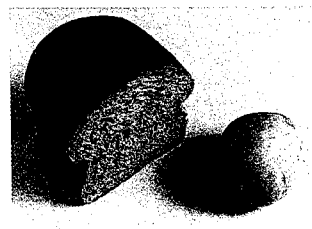


DENSITY

Porous airy foods heat more quickly than dense heavy foods.

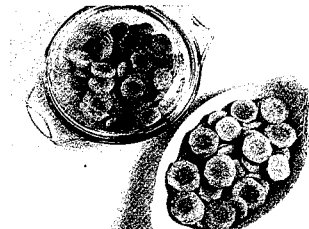


COVERING

Cover foods with microwave cling film or a self-fitting lid. Cover fish, vegetables, casseroles, soups. Do not cover cakes, sauces, jacket potatoes, pastry items.

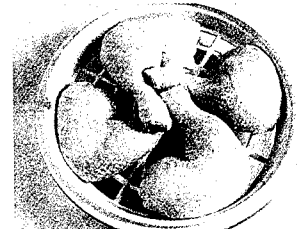

ARRANGING

Individual foods e.g. chicken portions or chops, should be placed on a dish so that the thicker parts are to the outside.

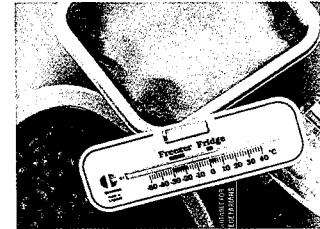

STARTING TEMPERATURE

The colder the food, the longer it takes to heat up. Food from a fridge takes longer to reheat than food at room temperature.



TURNING AND STIRRING

Some foods require stirring during cooking. Meat and poultry should be turned after half the cooking time.




LIQUIDS

All liquids must be stirred **before** and **during** heating. Water especially must be stirred before and during heating, to avoid eruption. Do not heat liquids that have previously been boiled. **DO NOT OVERHEAT.**



CHECKING FOOD

It is essential that food is checked during and after a recommended cooking time, even if an **AUTO PROGRAM** has been used (just as you would check food cooked in a conventional oven). Return the food to the oven for further cooking if necessary.

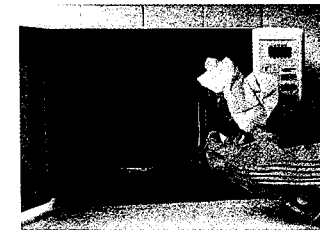

CLEANING

As microwaves work on food particles, keep your oven clean at all times. Stubborn spots of food can be removed by using a branded oven cleaner, sprayed onto a soft cloth, always wipe the oven dry after cleaning. Avoid any plastic parts, the roof of the oven and door area.

General Guidelines

STANDING TIME




Dense foods e.g. meat, jacket potatoes and cakes, require a **STANDING TIME** (inside or outside of the oven) after cooking, to allow heat to finish conducting to cook the centre completely.

- **MEAT JOINTS** – Stand 15 mins. wrapped in aluminium foil.
- **JACKET POTATOES** – Stand 5 mins. wrapped in aluminium foil.
- **LIGHT CAKES** – Stand 5 mins. before removing from dish.
- **RICH DENSE CAKES** – Stand 15-20 mins.
- **FISH** – Stand 2-5 mins.
- **EGG DISHES** – Stand 2-3 mins.
- **PRECOOKED CONVENIENCE FOODS** – Stand for 5 mins.
- **PLATED MEALS** – Stand for 2-5 mins.
- **VEGETABLES** – Boiled potatoes benefit from standing 1-2 mins., however most other types of vegetables can be served immediately.
- **DEFROSTING** – It is essential to allow standing time to complete the process. This can vary from 5 mins. e.g. raspberries, to up to 1 hour for a joint of meat.

If food is not cooked after **STANDING TIME**, return to oven and cook for additional time.


PIERCING

The skin or membrane on some foods will cause steam to build up during cooking. These foods must be pierced or a strip of skin should be peeled off before cooking to allow the steam to escape. Eggs, potatoes, apples, sausages etc., will all need to be pierced before cooking. **DO NOT ATTEMPT TO BOIL EGGS IN THEIR SHELLS.**

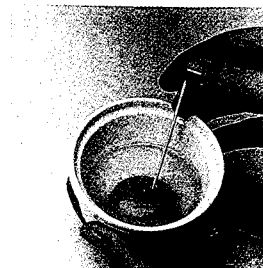

MOISTURE CONTENT

Many fresh foods e.g. vegetables and fruit, vary in their moisture content throughout the season. Jacket potatoes are a particular example of this. For this reason cooking times may have to be adjusted throughout the year. Dry ingredients e.g. rice, pasta, can dry out further during storage and cooking times may differ from ingredients freshly purchased.

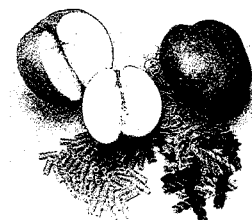

CLING FILM

Cling film helps keep the food moist and the trapped steam assists in speeding up cooking times. However it should be pierced before cooking, to allow excess steam to escape. Always take care when removing cling film from a dish as the build-up of steam will be very hot. Always purchase cling film that states on the packet "suitable for microwave cooking" and use as a covering only. Do not line dishes with cling film. Do not cover foods when cooking by Combination, Convection or Grill.



Cooking and Reheating Guidelines

Most foods reheat very quickly in your oven by HIGH power. Meals can be brought back to serving temperature in just minutes and will taste freshly cooked and NOT leftover. Always check food is piping hot and return to oven if necessary.

As a general rule, always cover wet foods, e.g. soups, casseroles and plated meals.

Do not cover dry foods e.g. bread rolls, mince pies, sausage rolls etc.

The charts on pages 42-54 show you the best way to cook or reheat your favourite foods. The best method depends on the type of food.

Remember when cooking or reheating any food that it should be stirred or turned wherever possible. This ensures even cooking or reheating on the outside and in the centre.

When is food reheated?

Food that has been reheated or cooked should be served "piping hot" i.e. steam should be visibly emitted from all parts. As long as good hygiene practices have been followed during the preparation and storage of the food, then cooking or reheating presents no safety risks.

Foods that cannot be stirred should be cut with a knife to test that they are adequately heated throughout. Even if a manufacturer's instructions or the times in the cookbook have been followed, it is still important to check the food is heated thoroughly. If in doubt, always return to the oven for further reheating.

If you cannot find the equivalent food in the chart then choose a similar type and size listed and adjust the cooking time if necessary.

PLATED MEALS

Everyone's appetite varies and reheat times depend on meal contents. Dense items e.g. mashed potato, should be spread out well. If a lot of gravy is added, extra time may be required. Place denser items to the outside of the plate. Between 3-5 mins. on HIGH power will reheat an average portion. If stacking two meals, heat on HIGH power for 6-7 mins. and change the meals over halfway.

CANNED FOODS

Remove foods from can and place in a suitable dish before heating.

SOUPS

Use a bowl and stir before heating and at least once through reheat time and again at the end.

CASSEROLES

Stir halfway through and again at the end of heating.

MINCE PIES - CAUTION

REMEMBER even if the pastry is cold to the touch, the filling will be piping hot and will warm the pastry through. Take care not to overheat otherwise burning can occur due to the high fat and sugar content of the filling. Check the temperature of the filling before consuming to avoid burning your mouth.

CHRISTMAS PUDDINGS AND LIQUIDS - CAUTION

Take great care when reheating these items. See Page 6.

Do not leave unattended.

Do not add extra alcohol.

BABIES' BOTTLES - CAUTION

Milk or formula **MUST** be shaken thoroughly before heating and again at the end and tested carefully before feeding a baby.

For 7-8 fl.oz. of milk from fridge temperature, remove top and teat. Heat on HIGH power for 25-30 secs.

CHECK CAREFULLY.

For 3 fl.oz. of milk from fridge temperature, remove top and teat. Heat on HIGH power for 10-15 secs.

CHECK CAREFULLY.


N.B. Liquid at top of bottle will be much hotter than at bottom and bottle must be shaken thoroughly.

Reheating Charts

The times given in the charts below are a guideline only, and will vary depending on **STARTING** temperature, dish size etc.

HEATING CATEGORY

Your oven is Heating Category E and this is displayed on the front of your oven door. The information on this label will assist you in using new instructions on food packs to enable you to program the best heating time in your oven.

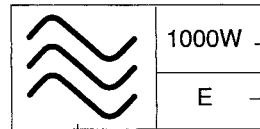

Microwave symbol

The IEC (705) power output (watts)

The heating category for small packs of food

Food	Weight/ Quantity	Power Level	Time to Select (approx)	Instructions/Guidelines
BABIES BOTTLES – CAUTION				
For 7-8 fl.oz of milk from fridge temperature, remove top and teat. Heat on HIGH Power for 25-30 secs. CHECK CAREFULLY				
For 3 fl.oz of milk from fridge temperature, remove top and teat. Heat on HIGH Power for 10-15 secs. CHECK CAREFULLY				
N.B. Liquid at the top of the bottle will be much hotter than at the bottom of the bottle and must be shaken thoroughly before checking the temperature. Milk or formula must always be tested carefully before feeding a baby.				
BREAD – Pre-cooked – Fresh – N.B. Breads reheated by Microwave will have a soft base.				
Croissants	1	HIGH power	15-20 secs.	Place on micro-safe plate on turntable. Do not cover.
		or GRILL 1	2-3 mins.	Place on heatproof plate on turntable. Do not cover.
	4	HIGH power	30-40 secs.	Place on micro-safe plate on turntable. Do not cover.
		or GRILL 1	3-5 mins.	Place on heatproof plate on turntable. Do not cover.
Rolls	1	HIGH power	15-20 secs.	Place on micro-safe plate on turntable. Do not cover.
		or GRILL 1	3-4 mins.	Place on heatproof plate on turntable. Do not cover.
	4	HIGH power	30-40 secs.	Place on micro-safe plate on turntable. Do not cover.
		or GRILL 1	4-6 mins.	Place on heatproof plate on turntable. Do not cover.
CANNED BEANS, PASTA				
Baked Beans	225 g	HIGH	2 mins.	Place in a heatproof bowl on turntable. Cover.
	415 g	HIGH	4 mins.	
Baked Beans & Sausages/Burgers	450 g	HIGH	5 mins.	Place in a heatproof bowl on turntable. Cover.
Ravioli in sauce	215 g	HIGH	2 mins. 30 secs.	Place in a heatproof bowl on turntable. Cover
	400 g	HIGH	4 mins.	
Space Invaders	425 g	HIGH	3 mins. 30 secs.	Place in a heatproof bowl on turntable. Cover.
Macaroni Cheese	210 g	HIGH	2 mins.	Place in a heatproof bowl on turntable. Cover.
	430 g	HIGH	4 mins.	
Spaghetti in Tomato Sauce	213 g	HIGH	2 mins.	Place in a heatproof bowl on turntable. Cover.

POINTS FOR CHECKING

Always check that food is piping hot after reheating in the microwave. If unsure return to oven. Foods will still require a **STAND TIME**, especially if they cannot be stirred. The denser the food the longer the stand time.

Reheating Charts

Food	Weight/ Quantity	Power Level	Time to Select (approx)	Instructions/Guidelines
CANNED MEAT				
Chilli Con Carne	410 g	HIGH	3 mins. 30 secs.	Place in a heatproof bowl on turntable. Cover.
Hot Dogs (drained)	415 g	HIGH	3 mins.	Place in a heatproof bowl on turntable. Cover.
Meat Balls	418 g	HIGH	4 mins. 30 secs.	Place in a heatproof bowl on turntable. Cover.
Minced Beef & Onion	392 g	HIGH	4 mins.	Place in a heatproof bowl on turntable. Cover.
Stewed Steak	405 g	HIGH	4 mins.	Place in a heatproof bowl on turntable. Cover.
CANNED SOUPS				
Cream of Mushroom	425 g	HIGH	4 mins.	Place in a heatproof bowl on turntable. Cover.
Minestrone	300 g	HIGH	2 mins. 30 secs.	Place in a heatproof bowl on turntable. Cover.
CANNED PUDDINGS				
Creamed Rice	425 g	HIGH	2 mins.	Place in a heatproof bowl on turntable. Cover.
	624 g	HIGH	3 mins.	
Custard	425 g	HIGH	2 mins.	Place in a heatproof bowl on turntable. Cover.
Sponge Pudding	300 g	HIGH	2 mins.	Place in a heatproof bowl on turntable. Cover.
CANNED VEGETABLES – Drain where appropriate				
Carrots, whole	410 g	HIGH	3 mins.	Place in a heatproof bowl on turntable. Cover.
Green Beans	410 g	HIGH	2 mins. 30 secs.	Place in a heatproof bowl on turntable. Cover.
Peas, Mushy	440 g	HIGH	2 mins.	Place in a heatproof bowl on turntable. Cover.
Peas, Garden	550 g	HIGH	2 mins. 30 secs.	Place in a heatproof bowl on turntable. Cover.
Peas, Marrowfat	300 g	HIGH	2 mins.	Place in a heatproof bowl on turntable. Cover.
Potatoes new	820 g	HIGH	5 mins.	Place in a heatproof bowl on turntable. Cover.
Sweetcorn	198 g	HIGH	1 mins. 30 secs.	Place in a heatproof bowl on turntable. Cover.
	340 g	HIGH	2 mins.	
Tomatoes, whole	400 g	HIGH	3 mins.	Place in a heatproof bowl on turntable. Cover.
Vegetable Chilli	410 g	HIGH	4 mins.	Place in a heatproof bowl on turntable. Cover.
Chick pea dhal	425 g	HIGH	3 mins.	Place in a heatproof bowl on turntable. Cover.
CHRISTMAS PUDDINGS – Do not leave unattended as overheating can cause the food to ignite				
Slice	150 g	HIGH	30 secs.	Place in a heatproof dish on turntable. Cover.
Small	450 g	HIGH	2 mins.	Place in a heatproof dish on turntable. Cover.
Medium	900 g	HIGH	3 mins.	Place in a heatproof dish on turntable. Cover.
Large	1.1 kg	HIGH	3 mins. 30 secs.	Place in a heatproof dish on turntable. Cover.

POINTS FOR CHECKING

Always check that food is piping hot after reheating in the microwave. If unsure return to oven. Foods will still require a STAND TIME, especially if they cannot be stirred. The denser the food the longer the stand time.

Reheating Charts

Food	Weight/ Quantity	Power Level	Time to Select (approx)	Instructions/Guidelines
DRINKS – COFFEE				
1 mug	235 ml	HIGH	2 mins.	Place in a heatproof mug on turntable. Stir, before, during and after reheating.
2 mugs	470 ml	HIGH	3 mins. 30 secs.	
3 mugs	705 ml	HIGH	4 mins. 30 secs.	
4 mugs	940 ml	HIGH	6 mins.	
DRINKS – MILK				
1 mug	235 ml	MED	2 mins.	Place in a heatproof mug or jug on turntable. Stir, before, during and after reheating.
1 jug	600 ml	MED	4 mins. 30 secs.	
HOMEMADE MEAT DISHES				
Casserole for 2	500 g	HIGH	6 mins.	Place in a heatproof dish on turntable. Cover.
Casserole for 4	1 kg	HIGH	10-15 mins.	Place in a heatproof dish on turntable. Cover.
Mince for 1	250 g	HIGH	3 mins.	Place in a heatproof dish on turntable. Cover.
Mince for 4	1 kg	HIGH	8 mins.	Place in a heatproof dish on turntable. Cover.
Bolognese Sauce	250 g	HIGH	3 mins.	Place in a heatproof dish on turntable. Cover.
	1 kg	HIGH	8 mins.	
PASTRY PRODUCTS – PRECOOKED – N.B. Pastries reheated by microwave will have a soft base. If pie comes in foil container place directly onto metal tray.				
Cornish Pastie	175 g (1)	HIGH power or	1-2 mins.	Place in micro-safe dish on turntable. Do not cover.
		Combi: 200°C + WARM power	8 mins.	Place on low rack on metal tray on turntable. Do not cover.
	350 g (2)	HIGH power or	3-4 mins.	Place in micro-safe dish on turntable. Do not cover.
		Combi: 200°C + WARM power	10 mins.	Place on low rack on metal tray on turntable. Do not cover.
Meat Pies	258 g (2)	Combi: 220°C + GRILL 1 + SIMMER power	5-6 min.	Place on metal tray on turntable.
Steak and Kidney Shortcrust Pie	170 g (1)	TURBO-BAKE 220°C + GRILL 2	15 mins.	Place on metal tray on turntable.
Quiche	400 g (1)	HIGH power or	3-4 mins.	Place in micro-safe dish on turntable. Do not cover.
		Combi: 220°C + SIM power	12 mins.	Place on low rack on metal tray on turntable. Do not cover.
Sausage Roll	265 g (2)	Combi: 230°C + WARM power	8-9 mins.	Place on low rack on metal tray on turntable. Do not cover
Xmas Mince Pies	90 g (2)	HIGH power	10-20 secs.	Place in micro-safe dish on turntable. Do not cover.

POINTS FOR CHECKING

Always check that food is piping hot after reheating in the microwave. If unsure return to oven. Foods will still require a STAND TIME, especially if they cannot be stirred. The denser the food the longer the stand time.

Reheating Charts

Food	Weight/ Quantity	Power Level	Time to Select (approx)	Instructions/Guidelines
PLATED MEALS – HOMEMADE – CHILLED				
Child size	1	HIGH	3 mins.	Place on a heatproof plate on turntable. Cover.
	2	HIGH	5 mins.	
Adult size	1	HIGH	4-5 mins.	Place on a heatproof plate on turntable. Cover.
	2	HIGH	5-6 mins.	
PORRIDGE				
1 portion		HIGH	1 min.	Use a large bowl on turntable. Stir during cooking.
4 portions		HIGH	5 mins.	Use a large bowl on turntable. Stir during cooking.
PUDDINGS AND DESSERTS – Transfer puddings to a heatproof dish				
Apple Pie	465 g	HIGH or	4 mins.	Place on turntable. Do not cover.
		Combi: 230°C + WARM power	9-10 mins.	Place on metal tray on turntable. Do not cover.
Apple and Blackcurrant Pies	x 6	TURBO-BAKE 220°C + GRILL 1	3 mins.	Place in foil cases on low rack on metal tray on turntable. Do not cover.
Baked Apple – 1	175 g	HIGH	30 secs.-1 min.	Place in a heatproof bowl on turntable. Cover.
Bread and Butter Pudding	340 g	HIGH or	2-3 mins.	Place on turntable. Do not cover.
		Combi: 230°C + WARM power	10-12 mins.	Place on metal tray on turntable. Do not cover.
Custard	300 ml	HIGH	1 min 30 secs.	Place in large jug. Stir during reheating.
Fruit Crumble	450 g	HIGH or	1 min. 20 secs.	Place on turntable. Do not cover.
		Combi: 230°C + WARM power	8 mins.	Place on metal tray on turntable. Do not cover.
Jam Roly Poly	730 g	HIGH	5 mins.	Place on turntable. Do not cover.
Milk Pudding for 1		HIGH	50 secs.	Place in a heatproof bowl on turntable. Cover.
Milk Pudding for 4		HIGH	3 mins. 40 secs.	Place in a heatproof bowl on turntable. Cover.
PURCHASED CONVENIENCE FOODS – CHILLED N.B. Transfer food from foil container to a similar sized heat-proof dish (except when using TURBO-BAKE).				
Breaded Mushrooms	310 g	GRILL 1 or	10-12 mins.	Place on grill accessory on metal tray on turntable.
		TURBO-BAKE 220°C + GRILL 1	10 mins.	Place in dish on low rack on metal tray on turntable.
Cauliflower Cheese	220 g	HIGH power or	4 mins.	Place on turntable. Do not cover.
		Combi: 220°C + SIM power	10-12 mins.	Place on metal tray on turntable. Do not cover.
	454 g	HIGH power or	7 mins.	Place on turntable.
		Combi: 220°C + SIM power	12-14 mins.	Place on metal tray on turntable. Do not cover.
Cottage Pie	190 g	HIGH power or	3-4 mins.	Place on turntable.
		Combi: 220°C + SIM power	12-14 mins.	Place on metal tray on turntable. Do not cover.
	595 g	HIGH power or	6-8 mins.	Place on turntable.
		Combi: 220°C + SIM power	15-17 mins.	Place on metal tray on turntable. Do not cover.

Reheating Charts

Food	Weight/ Quantity	Power Level	Time to Select (approx)	Instructions/Guidelines
PURCHASED CONVENIENCE FOODS – CHILLED N.B. Transfer food from foil container to a similar sized heat-proof dish, except when using TURBO-BAKE .				
Lasagne	300 g	MEDIUM power or	6-7 mins.	Place on turntable.
		Combi: 200°C + LOW power	11-12 mins.	Place on metal tray on turntable. Do not cover.
Onion Bhajis, Pakora & Felfel	330 g (6)	TURBO-BAKE 220°C + GRILL 1	10 mins.	Place on low rack on metal tray on turntable. Turn halfway.
Spring Rolls	230 g	TURBO-BAKE 220°C + GRILL 2	10 mins.	Place on low rack on metal tray on turntable. Turn halfway.
Turkey Burgers	425 g	TURBO-BAKE 250°C + GRILL 2	10 mins.	Place on grill accessory on metal tray on turntable. Turn halfway.
Vegetable Bake	454 g	HIGH power or	6-8 mins.	Place on turntable.
		Combi: 200°C + SIM power	12-14 mins.	Place on metal tray on turntable. Do not cover.
Samosas	200 g	TURBO-BAKE 220°C + GRILL 2	10 mins.	Place on low rack on metal tray on turntable. Turn halfway.
PURCHASED CONVENIENCE FOODS – FROZEN – N.B. Transfer food from foil container to a similar sized heat-proof dish (except when using TURBO-BAKE). Plastic dishes designed for microwave and conventional ovens may be used with care.				
Golden Drummers	340 g (6)	TURBO-BAKE 250°C + GRILL 1	10-12 mins.	Place on grill accessory on metal tray on turntable. Turn halfway.
Lasagne	330 g	DEFROST power then HIGH power or	8 mins. 8-9 mins.	Place on turntable.
		Combi: 220°C + SIM power	20-22 mins.	Place on metal tray on turntable.
Breaded Onion Rings	250 g	TURBO-BAKE 250°C + GRILL 1	7 mins.	Place on grill accessory on metal tray on turntable. Turn halfway.
Fish Pie	397 g	HIGH power or	7-8 mins.	Place on turntable.
		Combi: 220°C + SIM power	18 mins.	Place on metal tray on turntable.
Shepherd's Pie	460 g	DEFROST power then HIGH power or	10 mins. 6-8 mins.	Place on turntable.
		Combi: 220°C + SIM power	18-20 mins.	Place on metal tray on turntable.
VEGETABLES				
Mashed Potato	350 g	MEDIUM	6-7 min.	Place in a heatproof dish. Cover.
Green Vegetables	100 g	HIGH	1 min. 30 secs.	Place in a heatproof dish. Cover.
Potato Wedges	385 g	TURBO-BAKE 220°C + GRILL 1	10 mins.	Place in dish on low rack on metal tray on turntable. Turn halfway.

Cooking Charts

Food	Weight/ Quantity	Choice of Cooking Modes	Time (mins.)	Instructions/Guidelines
BREAD – Frozen				
Part-baked rolls	200 g (4)	Combi: 230°C + SIM power	10	Place on metal tray on turntable.
Part-baked Garlic Baguette	170 g (1)	Combi: 230°C + SIM power	7	Place on metal tray on turntable.
BACON – from raw				
Rashers	200 g (8)	HIGH power	4-6 or 45 secs. per rasher	Place on micro-safe rack or plate on turntable and cover with kitchen towel to minimise splatter.
		or GRILL 1	10-12	Place on grill accessory metal tray and splash guard on turntable. Turn halfway.
Steaks	255 g (4)	HIGH power	4-5	Place on micro-safe rack or plate on turntable.
		or GRILL 1	12	Place on grill accessory metal tray and splash guard on turntable. Turn halfway.
BEANS & PULSES – should be pre-soaked (except lentils)				
Black Eyed Beans	225 g	HIGH power	10	Use 600 ml (1pt) boiling water in a large bowl Cover.
		then SIMMER	25-30	
Chick Peas	225 g	HIGH power	10	Use 600 ml (1pt) boiling water in a large bowl Cover.
		then SIMMER	40	
Lentils	225 g	MEDIUM power	10-15	Use 600 ml (1pt) boiling water in a large bowl Cover.
Marrowfat Peas	225 g	HIGH power	3	Use 600 ml (1pt) boiling water in a large bowl Cover.
		then SIMMER	15-20	
Red Kidney Beans	225 g	HIGH power	15	Use 600 ml (1pt) boiling water in a large bowl Cover.
		then SIMMER	40	Must boil for at least 12 mins to destroy toxic enzymes
BEEF – Joints from raw – Caution: Hot fat! Remove dish with care. For Guidelines see Meat Chapter page 64.				
Topside, Forerib, Sirloin		Combi: 180°C + SIM power	12-15 per 450 g	Place on low rack on metal tray and splash guard on turntable. Turn halfway.
Mince		HIGH then MEDIUM POWER	10 then 15 per 450 g	Place in micro safe dish with stock and seasonings on turntable. Stir halfway. Cover.
Rump/Sirloin	275 g (2)	MEDIUM power or	6-8	Place on micro-safe rack or plate on turntable. Cover.
		GRILL 1	10-12	Place on grill accessory, metal tray and splash guard on turntable. Turn halfway.
Stewing Steak	450 g- 675 g	HIGH then SIMMER POWER or	10 then 60	Place in micro-safe dish on turntable. Stir halfway. Cover.
		Combi: 160°C + WRM power	1hr- 1hr 40	Place in casserole dish with lid on metal tray on turntable. Stir halfway
BEEFBURGERS – Fresh from raw – Caution: Hot fat! Remove grill accessory with care.				
	295 g (2)	HIGH power	3-4	Place on micro-safe rack or plate on turntable. Cover.
		or GRILL 1	10-12	Place on grill accessory, metal tray and splash guard on turntable. Turn halfway.

POINTS FOR CHECKING

Always check that food is piping hot after reheating in the microwave. If unsure return to oven. Foods will still require a STAND TIME, especially if they cannot be stirred. The denser the food the longer the stand time.

Cooking Charts

Food	Weight/ Quantity	Choice of Cooking Modes	Time (mins.)	Instructions/Guidelines
BEEFBURGERS – Frozen from raw – Caution: Hot fat! Remove grill accessory with care.				
	227 g (4)	HIGH power	6-8	Place on micro-safe rack or plate on turntable. Cover.
		or GRILL 1	12-14	Place on grill accessory, metal tray and splash guard on turntable. Turn halfway.
CHICKEN from raw – CAUTION: Hot Fat! Remove accessory with care. For Guidelines see Meat Chapter page 64.				
Breasts, boneless	850 g (4)	MEDIUM power or	12-14	Place on micro-safe rack or plate on turntable. Cover.
		GRILL 1 or	25	Place on grill accessory, metal tray and splash guard on turntable. Turn halfway.
		TURBO-BAKE 250°C + GRILL 1	20	Low rack, metal tray and splash guard on turntable. Turn halfway.
Drumsticks	900 g (8)	MEDIUM power or	12-14	Place on micro-safe rack or plate on turntable. Cover.
		GRILL 1 or	25	Place on grill accessory, metal tray and splash guard on turntable. Turn halfway.
		TURBO-BAKE 250°C + GRILL 1	20	Place on low rack on metal tray and splash guard on turntable.
Kiev (fresh)	283 g (2)	TURBO-BAKE 250°C + GRILL 1	15-17	Place on low rack on metal tray and splash guard on turntable.
	600 g (4)		18-20	
Nuggets (frozen)	400 g	Combi: TURBO-BAKE 250°C + GRILL 2 + WARM power or	15-18	Place on grill accessory, on metal tray and splash guard on turntable.
		GRILL 1	15-20	Place on grill accessory, metal tray and splash guard on turntable. Turn halfway.
Nuggets (fresh)	400 g	Combi: TURBO-BAKE 220°C + GRILL 1 + WARM power	10	Place on grill accessory, on metal tray and splash guard on turntable.
Chicken legs	1.2 kg (4)	MEDIUM power or	18	Place on micro-safe rack or plate on turntable. Cover.
		GRILL 1 or	30-35	Place on grill accessory, on metal tray and splash guard on turntable.
		TURBO-BAKE 250°C + GRILL 1	25	Place on low rack on metal tray and splash guard on turntable.
Whole		MEDIUM power or	8-9 per 450g	Place in micro-safe dish on turntable. Cover.
		Combi: 190°C + SIM power	12-15 per 450g	Place on low rack on metal tray and splash guard on turntable. Turn halfway. DO NOT COVER.
EGGS – Poached.				
Water	45 ml	HIGH power	40 secs.	- Place water in a small bowl and heat for 1st cooking time. - Add egg (size 3). - Pierce yolk and white. - Cover. - Cook for 2nd cooking time. - Then leave to stand for 1 min.
Egg	1	MEDIUM power	40 secs.	
Water	90 ml	HIGH power	1	
Eggs	2	MEDIUM power	1 min. 10 secs.	
Water	135 ml	HIGH power	1 min. 30 secs.	
Eggs	3	MEDIUM power	1min. 30 secs.	
Water	180 ml	HIGH power	2	
Eggs	4	MEDIUM power	1min. 50 secs.	

Cooking Charts

Food	Weight/ Quantity	Choice of Cooking Modes	Time (mins.)	Instructions/Guidelines
EGGS – Scrambled.				
1 Egg		HIGH power	30 secs	• Add 1 tbsp of milk for each egg used. • Beat eggs, milk and knob of butter together. • Cook for 1st cooking time then stir. • Cook for 2nd cooking time then stand for 1 min.
		HIGH power	20 secs	
2 Eggs		HIGH power	50 secs	
		HIGH power	30 secs	
3 Eggs		HIGH power	1min. 20 secs	
		HIGH power	30 secs	
FISH – FRESH from raw – For Guidelines see Fish Chapter page 59.				
Breaded Fillets	300 g (2)	GRILL 1 or	10-12	Place on grill accessory on metal tray and splash guard on turntable. Turn halfway.
		Combi: TURBO-BAKE 230°C + GRILL 1 + WARM power	10-12	
Cakes	200 g (2)	GRILL 1 or	8-10	Place on grill accessory on metal tray and splash guard on turntable. Turn halfway.
		Combi: TURBO-BAKE 230°C + GRILL 1 + WARM power	10	
Filletlets	450 g (3)	HIGH power	3-4	Place in micro-safe dish. Add 30 ml of liquid. Cover.
		or GRILL 1	12-14	Place on grill accessory on metal tray and splash guard on turntable. Turn halfway.
Breaded fillets, filled	300 g	Combi: TURBO-BAKE 230°C + GRILL 1 + WARM power	10-12	Place on grill accessory on metal tray and splash guard on turntable. Turn halfway.
Steaks	350 g (2)	HIGH power	3-4	Place in micro-safe dish. Add 30 ml of liquid. Cover.
		or GRILL 2	10-12	Place on grill accessory on metal tray and splash guard on turntable. Turn halfway.
Whole	280 g (1)	HIGH power	4-5	Place in micro-safe dish. Add 30 ml of liquid. Cover.
		or GRILL 2	12-14	Place on grill accessory on metal tray and splash guard on turntable. Turn halfway.
FISH – FROZEN from raw – For Guidelines see Fish Chapter page 59.				
Breaded Fillets	300 g (2)	GRILL 1 or	16-18	Place on grill accessory on metal tray and splash guard on turntable. Turn halfway.
		Combi: GRILL 2 + SIM power	10-12	
		Combi: TURBO-BAKE 230°C + GRILL 3 + SIM power	10-12	
Cakes	400 g (4)	GRILL 1 or	8-10	Place on grill accessory on metal tray and splash guard on turntable. Turn halfway.
		Combi: TURBO-BAKE 250°C +GRILL 2 + WARM power	10	
Fish Fingers	210 g (8)	HIGH power or	4-5	Place on micro-safe dish. Do not cover.
		GRILL 1	12-14	Place on grill accessory on metal tray and splash guard on turntable. Turn halfway.

POINTS FOR CHECKING

Always check that food is piping hot after reheating in the microwave. If unsure return to oven. Foods will still require a STAND TIME, especially if they cannot be stirred. The denser the food the longer the stand time.

Cooking Charts

Food	Weight/ Quantity	Choice of Cooking Modes	Time (mins.)	Instructions/Guidelines
FISH - FROZEN from raw - For Guidelines see Fish Chapter page 59.				
Haddock Fillets	380 g (4)	HIGH power or	7	Place in micro-safe dish. Add 30 ml of liquid. Cover.
		GRILL 1	10-15	Place on grill accessory on metal tray and splash guard on turntable. Turn halfway.
Scampi	255 g	GRILL 1 or	8-10	Place on grill accessory on metal tray and splash guard on turntable. Turn halfway.
		Combi: TURBO-BAKE 230°C + GRILL 2 + SIM power	10	
Whole	450 g (2)	HIGH power	10-12	Place in micro-safe dish. Add 30 ml of liquid. Cover.
Steaks	450 g (2)	HIGH power	8-9	Place in micro-safe dish. Add 30 ml of liquid. Cover.
Boil in the Bag	150 g - 170 g	DEFROST then STAND then MEDIUM	4 then 2 then 6	Place bag sauce side down on a plate. Slash top.
FRUIT – Peel, slice, chop into even sized pieces. Place in shallow heatproof dish on turntable.				
Apples – poached	450 g	HIGH power	6	Add 300 ml (½pt) of water. Only half fill dish. Cover.
Apples – stewed	450 g	HIGH power	5	Only half fill dish. Cover.
Peaches – poached	450 g	HIGH power	4-5	Add 300 ml (½pt) of water. Only half fill dish. Cover.
Pears – poached	450 g	HIGH power	5-6	Add 300 ml (½pt) of water. Only half fill dish. Cover.
Plums – poached	450 g	HIGH power	8	Add 300 ml (½pt) of water. Only half fill dish. Cover.
Plums – stewed	450 g	HIGH power	8-10	Add 30 ml (2 tbsp) of water. Only half fill dish. Cover.
Rhubarb – stewed	450 g	HIGH power	5	Only half fill dish. Cover.
GAME				
Rabbit portions (4)		Combi: 160°C + WRM power	1hr 20 mins.	Place on low rack on metal tray + splashguard on turntable. Do not cover.
Duck, whole		Combi: 190°C + SIM power	10-12 mins. per 450 g	
Pheasant, whole		Combi: 190°C + SIM power	9-10 mins. per 450 g	
Pheasant prtns. (4)		Combi: 190°C + SIM power	1hr 45 mins.	
LAMB – from raw – CAUTION: Hot Fat! Remove accessory with care. For Guidelines see Meat Chapter page 64.				
Chops, cutlets	425 g (4)	MEDIUM power	6-7	Place in micro-safe dish or rack on turntable. Cover.
		or GRILL 1	15-18	Place on grill accessory on metal tray and splash guard on turntable. Turn halfway.
Chops, Loin	600 g (4)	MEDIUM power	7-8	Place in micro-safe dish or rack on turntable. Cover.
		or GRILL 1	15-18	Place on grill accessory on metal tray and splash guard on turntable. Turn halfway.
Joints		Combi: 180°C + SIM power	11-12 mins. per 450 g	Place on low rack on metal tray + splashguard on turntable. Turn halfway.
Stewing lamb ie. neck chops	450 g	HIGH then LOW power or	10 then 40	Place in micro-safe dish on turntable. Stir halfway. Cover
		Combi: 160°C + WRM power	1hr 20 mins.	Place in casserole, add stock and vegetables, cover with lid on metal tray on turntable. Stir halfway.

Cooking Charts

Food	Weight/ Quantity	Choice of Cooking Modes	Time (mins.)	Instructions/Guidelines
LAMB – from raw – CAUTION: Hot Fat! Remove accessory with care. For Guidelines see Meat Chapter page 64.				
Casseroling lamb ie. diced shoulder		HIGH then LOW power or	10 then 60	Place in micro-safe dish on turntable. Stir halfway. Cover.
		Combi: 160°C + WRM power	1 hr. 30 mins.	Place in casserole with lid on metal tray on turntable. Stir halfway.
PASTA				
Twists	225 g	HIGH power	8-10	Use 1 litre (1¾pt) boiling water. Add 15 ml oil. Cover. Stir halfway.
Macaroni	225 g	HIGH power	10-12	
Spaghetti	225 g	HIGH power	8	
Lasagne	225 g	HIGH power	6-8	
Tortellini	225 g	HIGH power	12	
Tagliatelle	225 g	HIGH power	8-9	
Spaghetti (Quick Cook)	225 g	HIGH power	5-7	
PASTRY – UNCOOKED				
Shortcrust Flan Case	23 cm (9")	HIGH power or	3-4	Prick base of pastry and chill well. Lay piece of kitchen towel in base. Place on turntable.
		Combi: TURBO-BAKE 250°C + GRILL 3 + SIM power	7-8	Prick base of pastry and chill well. Do not cover. Place on low rack on metal tray on turntable.
Vol-au-Vents	125 g (12)	TURBO-BAKE 250°C + GRILL 1	6½	Brush with beaten egg. Place on baking sheet on metal tray on low rack on turntable.
PIZZA – FRESH chilled – N.B. Remove all packaging. Pizzas will have a soft base if cooked by microwave only.				
Deep Pan, Ham	475 g	HIGH power	4-6	Place on micro-safe plate on turntable. Do not cover.
		TURBO-BAKE 220°C + GRILL 2	10-12	Place directly on metal tray on turntable. Do not cover.
Thin and Crispy	350 g	Combi: 220°C + WRM power	10-15	Place on low rack on metal tray on turntable.
		TURBO-BAKE 220°C + GRILL 1	8	Do not cover.
PIZZA – FROZEN – N.B. Remove all packaging. Pizzas will have a soft base.				
French Bread	320 g (1)	Combi: TURBO-BAKE 220°C GRILL 3 + SIM power	12–15	Place on low rack on metal tray on turntable. Do not cover.
Pepperoni	420 g	Combi: TURBO-BAKE 220°C GRILL 3 + SIM power	12–15	Place on low rack on metal tray on turntable. Do not cover.

POINTS FOR CHECKING

Always check that food is piping hot after reheating in the microwave. If unsure return to oven. Foods will still require a STAND TIME, especially if they cannot be stirred. The denser the food the longer the stand time.

Cooking Charts

Food	Weight/ Quantity	Choice of Cooking Modes	Time (mins.)	Instructions/Guidelines
PORK – from raw – CAUTION: Hot Fat! Remove accessory with care. For Guidelines see Meat Chapter page 64.				
Chops	425 g	GRILL 1	15-20	Place on grill accessory on metal tray and splash guard on turntable. Turn halfway.
Joints		MEDIUM power or	13-14 per 450 g (1lb)	Place on upturned saucer in heatproof dish on turntable. Turn joint over halfway during cooking. Drain off fat during cooking.
		Combi: 170°C + LOW power	15-16 per 450 g (1lb)	Place on low rack on metal tray and splash guard. Turn halfway.
Gammon covered with water		HIGH then MEDIUM power	15 then 15-20 per 450 g	Place in large casserole with lid and cover with water.
Tenderloin, whole		Combi: 170°C + WRM power	15-20 per 450 g	Place on low rack on metal tray and splash guard on turntable. Turn halfway.
Porridge – N.B: Use a large bowl.				
1 serving	½ cup of oats	MEDIUM power	2-2½	Add 1 cup of water or milk. Stir halfway.
2 servings	1 cup of oats	MEDIUM power	4-5	Add 2 cups of water or milk. Stir halfway.
4 servings	2 cups of oats	MEDIUM power	8-9	Add 4 cups of water or milk. Stir halfway.
POTATO PRODUCTS part cooked – FROZEN				
Croquettes	300 g	GRILL 1 or	13-14	Place on grill accessory on metal tray and splash guard on turntable. Turn halfway.
		TURBO-BAKE 250°C + GRILL 1	8-9	
Hash Browns	300 g (7)	GRILL 1	15-18	Place on grill accessory on metal tray and splash guard on turntable. Turn halfway.
Oven Chips & Associated Products	300 g	GRILL 1 or	15-20	Place on grill accessory on metal tray and splash guard on turntable. Turn halfway.
	450 g	Combi: GRILL 1 + MED power	8-9	
RICE				
Basmati	250 g	MEDIUM power	10-12	Use 600 ml (1pt) boiling water. Cover
Easycook White	250 g	HIGH power	12-13	
Easycook Brown	250 g	HIGH power	15-17	
Long Grain White	250 g	MEDIUM power	14	
Long Grain Brown	250 g	MEDIUM power	20	

POINTS FOR CHECKING

Always check that food is piping hot after reheating in the microwave. If unsure return to oven. Foods will still require a STAND TIME, especially if they cannot be stirred. The denser the food the longer the stand time.

Cooking Charts

Food	Weight/ Quantity	Choice of Cooking Modes	Time (mins.)	Instructions/Guidelines
MILK PUDDING – Use large bowl, cover. Stir halfway.				
Flaked Rice	50 g	SIMMER power	20	Add 600 ml (1pt) milk. 30 ml sugar
Pudding Rice	50 g	HIGH power then SIMMER	5 35	Add 450 ml (¾pt) milk. 30 ml sugar
Tapioca	50 g	SIMMER power	30-35	Add 600 ml (1pt) milk. 30 ml sugar
SAUSAGES from raw – CAUTION: Hot Fat! Remove accessory with care.				
Thick	454 g (8)	GRILL 1 or	12-14	Place on grill accessory on metal tray and splash guard on turntable. Turn halfway.
		TURBO-BAKE 220°C + GRILL 1	10 mins.	
TURKEY				
Turkey, whole		Combi: 190°C + SIM power	12-14 min. per 450 g	Place on low rack on metal tray and splash guard on turntable. Turn halfway.
FRESH VEGETABLES – Place in shallow micro-safe dish.				
Asparagus	450 g	HIGH power	6-8	Add 90 ml (6 tbsp) water. Cover.
Broad Beans	450 g	HIGH power	6	
Runner Beans	450 g	HIGH power	7	
Beetroot	450 g	MEDIUM power	12	
Broccoli	450 g	HIGH power	8	
Brussel Sprouts	450 g	HIGH power	8-9	
Cabbage - sliced	450 g	HIGH power	7-9	
Carrots - sliced	450 g	HIGH power	7-9	
Cauliflower - florets	450 g	HIGH power	9	
Courgettes	450 g	HIGH power	5	
Corn on the Cob	450 g	HIGH power	6-7	
Leeks - sliced	450 g	HIGH power	7-8	
Mushrooms	450 g	HIGH power	5	
Parsnips - sliced	450 g	HIGH power	6-7	
Peas	450 g	HIGH power	4-6	
Potatoes - boiled	450 g	HIGH power	6-7	
Potatoes - par-boiled	450 g	HIGH power	4-5	
Potatoes - jacket (225 g)	1	HIGH power or	5	Wash and prick skins several times. Place directly on glass turntable if cooking by microwave. If cooked by combination place directly on the low rack on metal tray on turntable. Allow to stand for 5 mins. Or use Auto Program Jacket Potato.
		Combi: TURBO-BAKE 250°C + GRILL 1 +SIM power	15	
	2	HIGH power or	8	
		Combi: TURBO-BAKE 250°C + GRILL 1 +SIM power	20	
	4	HIGH power or	13	
		Combi: TURBO-BAKE 250°C + GRILL 1 +SIM power	25	
6	HIGH power or	18-20		
	Combi: TURBO-BAKE 250°C + GRILL 1 +SIM power	30		

Cooking Charts

Food	Weight/ Quantity	Choice of Cooking Modes	Time (mins.)	Instructions/Guidelines
FRESH VEGETABLES – Place in shallow micro-safe dish.				
Spinach	450 g	HIGH power	7	Add 90 ml (6tbsp) water. Cover.
Spring Greens	450 g	HIGH power	7	Add 90 ml (6tbsp) water. Cover.
Swede - cubed	450 g	HIGH power	7-8	Add 90 ml (6tbsp) water. Cover.
FROZEN VEGETABLES – Place in shallow micro-safe dish.				
Beans - broad	450 g	HIGH power	8	Add 30 ml (2tbsp) water. Cover.
Beans - green	450 g	HIGH power	8-9	Add 30 ml (2tbsp) water. Cover.
Broccoli	450 g	HIGH power	9	Add 30 ml (2tbsp) water. Cover.
Brussel Sprouts	450 g	HIGH power	9-10	Add 30 ml (2tbsp) water. Cover.
Cabbage - shredded	450 g	HIGH power	5-6	Add 30 ml (2tbsp) water. Cover.
Carrots - sliced	450 g	HIGH power	8	Add 30 ml (2tbsp) water. Cover.
Cauliflower	450 g	HIGH power	10	Add 30 ml (2tbsp) water. Cover.
Peas	450 g	HIGH power	6-7	Add 30 ml (2tbsp) water. Cover.
Spinach - nuggets	450 g	HIGH power	8-9	Add 30 ml (2tbsp) water. Cover.
Sweetcorn	450 g	HIGH power	7	Add 30 ml (2tbsp) water. Cover.
MISCELLANEOUS				
Frozen Yorkshire puddings	450 g	TURBO-BAKE 250°C + GRILL 1	15	Place foil cases directly onto metal tray.

POINTS FOR CHECKING

Always check that food is piping hot after reheating in the microwave. If unsure return to oven. Foods will still require a STAND TIME, especially if they cannot be stirred. The denser the food the longer the stand time.

Increasing and Decreasing Recipes

INCREASING RECIPES

- **To increase a recipe from 4 to 6 servings**, increase each ingredient listed by half. To double the quantity, simply double every ingredient listed.
- Do not forget that large quantities will require a larger dish. Make sure that it is deep enough to prevent the recipe from boiling over during cooking.
- Cover as directed in the recipe. Stir or rearrange foods as recommended.
- Increase the stand times by 5 mins. per lb.
- Always check the recipe during cooking.
- When increasing the ingredients to 6 servings, add an extra one third of the original cooking time, i.e.. 30 mins. on MEDIUM power

for 4 servings will become 40 mins. on MEDIUM power for 6 servings.

- **When doubling a recipe from 4 to 8** add on half the original cooking time, i.e. 30 mins. on MEDIUM power for 4 servings will become 45 mins. on MEDIUM power for 8 servings.

DECREASING RECIPES

- To decrease a recipe from 4 servings to 2 servings, halve the ingredients listed.
- Choose a dish that is proportionally smaller than the one recommended in the recipe, however make sure it is deep enough to stop food boiling over.
- Allow half to two-thirds of the original cooking time, i.e. 30 mins. on MEDIUM power for 4 servings will become 15-20 mins. on MEDIUM power for 2 servings.

Using Recipes from Other Books

The best way to convert a family favourite dish is to find a similar recipe in a cookery book to give you a guide to the correct method and timings to use.

Many cookbooks refer to 650W ovens, however since 1990 oven output powers have been set by a new standard (IEC). When using

other cookbooks, the 1000 W output power of your oven must be allowed for. Use the same power level suggested e.g. HIGH or MEDIUM and select the same cooking time suggested, however CHECK the progress of the food during cooking and adjust the time if necessary.

Cooking for One

- For one serving quarter ALL ingredients listed.
- Choose a dish that is proportionally smaller than the one recommended in the recipe.
- Use the same cooking power recommended in the original recipe.
- Start by cooking for one quarter of the recommended cooking time, although extra time in most cases will be required.
- Always check the food during cooking.
- There is not a great saving for reduced quantities of soups, casseroles, stews and rice, as a minimum time is required to tenderise meats and blend flavours.
- When cooking for one it often makes sense to cook for two and plate up both meals. Freeze one meal for a later date.

Soups and Starters

Ingredients

25 g (1 oz) butter or margarine
1 large onion, peeled and finely chopped
675 g (1½ lb) carrots, peeled and sliced
4 sticks celery, chopped
1 litre (1¾ pt) hot vegetable stock
1 small orange, grated rind and juice of
salt and pepper
30 ml (2 tbsp) chopped parsley

Ingredients

25 g (1 oz) butter
1 small onion, chopped
600 ml (1 pt) hot chicken stock
225 g (8 oz) button mushrooms, sliced
bouquet garni
15 ml (1tbsp) cornflour
300 ml (½ pt) milk
salt and pepper
60 ml (4 tbsp) single cream

Ingredients

425 g (15 oz) packet ready-rolled puff pastry
150 ml (10 tbsp) ready-made tomato sauce
100 g (4 oz) ham or salami, diced
10 fresh basil leaves, chopped
60 ml (4 tbsp) pitted black olives
100 g (4 oz) grated mozzarella

Carrot & Celery Soup

Serves 4

Dish: 3 litre (6pt) bowl

Oven Accessory: glass turntable

1. Place the butter and onion in bowl. Cover and cook on **HIGH** power for 3 mins. or until softened.
2. Stir in the carrots and celery. Cover and cook on **HIGH** power for 8-10 mins. or until vegetables are softened. Stir halfway during cooking.
3. Pour in the stock. Cover and cook on **HIGH** power for 5 mins. and then **LOW** power for 15 mins. or until the vegetables are tender.
4. Drain the vegetables and coarsely puree with a little of the stock, then return to the bowl with the remaining stock.
5. Add the orange rind and juice, season to taste. Cover and cook on **HIGH** power for 3-4 mins. or until piping hot. Serve garnished with chopped parsley.

Cream of Mushroom Soup

Serves 4

Dish: 3 litre (6pt) bowl

Oven Accessory: glass turntable

1. Place the butter and chopped onion in a large bowl. Cover and cook on **HIGH** power for 3 mins. or until soft.
2. Add the stock, mushrooms and bouquet garni. Cover and cook on **HIGH** power for 15-20 mins. or until mushrooms are soft.
3. Remove the bouquet garni and blend the soup until smooth. Mix the cornflour with a little of the milk, then stir in remaining milk. Add to the mushroom mixture.
4. Cover and cook on **HIGH** power for 5 mins. or until thickened. Season and serve with cream swirled on top.

Pizza Pies

Serves 4

Dish: round pizza tray

Oven Accessory: glass turntable, metal tray and low rack

1. Preheat the oven on **TURBO-BAKE** on **Convection 250°C and Grill 1**.
2. Unroll the pastry and cut out 4 x 10 cm (4") circles.
3. Spread the tomato sauce over the pastry circles, then sprinkle over the ham/salami, basil, black olives and mozzarella.
4. Place two of the pizzas on a pizza tray on the low rack and cook in the preheated oven on **TURBO-BAKE 250°C + Grill 1** for 8 mins, or until the pastry is golden and crisp.
5. Repeat with the remaining tray.

Ingredients

young spinach leaves
 25 g (1 oz) butter
 2 garlic cloves, crushed
 450 g (1 lb) flat black mushrooms,
 finely chopped
 75 g (3 oz) fine oatmeal
 1 egg yolk
 100 g (4 oz) cream cheese
 30 ml (2 tbsp) chopped fresh herbs
 15 ml (1 tbsp) lemon juice

Ingredients

250 g (9 oz) streaky unsmoked bacon,
 derinded
 225 g (8 oz) pork fillet
 225 g (8 oz) chicken breast
 2 onions, finely chopped
 2 cloves garlic
 100 g (4 oz) pistachio nuts, shelled
 15 ml (1 tbsp) green peppercorns
 30 ml (2 tbsp) brandy
 5 ml (1 tsp) dried basil
 15 ml (1 tbsp) parsley, chopped
 salt and pepper
 1 egg, beaten
 225 g (8 oz) thick slice of ham, cut into thin
 strips

Ingredients

2 ciabatta rolls
 1 clove garlic, halved
 1 beef tomato
 100 g (4 oz) goats cheese
 8 stoned black olives
 15 ml (1 tbsp) olive oil
 fresh basil, chopped
 pepper

Mushroom Paté

Serves 4

Dish: 18 cm (7") soufflé dish lightly greased**Oven Accessory:** glass turntable + metal tray

1. Remove the stalks from the spinach and use the leaves to line the soufflé dish, reserving leaves for the top.
2. Place the butter and garlic in a large dish, cover and cook on **HIGH** power for 1 min. or until melted. Add the mushrooms, re-cover and microwave on **HIGH** power for 5 mins. or until softened. Stir in remaining ingredients and beat well.
3. Spoon the paté mixture into the lined soufflé dish and cover with the reserved spinach leaves. Cover with a circle of greaseproof paper and cook on **Combination: Convection 190°C + SIMMER** power for 25 mins. or until firm to the touch. Leave to cool before serving.

Pork and Chicken Terrine

Serves 4-6

Dish: 900 g (2 lb) Pyrex® loaf dish**Oven Accessory:** glass turntable + metal tray

1. Line base and sides of loaf dish with bacon rashers, stretching each rasher slightly with a knife. Reserve 3-4 rashers for top.
2. Chop pork and chicken coarsely in a food processor. Place in bowl. Process onions and garlic coarsely.
3. Mix together meat, onions, garlic, nuts, peppercorns, brandy, basil, parsley, salt and pepper. Bind together with the egg.
4. Spread half the mixture in the dish. Layer ham on top of mixture and then spread remaining meat mixture on top. Lay reserved bacon on top. Cover with a piece of greaseproof paper.
5. Cook on **Combination: Convection 160°C + WARM** power for 40 mins. or until firm.

Goats Cheese & Basil Ciabatta

Serves 4

Oven Accessory: glass turntable, metal tray + grill accessory + splash guard

1. Halve the rolls, rub each half with garlic and place on the grill accessory. Cook on **Grill 1** for 3-4 minutes or until lightly toasted.
2. Slice the tomato and goats cheese. Quarter the olives.
3. Top each half with the sliced tomato, cheese and olives. Drizzle with olive oil and place on the grill accessory. Cook under preheated grill on **Grill 1** for 2-3 minutes or until the cheese is golden and bubbling.
4. Sprinkle with basil and season with pepper. Serve immediately.

Ingredients

8 boneless, skinless chicken thighs
 30 ml (2 tbsp) wholegrain mustard
 100 g (4 oz) Gruyère or cheddar cheese
 8 slices of smoked streaky bacon

Cheesey Chicken & Bacon Rolls

Serves 4

Dish: metal roasting tin**Oven Accessory:** glass turntable + metal tray + low rack

1. Spread the mustard over the rolled out chicken thighs and place a thin slice of cheese on top. Roll up the thighs.
2. Stretch the bacon with the back of a knife and wrap tightly around each thigh. Secure with cocktail sticks.
3. Place in the roasting tin and cook in a pre-heated oven on **TURBO-BAKE 220°C + Grill 3** for 30-35 mins. or until thoroughly cooked and golden.

Ingredients

450 g (1 lb) smoked haddock
 30 ml (2 tbsp) lemon juice
 2 hard boiled eggs, chopped
 90 ml (6 tbsp) breadcrumbs
 25 g (1 oz) butter
 25 g (1 oz) plain flour
 150 ml (1/4 pt) milk
 salt and pepper
 1 box filo pastry
 150 g (5 oz) butter, melted

Smoked Haddock Samosas

Serves 4

Dish: Round baking tray**Oven Accessory:** glass turntable + metal tray

1. Place the fish and lemon juice in a shallow dish and cook on **HIGH power** for 4-5 mins. or on Auto program fish. Drain, skin and bone, then flake. Stir in the eggs and breadcrumbs.
2. Place the butter (25 g (1 oz)) in a jug and melt on **HIGH power** for 30-40 secs. Stir in the flour and gradually add the milk. Cook on **HIGH power** for 1-2 mins. or until thickened. Stir halfway, season and mix with fish. Cool.
3. Melt the 150 g (5 oz) butter on **HIGH power** for 1-2 mins. Brush a sheet of filo pastry with melted butter. Fold in half lengthways and brush the top with butter. Place a small amount of the filling at one end and fold into a triangle by folding diagonally. Repeat this with each sheet of filo.
4. Place on a greased baking tray and brush with butter. Cook on **Combination: Convection 220°C + SIMMER power** for 20-25 mins. or until golden.

Ingredients

4 beef tomatoes
 seasoning
 3 ml (1/2 tsp) dried basil
 4 eggs
 200 g (7 oz) mozzarella cheese

Baked Stuffed Tomatoes

Serves 4

Dish: Shallow heatproof dish**Oven Accessory:** glass turntable + metal tray + low rack


1. Slice the tops off the tomatoes. Deseed, scoop out the centre and discard.
2. Drain upside down on kitchen paper.
3. Place tomatoes right way up in heatproof dish.
4. Sprinkle inside with salt and pepper and dried basil.
5. Break in whole egg, and cover the top with slices of mozzarella cheese.
6. Cook in preheated oven on **TURBO-BAKE 190°C + GRILL 2** for 20-25 mins. or until browned on top.

Fish

Fish cooks very well by microwave as it stays moist and the lingering fish smells left in conventional ovens are avoided.

WHEN IS FISH COOKED?

Fish is cooked when it flakes easily and becomes opaque.

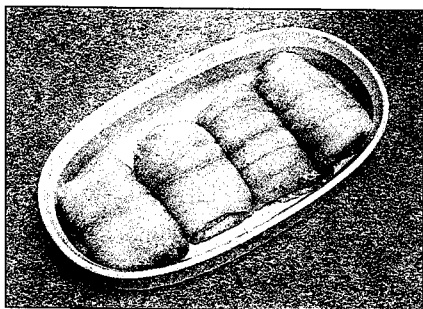


ARRANGING

Thin fillets of fish i.e. plaice, should be rolled up prior to cooking to avoid overcooking on the thinner outside edge and tail.

Fish steaks should be arranged in a circle, thicker part to the outside. Cover with cling film or lid.

For fish with a strong odour, eliminate the smell after cooking by placing 600 ml (1 pt) of boiling water and 1 sliced lemon in a large bowl, cook on SIMMER for 20 mins. Wipe out oven with a dry cloth.

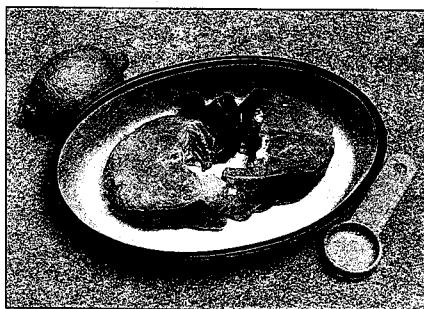

LIQUID

Fresh fish should always be sprinkled with 30 ml (2 tbsp) of lemon juice, white wine or water.

When cooking **Frozen** fish, add liquid as above for even cooking.

Do not sprinkle salt onto fish before cooking as this may make the fish dry.

WHOLE FISH

If cooking 2 whole fish together, they should be arranged head to tail for even cooking.

Large whole fish must have the tail and head shielded halfway through cooking with smooth pieces of tin foil secured with cocktail sticks.



NOISE

During cooking, popping sounds may be heard. This is due to moisture trapped between the flesh, particularly with oily fish such as salmon and mackerel. This can be minimised when cooking if the skin and flesh is pierced several times with a cocktail stick.

Ingredients

4 trout, 350 g (12 oz) each

Stuffing:

1 bunch spring onions, finely chopped
100 g (4 oz) button mushrooms, finely sliced
grated rind and juice of 1 orange
2½ cm (1") cube fresh ginger, peeled and grated
dash of Soy sauce

juice of 1 orange

juice of 1 lime

black pepper

25 g (1 oz) butter

Stuffed Citrus Trout

Serves 4

Oven Accessory: glass turntable, metal tray and grill accessory

1. Wash the fish and pat dry. Fill the fish cavities with the combined stuffing ingredients and arrange the fish in a shallow dish.
2. Pour over the orange and lime juice. Season and marinade for one hour.
3. Dot with butter, place the fish two at a time on the grill accessory.
4. Preheat the Grill to **Grill 2**. Cook for 12-15 mins. or until crisp and brown. Turn halfway. Repeat with remaining fish.

Ingredients

350 g (12 oz) potatoes
25 g (1 oz) butter
1 small onion, finely chopped
200 g (7 oz) can tuna, drained
1 egg, hardboiled, chopped
30 ml (2 tbsp) fresh parsley, chopped
10 ml (2 tsp) lemon juice
salt and pepper
1 egg, beaten
100 g (4 oz) breadcrumbs

Ingredients

450 g (1 lb) white fish
450 g (1 lb) mixed seafood
50 g (2 oz) butter
50 g (2 oz) flour
450 ml (¾ pt) milk
300 ml (½ pt) white wine
6 gherkins, diced
15 ml (1 tbsp) fresh parsley
10 ml (2 tsp) dill
salt and pepper

Rosti topping:

900 g (2 lb) potatoes
15 ml (1 tbsp) capers
50 g (2 oz) butter, melted
50 g (2 oz) cheddar cheese, grated

Ingredients

100 g (4 oz) broccoli
100 g (4 oz) cauliflower
1 medium red pepper, diced
198 g (7 oz) can salmon, drained
25g (1 oz) butter
30 ml (2 tbsp) plain flour
300 ml (½ pt) milk
50 g (2oz) grated tasty cheese
150 ml (¼ pt) cream (optional)
salt and pepper to taste
15 g (½ oz) butter
75 g (3 oz) fresh white breadcrumbs
15 ml (1 tbsp) chopped fresh parsley
pinch paprika

Tuna Fish Cakes

Serves 4

Oven Accessory: glass turntable + metal tray + grill accessory + splash guard

1. Cook potatoes with 45 ml (3 tbsp) water, covered on **HIGH** power for 6-8 mins. or until cooked. Drain.
2. Place butter and onion in a bowl, cover and cook on **HIGH** power for 4 mins. or until soft. Add potatoes and mash.
3. Stir in tuna, hard boiled egg, parsley and lemon juice, season well.
4. Shape into 8 cakes and coat in beaten egg and breadcrumbs.
5. Place on grill accessory and cook on **Combination: TURBO-BAKE 250°C + Grill 1 + WARM** power for 12-15 mins. or until brown, turning halfway.

Special Occasion Fish Pie

Serves 4

Dish: Gratin dish**Oven Accessory: glass turntable + metal tray**

1. Place the white fish with 2 tbsp water in a shallow dish. Cover and cook on **HIGH** power for 4-5 mins or on **AUTO FISH** program. Drain, skin, bone and flake.
2. Make the sauce by melting the butter in a large jug on **HIGH** power for 1 min. Add the flour and stir well. Mix in the milk and wine and cook on **HIGH** power for 4-5 mins. Stir halfway. Mix in the fish, mixed seafood, gherkins and herbs. Pour into the dish.
3. Grate the potatoes and mix in the capers, melted butter and grated cheese. Pile onto fish sauce without pressing firmly to keep the grated form. Cook on **Combination: Convection 220°C + SIMMER** power for 30-35 mins. or until piping hot and golden.

Salmon & Vegetable Mornay

Serves 4

Dish: 20 x 25 cm (8" x 10") dish **Oven Accessory: glass turntable + metal tray + low rack**

1. Break broccoli and cauliflower into florets, add red pepper and 2 tbsp water. Cover and cook on **HIGH** power for 5-6 mins. or until soft. Drain.
2. Flake salmon and mix with vegetables.
3. Melt butter in jug on **HIGH** power for approx. 20-30 secs. Stir in flour then milk. Cook on **HIGH** power for 2 mins. or until mixture boils and thickens; stir halfway. Stir in cheese, cream and seasoning. Pour cheese sauce over vegetables and salmon.
4. Melt extra butter in a small bowl on **HIGH** power for approx. 15-20 secs. Stir in breadcrumbs, parsley and paprika. Sprinkle over vegetable mixture.
5. Cook on **Combination: TURBO-BAKE 230°C + Grill 3 + LOW** power for 10-12 mins. or until golden brown.

Ingredients

50 g (2 oz) long grain rice
300 ml (1/2 pt) boiling water
1 onion, finely chopped
50 g (2 oz) mushrooms, chopped
25 g (1 oz) butter
salt and pepper
175 g (6 oz) salmon tail
30 ml (2 tbsp) white wine
375 g (13 oz) puff pastry
2 hardboiled eggs, chopped
beaten egg to glaze

To Serve:

150 ml (1/4 pt) carton soured cream
15 ml (1 tbsp) fresh chopped parsley

Ingredients

450 g (1 lb) smoked haddock
30 ml (2 tbsp) lemon juice
1 large onion, sliced
15 ml (1 tbsp) oil
40 g (1 1/2 oz) butter
40 g (1 1/2 oz) flour
3 ml (1/2 tsp) mustard
600 ml (1 pt) milk
salt and pepper
100 g (4 oz) Red Leicester cheese
600 g (1 1/4 lb) cooked jacket potatoes, sliced
75 g (3 oz) wholemeal breadcrumbs

Ingredients

8 fillets Rainbow trout
8 x 5 ml (1 tsp) wholegrain mustard
3 oranges, peeled and pith removed

Coubliac

Serves 4

Dish: baking sheet (round)

Oven Accessory: glass turntable + metal tray

1. Place rice and water in a large casserole, cover and cook on **HIGH** power for 10 mins. or until just cooked. Drain.
2. Place the onion, mushrooms and butter in a small bowl, cover and cook on **HIGH** power for 3 mins. or until just softened.
3. Place salmon in a shallow dish, 'sprinkle with wine and cook covered on **HIGH** power for 2 mins. (or AUTO PROGRAM FISH). Cool and flake.
4. Roll pastry to a rectangle approx. 25 x 30 cm (10 x 12"). Trim and reserve trimmings. Combine all ingredients together. Spread down one side of pastry rectangle leaving 1.5 cm (1/2") around the edge. Brush the edges with beaten egg and fold pastry over. Seal. Brush top with egg and use the trimmings to decorate. Carefully lift onto a baking sheet and chill for 20 mins. Preheat oven on **Convection 210°C**. Cook on **Combination: Convection 220°C + SIMMER** power for 20-25 mins. or until golden brown. Serve hot with soured cream combined with chopped parsley.

Family Fish Pie

Serves 4

Dish: large casserole

Oven Accessory: glass turntable + metal tray

1. Arrange fish in a shallow dish. Add lemon juice, cover and cook on **HIGH** power for 3 mins. or until it flakes easily.
2. Place onion and oil in a bowl. Cover and cook on **HIGH** power for 3 mins. or until the onion is soft.
3. Melt the butter on **HIGH** power for 30 secs. Stir in the flour and mustard and cook for a further 15 secs. Add milk and seasoning, gradually stir to a smooth paste. Cook on **HIGH** power for 5 mins. or until the sauce is thick and bubbling. Stir twice during cooking. Add 75 g (3 oz) of grated cheese to the sauce and stir well.
4. Flake the fish and arrange in a serving dish. Add onions and place the sliced potatoes on top.
5. Pour over the cheese sauce. Sprinkle with breadcrumbs and remaining cheese.
6. Cook on **Combination: Convection 190°C + SIMMER** power for 15-20 mins. or until golden brown and piping hot.

Trout Parcels with Orange and Mustard

Serves 4

Oven Accessory: glass turntable + grill accessory + splash guard + metal tray

1. Wash and dry the fillets and spread the flesh side of each fillet with mustard, then divide orange slices between them.
2. Fold each one over and secure with wooden cocktail sticks.
3. Place on grill accessory.
4. Cook on **TURBO-BAKE 220°C + Grill 2** for 20 mins or until brown and crispy.

Ingredients

225 g (8 oz) tomatoes
 125 ml (4 fl.oz) olive oil
 30 ml (2 tbsp) tomato puree
 2 onions, chopped
 1 large leek, sliced
 4 garlic cloves, crushed
 1.2 ltr (2 pt) fish stock
 salt and black pepper
 150 ml (1/4 pt) dry white wine
 4 sprigs thyme
 small piece of orange peel
 4 strands saffron
 5 ml (1 tsp) chilli sauce
 450 g (1 lb) cod, haddock or coley
 450 g (1 lb) mixed seafood
 4 large fresh prawns
 bunch of dill to garnish

Ingredients

50 g (2 oz) butter
 50 g (2 oz) flour
 450 ml (3/4 pt) milk
 100 g (4 oz) Cheddar cheese, grated
 salt and pepper
 pinch grated nutmeg
 450 g (1 lb) frozen spinach
 450 g (1 lb) smoked haddock fillet, skinned
 50 g (2 oz) breadcrumbs

Ingredients

25 g (1oz) butter
 1 clove garlic, crushed
 1 small onion, finely chopped
 15 ml (1 tbsp) plain flour
 15 ml (1 tbsp) curry powder
 grated rind and juice of 1/2 lemon
 300 ml (1/2 pt) hot fish stock
 25 g (1 oz) sultanas
 10 ml (2 tsp) tomato puree
 30 ml (2 tbsp) mango chutney
 450 g (1 lb) haddock, skinned and chopped
 salt and pepper
 75 g (3 oz) creamed coconut

Bouillabaisse

Serves 6

Dish: 3 litre (6 pt) casserole**Oven Accessory: glass turntable**

1. Skin the tomatoes and cut into four pieces, removing the cores. Place the oil and tomato puree in a large bowl, heat on **HIGH** power for 1 min. and mix well. Add the onions and leek, cook on **HIGH** power for 3-4 mins. or until soft.
2. Add the garlic, tomatoes, stock, wine, thyme and orange peel, saffron and chilli sauce. Heat on **HIGH** power for 3-4 mins. Skin the fish, cut into chunks and add to the tomato liquid. Cook on **HIGH** power for 3-4 mins. or until the fish is cooked. Add the mixed seafood and prawns and heat again for 2-3 mins. on **HIGH** power or until hot, taking care not to overcook the fish.
3. Serve garnished with Dill.

Haddock and Spinach Florentine

Serves 4

Dish: 20 cm (8") square dish **Oven Accessory: glass turntable + metal tray + low rack**

1. Mix together the butter, flour and milk in a large jug and cook uncovered on **HIGH** power for 4-5 mins. or until the sauce has thickened, whisking every minute. Stir in half of the cheese and season well with salt, pepper and nutmeg.
2. Place spinach in the dish and cook covered on **HIGH** power for 6-7 mins. or until cooked. Place in a sieve and drain thoroughly, then place back into the dish.
3. Place the fish in a single layer on top of the spinach. Cook covered on **HIGH** power for 4-5 mins. or until tender.
4. Pour the cheese sauce over the fish to cover it completely. Cook uncovered on **HIGH** power for 3 mins. then sprinkle the remaining cheese and breadcrumbs on top. Brown under the GRILL for 5-6 mins. or until brown and crisp.

Fish Curry

Serves 4

Dish: large casserole**Oven Accessory: glass turntable**

1. Melt the butter in the casserole dish on **HIGH** power for 30 secs. or until melted.
2. Stir in the garlic and onion and cook covered on **HIGH** power for 3 mins.
3. Stir in the flour, curry powder, lemon rind and juice and fish stock. Cover and cook on **HIGH** power for 3 mins. stirring halfway through the cooking time.
4. Stir in the remaining ingredients except the coconut, cover and cook on **HIGH** power for 3-4 mins. or until fish flakes, stirring occasionally.
5. Break up the coconut with a fork, then stir into the curry. Leave to stand for 5 mins. before serving with boiled rice.

Ingredients

1 clove garlic, crushed
15 ml (1 tbsp) parsley
pinch of ground cumin
15 ml (1 tbsp) coriander
30 ml (2 tbsp) soft butter
30 ml (2 tbsp) breadcrumbs
freshly ground pepper
24 fresh green lip mussels on the half shell

Ingredients

15 ml (1 tbsp) vegetable oil
1 clove garlic, crushed
1 large onion, chopped
1 x 397 g (14 oz) can chopped tomatoes
15 ml (1 tbsp) tomato puree
1 x 397 g (14 oz) tin tuna, drained
1 x 200 g (7 oz) can sweetcorn, drained
1 x 200 g (7 oz) can sliced carrots, drained
100 g (4 oz) broccoli florets
100 g (4 oz) cashew nuts
salt and pepper
50 g (2 oz) butter
50 g (2 oz) plain flour
600 ml (1 pt) milk
175 g (6 oz) grated cheddar cheese
30 ml (2 tbsp) chopped mixed herbs
10 sheets lasagne (precooked)

Ingredients

50 g (2 oz) onion
2 garlic cloves
50 g (2 oz) butter
15 ml (1 tbsp) plain flour
100 ml (4 fl.oz) white wine
50 ml (2 fl.oz) milk
150 ml (1/4 pt) cream
175 g (6 oz) Emmental cheese
450 g (1 lb) mixed cooked seafood
75 g (3 oz) watercress
100 g (4 oz) Tortilla chips
50 g (2 oz) breadcrumbs
seasoning

Crispy Mussels

Serves 4

Oven Accessory: glass turntable + metal tray + grill accessory

1. Beat the garlic, parsley, cumin, coriander and butter together. Add the breadcrumbs and pepper. Mix well.
2. Put a teaspoon of the mixture onto each mussel. Place on the Grill accessory and brown under a preheated grill on **Grill 1** for 2-3 mins. or until golden and bubbling.

Tuna & Sweetcorn Lasagne

Serves 4

Dish: 24 cm (9") square dish

Oven Accessory: glass turntable + metal tray

1. Place oil, garlic and onions in a bowl. Cover and cook on **HIGH** power for 2-3 mins. or until softened.
2. Add the tomatoes, puree, tuna, sweetcorn, carrots, broccoli, nuts and seasoning. Cover and cook on **HIGH** power for 10-12 mins. or until vegetables are softened. Stir frequently.
3. Melt the butter in a large jug on **HIGH** power for 30-40 secs. Stir in the flour then add the milk gradually to form a smooth paste. Cook on **HIGH** power for 5 mins. or until the sauce is thick and bubbling. Stir frequently. Add 150 g (5 oz) of the grated cheese, herbs and season to taste.
4. Pour half the tuna mixture over the base of the dish. Top with half the lasagne and half the sauce. Repeat the layers ending up with the final layer of sauce. Sprinkle with the remaining cheese. Cook on **Combination: Convection 190°C + SIMMER power** for 25-30 mins. or until the pasta is tender.

Mixed Seafood Gratin

Serves 4

Dish: 24 cm (9") round gratin dish

Oven Accessory: glass turntable + metal tray + low rack

1. Chop the onion and garlic. Place with butter in a large bowl and soften on **HIGH** power for 3-4 mins. Add the flour and pour in the wine and milk gradually. Stir well. Thicken on **HIGH** power for 3-4 mins, stirring halfway. Add the cream and cheese.
2. Add the seafood and watercress to the sauce and mix well. Season to taste.
3. Spoon into the gratin dish and top with the crushed tortilla chips and breadcrumbs.
4. Cook on **Combination: TURBO-BAKE 230°C + Grill 3 + LOW power** for 12-14 mins or until crisp and piping hot.

Meat and Poultry


Guidelines

DEFROSTED JOINTS

If the meat has previously been frozen, ensure it is properly thawed before cooking by microwave. Defrosted joints of meat must be allowed to **STAND** for a **minimum of 30 mins.** before cooking to ensure the centre is fully defrosted.

FAT

Large amounts of fat absorb microwave energy and can cause the meat next to it to overcook. Always choose joints that aren't excessively fatty.

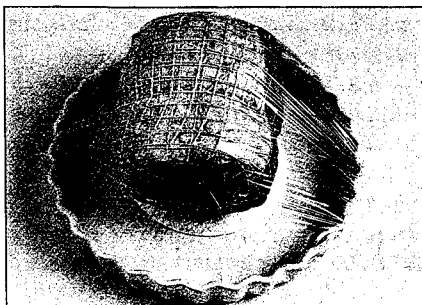

How to roast a joint by microwave

To roast basic joints of meat place the joint onto the rack of a microwave roasting set and cover with a dome lid. Alternatively use a large, shallow dish and place the joint on an upturned saucer and cover with cling film.

ROASTING BAGS

Roasting bags are useful when split up one side to tent a joint for roasting by power and time.

Do not use the metal twists supplied.

TIPS

Braised and stewed meat cooked in a microwave has a slightly firm texture and therefore it is essential to purchase good quality meats.

When cooking a casserole, place a saucer or small upturned plate over the meat to keep it submerged in the juices.


Crispy Bacon - place on a microwave safe rack (optional extra obtainable from cookware shops). Cover with a plain piece of kitchen towel to minimise splatter. Cook on **HIGH** power for approx. 45 secs. per rasher, or until desired crispness is achieved.

STANDING TIME

Meat and poultry require a **minimum of 15 mins. STANDING TIME** wrapped in aluminium foil after cooking by microwave. Roast meat is always easier to carve after **STANDING** and the meat will continue to cook during the **STAND TIME**.

BONE

Bone tips on legs of lamb and crown roasts may need shielding when cooked by microwave, to prevent overcooking.

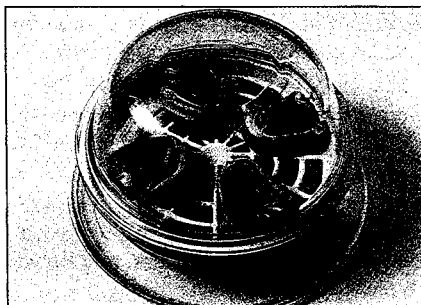

How to cook small cuts of meat by microwave

Some cuts of meat can be cooked successfully by microwave although due to their short cooking times and no heat source, they will not crisp and brown.

They should always be cooked on a microwave rack to lift them out of their juices.

TURNING


Joints and poultry **should be turned over** halfway through cooking.

SHIELDING

Large joints may need shielding with pieces of smooth aluminium foil after half the cooking time to avoid overcooking on the outside edges. Turkeys and large chickens should have their breast meat, legs and wings protected. Secure foil with cocktail sticks and **do not** allow foil to touch the walls of the oven.

How to roast a joint by Combination

Place the joint on Low Rack on Splash Guard in Metal Tray and place on Glass Turntable.

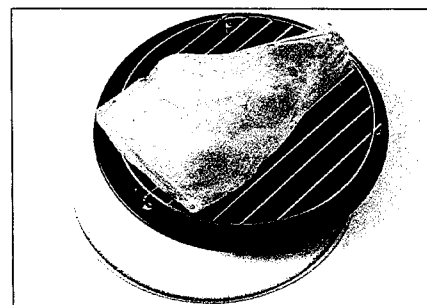

Ingredients

4 chicken portions approx. 1.2 kg (2½ lb) in weight

5 ml (1 tsp) mixed herbs
salt and pepper
100 g (4 oz) streaky bacon
100 g (4 oz) button mushrooms
1 clove garlic, crushed
450 g (1 lb) whole shallots
30 ml (2 tbsp) brandy
300 ml (½ pt) red wine
300 ml (½ pt) chicken stock

Ingredients

4 chicken breast fillets, skinned
100 g (4 oz) creamed coconut
45 ml (3 tbsp) lemon juice
30 ml (2 tbsp) soy sauce
30 ml (2 tbsp) vegetable oil
2 garlic cloves, crushed
5 ml (1 tsp) ground turmeric
5 ml (1 tsp) five-spice powder
5 ml (1 tsp) coriander seeds
5 ml (1 tsp) cumin seeds
90 ml (6 tbsp) crunchy peanut butter
large pinch of chilli powder

Ingredients

350 g (12 oz) leeks, trimmed
25 g (1 oz) butter
30 ml (2 tbsp) plain flour
300 ml (½ pt) milk
225 g (8 oz) cooked chicken, chopped
100 g (4 oz) ham, chopped
175 g (6 oz) Gruyere cheese, grated
4 frozen individual garlic bread slices

Coq au Vin

Serves 4

Dish: large casserole with lid**Oven Accessory: glass turntable + metal tray**

1. Place all ingredients in casserole dish.
2. Cover and cook on **Combination: Convection 160°C + WARM power** for 1hr 10 mins. or until cooked through.
3. Remove skin from chicken pieces and skim off any excess fat. Thicken using a little cornflour mixed with water. Serve sprinkled with chopped parsley.

Chicken Satay

Serves 4-6

Dish: 8 wooden skewers**Oven Accessory: glass turntable + metal tray + grill accessory + splash guard**

1. Cut the chicken into small chunks and place in a bowl. Place 50 g (2 oz) creamed coconut, 30 ml (2 tbsp) lemon juice and 15 ml (1 tbsp) soy sauce into a blender or food processor. Add the oil, garlic, turmeric, five spice, coriander and cumin and blend until smooth.
2. Pour over the chicken. Cover and marinate in the fridge for 2-3 hours or overnight.
3. For the serving sauce: Crumble 50 g (2 oz) of creamed coconut into a large jug. Add the peanut butter, 15 ml (1tbsp) of the lemon juice, 15ml (1tbsp) of the soy sauce, the chilli powder and 300 ml (½pt) water. Cook on **HIGH** power for 5-6 mins. or until the sauce boils and thickens, stirring frequently. Turn into a serving bowl.
4. Thread the chicken onto wooden skewers. Place on grill accessory and cook on **Combination: TURBO-BAKE 250°C + Grill 1 + WARM power** for 15 mins. or until cooked through, turning occasionally. Serve hot with sauce for dipping.

Creamy Chicken Gratin

Serves 4

Dish: 24 cm (9") round gratin dish**Oven Accessory: glass turntable + metal tray + low rack**

1. Slice the leeks and place in a large bowl with the butter. Cover and soften on **HIGH** power for 3-4 mins. or until softened.
2. Add the flour and mix well. Stir in the milk and heat on **HIGH** power for 4-5 mins. or until thickened. Add the chicken, ham and cheese then season and mix well.
3. Pour into the dish and top with the garlic bread slices. Cook on **Combination: TURBO-BAKE 230°C + Grill 3 + LOW power** for 15-20 mins or until piping hot and golden.

Ingredients

350 g (12 oz) aubergine
olive oil
50 g (2 oz) grated Parmesan cheese
10 ml (2 tsp) dried marjoram
4 skinless chicken breasts
1 egg, beaten
1 onion, chopped
2 cloves of garlic, crushed
400 g (14 oz) canned chopped tomatoes
15 ml (1 tbsp) tomato puree
salt and pepper
100 g (4 oz) Mozzarella cheese, grated

Cheesey Aubergine Chicken

Serves 4

Dish: rectangular ceramic dish**Oven Accessory: glass turntable + grill accessory + metal tray + splash guard**

1. Thinly slice the aubergine. Brush each side with oil and place on the grill accessory. Cook on preheated **Grill 1** for 10 mins, turning halfway. The aubergine should be golden and crisp.
2. Mix the parmesan with 5 ml (1 tsp) marjoram. Dip the chicken in the beaten egg, then the cheese mixture. Cover and chill in the fridge for 10-15 mins.
3. Chop the onion and garlic, place in a bowl with 15 ml (1 tbsp) of olive oil. Cover and cook on **HIGH** power for 3 mins. or until soft. Stir in the tomatoes, tomato puree, marjoram and seasoning. Cook on **HIGH** power for 3 mins. or until hot.
4. Pour the sauce into the ceramic dish. Place the chicken, aubergine and mozzarella cheese in overlapping rows over the sauce.
5. Cook on **Combination: Convection 190°C + SIMMER** power for 35-40 mins, or until golden and the chicken is cooked.

Ingredients

4 lemons, rind and juice of
5 cm (2") piece fresh root ginger, peeled and chopped
90 ml (6 tbsp) runny honey
salt and pepper
2 poussins, about 450 g (1 lb) each
700 g (1½ lbs) onions, sliced
50 g (2 oz) dark brown sugar

Lemon and Ginger Poussin with Onions

Serves 4

Dish: 25 cm (10") casserole dish**Oven Accessory: glass turntable + metal tray**

1. Whisk lemon juice, rind, ginger and honey together. Season. Halve poussins lengthways. Pour over marinade. Cover and refrigerate overnight.
2. Remove roughly half the marinade and place in a large bowl with the sliced onions and sugar. Cover and cook on **HIGH** power for 10 mins. or until the onions are soft.
3. Place the onion mixture in the bottom of the casserole dish. Arrange the poussins on top with the remaining marinade. Cook on **Combination: Convection 220°C + SIMMER** power for 30-40 mins. or until the poussin is cooked.

Ingredients

1 large avocado
50 g (2 oz) red onion
100 g (4 oz) tomato
1 red pepper
2 garlic cloves, crushed
60 ml (4 tbsp) olive oil
15 ml (1 tbsp) lime juice
30 ml (2 tbsp) chopped parsley
seasoning
4 chicken breasts with skin

Crispy Chicken with Hot Salsa

Serves 4

Dish: square ceramic dish**Oven Accessory: glass turntable + metal tray + low rack**

1. Mix together the chopped avocado, onion, tomato and red pepper then mix with the crushed garlic, 30 ml (2 tbsp) of the olive oil, lime juice, parsley and seasoning.
2. Flatten the chicken breasts with a damp rolling pin. Lift the skin to create a pocket and stuff with the salsa mixture.
3. Place the chicken in roasting dish. Drizzle with olive oil and cook in a preheated oven on **TURBO-BAKE 220°C + GRILL 2** for 25-30 mins or until cooked and golden.

Ingredients

1 onion, diced
 1 clove garlic, crushed
 15 ml (1 tbsp) oil
 397 g (14 oz) can chopped tomatoes
 15 ml (1 tbsp) tomato puree
 5 ml (1 tsp) mixed herbs
 450 g (1 lb) mince
 salt and pepper

Ingredients

1 quantity of Savoury Mince
 (see above)
 double quantity of White Pouring Sauce (see
 page 86)
 100 g (4 oz) grated cheese
 5 ml (1 tsp) mustard
 salt and pepper
 12 sheets pre-cooked lasagne
 (or sufficient for 3 layers)
 60 ml (4 tbsp) Parmesan cheese

Ingredients

1 medium onion, chopped
 2 carrots, chopped
 25 g (1 oz) butter
 350 g (12 oz) cold cooked beef or lamb,
 minced
 300 ml (1½ pt) hot beef stock
 3 ml (½ tsp) Worcestershire sauce
 15 ml (1 tbsp) gravy thickening
 5 ml (1 tsp) tomato puree
 salt and pepper
 675 g (1½ lb) potatoes, cubed
 135 ml (9 tbsp) water
 30 ml (2 tbsp) milk
 25 g (1 oz) cheese

Savoury Mince

Serves 4

Dish: 1.5 litre (3 pt) casserole dish**Oven Accessory: glass turntable**

1. Place onion, garlic and oil in casserole, cover and cook on **HIGH** power for 2 mins. or until soft.
2. Place all other ingredients in casserole. Stir well.
3. Cover and cook on **HIGH** power for 10 mins. then **MEDIUM** power for 15-20 mins. or until cooked.

Variation: Chilli Con Carne

Add 396 g (14 oz) can red kidney beans drained, 5-10 ml (1-2 tsp) chilli powder, 1 diced green pepper to the ingredients above.

Lasagne

Serves 4

Dish: large rectangular dish approx. 27 x 23 cm (11" x 9")**Oven Accessory: glass turntable + metal tray**

1. Add cheese and seasoning to the hot white sauce.
2. Cover the base of the dish with a layer of cheese sauce, then a layer of lasagne, followed by a layer of hot meat mixture. Continue with a layer of lasagne then meat, ending with a layer of cheese sauce.
3. Sprinkle Parmesan cheese over the top and cook on **Combination: Convection 190°C + SIMMER** power for 20-25 mins. or until the pasta is tender and brown and crisp on top.

Shepherd's Pie

Serves 4

Dish: medium casserole**Oven Accessory: glass turntable + metal tray**

1. Place onion, carrots and butter in casserole. Cover and cook on **HIGH** power for 3-5 mins. or until soft.
2. Add minced meat to vegetables and mix well. Mix together stock, Worcestershire sauce, gravy thickening and tomato puree, pour over meat and season to taste.
3. Cook potatoes with water, covered on **HIGH** power for 7-8 mins. Drain and mash well with the milk and spread on top of the meat, using a fork to make a pattern on top.
4. Sprinkle with cheese and cook on **Combination: Convection 190°C + WARM** power for approximately 25-30 mins. or until top is crisp and golden.

Ingredients

1 quantity Chilli Con Carne
(see page 67)
12 Taco shells
 $\frac{1}{2}$ lettuce, shredded
2 tomatoes, thinly sliced
100 g (4 oz) cheese, grated

Ingredients**Filling:**

350 g (12 oz) braising steak, cubed
100 g (4 oz) kidney, cubed
30 ml (2 tbsp) seasoned flour
1 onion, chopped
600 ml (1 pt) hot beef stock

Pudding:

175 g (6 oz) self-raising flour
pinch salt
75 g (3 oz) suet
cold water to mix
15 ml (1 tbsp) cornflour

Ingredients

675 g (1½ lb) braising steak, cubed
3 large onions, sliced thinly
1 clove garlic, crushed
30 ml (2 tbsp) seasoned flour
15 ml (1 tbsp) brown sugar
300 ml (½ pt) hot beef stock
300 ml (½ pt) light ale
15 ml (1 tbsp) wine vinegar
5 ml (1 tsp) mixed herbs
2 bay leaves

Topping:

8 x 2.5 cm (1") slices of French bread
15 ml (1 tbsp) French mustard
60 ml (4 tbsp) butter, softened
1 clove garlic, crushed

Tacos

Serves 4

Dish: large dinner plate**Oven Accessory:** glass turntable

1. Prepare Chilli Con Carne according to recipe instructions.
2. Stand shells on plate. Heat on **HIGH** power for 40-50 secs. to warm through.
3. Divide shredded lettuce between Taco shells. Fill with hot Chilli mixture. Top with sliced tomato and sprinkle with grated cheese. Serve immediately.

Steak and Kidney Pudding

Serves 4

Dish: 1.5 litre (3 pt) casserole + 1.2 litre (2 pt) pudding basin**Oven Accessory:** glass turntable

1. Combine all filling ingredients in casserole. Place upturned plate on top of meat, cover and cook on **HIGH** power for 10 mins. then **SIMMER** power for 60 mins. or until meat is tender. Remove plate.
2. Mix flour, salt and suet together. Mix to a firm dough with cold water.
3. Roll out $\frac{3}{4}$ of the pastry to line basin.
4. Remove meat with a slotted spoon and fill basin. Mix cornflour with water and stir into the gravy. Cook on **HIGH** power for 2 mins. stirring once, or until gravy has thickened. Pour 60 ml (4 tbsp) of gravy over the meat and reserve the rest for serving. Roll remaining pastry to form a lid, moisten the edges and seal over the top of the meat.
5. Cook on **MEDIUM** power for 10-12 mins. or until pastry looks dry.

Belgian Beef Casserole

Serves 4

Dish: large casserole with lid**Oven Accessory:** glass turntable + metal tray

1. Combine all the casserole ingredients in dish. Cover with lid and cook on **Combination: Convection 160°C + WARM power** for 1hr 30 mins, or until meat is tender, or **AUTO PROGRAM CASSEROLE**. Remove bay leaves.
2. Blend mustard, butter and garlic. Spread over one side of each bread slice.
3. Uncover casserole and arrange bread on top. Return to oven and cook uncovered on **Combination: Convection 160°C + WARM power** for a further 15 mins. The casserole is ready when the bread slices are crisp and golden.

Ingredients

600 g (1¼ lb) braising steak, cubed
 45 ml (3 tbsp) seasoned flour
 600 ml (1 pt) hot beef stock
 45 ml (3 tbsp) tomato puree
 30 ml (2 tbsp) paprika
 5 ml (1 tsp) sugar
 60 ml (4 tbsp) soured cream

Ingredients

15 ml (1 tbsp) oil
 1 large onion, sliced
 3 cloves garlic, crushed
Spices and Flavours:
 10 ml (2 tsp) ground coriander
 3 ml (½ tsp) chilli powder, ground cardamom,
 ground cloves
 15 ml (1 tbsp) garam marsala
 15 ml (1 tbsp) ground turmeric
 5 ml (1 tsp) ground cumin
 30 ml (2 tbsp) flour
 15 ml (1 tbsp) tomato puree
 450 g (1 lb) shoulder of lamb, cubed
 juice of 1 lemon
 5 ml (1 tsp) sugar
 25 g (1 oz) sultanas
 pinch of salt
 450 ml (¾ pt) hot stock

Ingredients

1 aubergine, sliced
 30 ml (2 tbsp) oil
 2 cloves garlic, crushed
 1 medium onion, chopped
 396 g (14 oz) can tomatoes
 30 ml (2 tbsp) tomato puree
 350 g (12 oz) lamb, cooked and
 finely diced
 salt and pepper
Topping:
 2 eggs
 150 ml (¼ pt) single cream
 100 g (4 oz) cheese, grated
 25g (1 oz) Parmesan cheese, grated

Hungarian Goulash

Serves 4

Dish: large casserole + lid**Oven Accessory: glass turntable + metal tray**

1. Toss meat in the flour. Combine all ingredients except the soured cream in casserole dish.
2. Cook on **Combination: Convection 160°C + WARM power** for 1hr 30 mins, or until the meat is tender, or on AUTO PROGRAM CASSEROLE.
3. Remove from oven and immediately stir in the soured cream. Serve with ribbon noodles.

Madras Curry

Serves 4

Dish: large casserole dish with lid**Oven Accessory: glass turntable + metal tray**

1. Place the oil, onion and garlic in casserole dish. Cover and cook on **HIGH** power for 3 mins.
2. Blend in all the spices and cook on **HIGH** power for 2 mins.
3. Stir in the flour and tomato puree. Add all other ingredients including meat. Blend in hot stock.
4. Cover and cook on **Combination: Convection 160°C + WARM** power for 1hr-1hr 30 mins. or until meat is tender, or use AUTO PROGRAM CASSEROLE. Serve with boiled rice and lemon or lime wedges and poppadoms.

Moussaka

Serves 4

Dish: 20 cm (8") souffle dish**Oven Accessory: glass turntable + metal tray**

1. Place aubergines in a large colander and sprinkle liberally with salt. Stand for 20 mins. or until bitter juices run out. Rinse well under cold water and drain.
2. Place oil, garlic, onion and aubergine in dish. Cover and cook on **HIGH** power for 2 mins. or until softened.
3. Add tomatoes and puree and cook re-covered on **HIGH** power for 7 mins. Add lamb and season, mix well.
4. Whisk eggs, cream and cheese together and pour over lamb. Sprinkle with Parmesan cheese and cook on **Combination: Convection 190°C + SIMMER power** for 15-20 mins. or until topping is puffed and golden.

Ingredients

900 g (2 lb) unsmoked gammon joint
cold water to cover
300 ml (1/2 pt) white wine (optional)
1 onion, peeled
4 whole cloves
10 peppercorns
45 ml (3 tbsp) honey
30 ml (2 tbsp) orange juice
15 ml (1 tbsp) demerara sugar
15 ml (1 tbsp) Dijon mustard
12 whole cloves

Ingredients

1 clove garlic, crushed
5 ml (1 tsp) chilli powder
5 ml (1 tsp) ground cumin
150 ml (1/4 pt) soured cream
15 ml (1 tbsp) chopped mint
450 g (1 lb) minced lamb
1 onion, grated

Ingredients

6 lambs kidneys
1 onion, sliced
25 g (1 oz) butter
100 g (4 oz) button mushrooms, halved
15 g (1/2 oz) flour
8 chipolata sausages, halved
60 ml (4 tbsp) red wine
60 ml (4 tbsp) hot beef stock
30 ml (2 tbsp) tomato puree
salt and pepper

Glazed Gammon

Serves 4

Dish: large bowl **Oven Accessory:** glass turntable + low rack + metal tray + splash guard

1. In a large bowl or casserole soak the gammon in water for at least 2 hours. Discard the water, recover the joint with fresh water and wine (if using). Add onion stuck with cloves and peppercorns and cook on **HIGH** power for 15 mins. then **MEDIUM** power for 15-20 mins. per 450 g (1 lb) or until cooked. Drain.
2. Mix together the honey, juice, sugar and mustard. Cook on **HIGH** power for 1 min. Leave to cool.
3. Remove the gammon rind. Score the fat in a lattice pattern and stud with cloves. Brush over half of the glaze.
4. Place gammon onto low rack + splashguard on metal tray on turntable and cook in a preheated oven on **TURBO-BAKE 170°C + Grill 1** for 10-15 mins. until golden, spreading over the remaining glaze halfway through cooking time.

Lamb Kebabs

Serves 4

Dish: 8 wooden skewers**Oven Accessory:** glass turntable + grill accessory + metal tray + splash guard

1. Mix the garlic, chilli powder and cumin together. Stir into the soured cream and add mint.
2. Place the minced lamb and onion in a bowl and add half the flavoured cream. Mix well.
3. With damp hands, form the mince mixture into long sausages around the skewers.
4. Arrange the kebabs on the grill accessory, brush with remaining cream. Cook on **Combination: TURBO-BAKE 250°C + Grill 1 + WARM power** for 15-20 mins. turning halfway.

Kidneys Turbigo

Serves 4

Dish: large casserole**Oven Accessory:** glass turntable

1. Skin, halve and core the kidneys. Remove any fat or gristle.
2. Place the onion and butter in the casserole. Cover and cook on **HIGH** power for 2 mins. or until the onion starts to soften.
3. Add the kidneys, cover and cook on **HIGH** power for 4 mins. Turn halfway during cooking.
4. Add remaining ingredients, cover and cook on **MEDIUM** power for 15-18 mins. or until the kidneys are tender. Stir halfway during cooking.

Ingredients

1 kg (2½ lb) pork spare ribs
 300 ml (½ pt) water
 225 g (8 oz) can crushed pineapple
 150 ml (¼ pt) HP Fruity Sauce
 15 ml (1 tbsp) brown sugar
 45 ml (3 tbsp) soy sauce
 5 ml (1 tsp) fresh grated ginger

Ingredients

30 ml (2 tbsp) oil
 1 medium onion, chopped
 1 green pepper, deseeded and chopped
 225 g (8 oz) carrots, sliced
 450 g (1 lb) lean pork, cubed
 30 ml (2 tbsp) seasoned flour
 5 ml (1 tsp) ground bay leaves
 5 ml (1 tsp) dried sage
 salt and pepper
 300 ml (½ pt) dry cider

Dumplings:

175 g (6 oz) self raising flour
 75 g (3 oz) suet
 pinch of salt
 5 ml (1 tsp) mustard powder
 15 ml (1 tbsp) fresh parsley, chopped
 150 ml (¼ pt) cold water

Ingredients

100 g (4 oz) plain flour
 3 ml (½ tsp) salt
 2 eggs
 300 ml (½ pt) milk and water
 25 g (1 oz) lard or dripping
 450 g (1 lb) sausages

Hawaiian Ribs

Serves 2

Dish: 20 x 25 cm (8 x 10") rectangular dish **Oven Accessory:** glass turntable + metal tray + grill accessory + splash guard

1. Place the ribs in a single layer in dish with the water, cover and cook on **HIGH** power for 10 mins. Drain.
2. Place all other ingredients in blender and blend until smooth. Dip each rib in the sauce ensuring they are well coated.
3. Place on grill accessory and cook on **Combination: TURBO-BAKE 230°C + Grill 3 + LOW power** for 20 mins. or until cooked and crisping. Baste with extra sauce if required. Turn occasionally.

Casserole Pork with Herby Dumplings

Serves 4

Dish: large casserole and lid **Oven Accessory:** glass turntable + metal tray

1. Place oil, onion, green pepper and carrots in dish, cover and cook on **HIGH** power for 5 mins. or until soft.
2. Toss pork in seasoned flour and add to onion mixture. Stir in all other ingredients, cover and cook on **Combination: Convection 160°C + WARM power** for 1 hr or until pork is tender, or on **AUTO PROGRAM CASSEROLE**.
3. Whilst cooking make the dumplings by combining the flour, mustard, salt, suet and parsley. Add the water to make a stiff dough. Shape dough into 8 round dumplings.
4. When pork is cooked uncover and place dumplings around the edge of dish. Cook uncovered on **Combination: Convection 160°C + WARM power** for 15 mins. or until dumplings are cooked through.

Toad In The Hole

Serves 4

Dish: 25 x 18 cm (10" x 7") oblong tin **Oven Accessory:** glass turntable + metal tray + low rack

1. Preheat oven on **Convection 220°C**.
2. Sift flour and salt in a bowl. Add egg and half the liquid. Beat until smooth. Gradually stir in remaining liquid.
3. Put fat in tin with sausages and place in the preheated oven until fat is sizzling hot.
4. Pour in the batter and cook for 30-35 mins. or until the batter is well risen and golden brown.

Ingredients

225 g (8 oz) carrots, sliced
 3 celery sticks, sliced
 15 ml (1 tbsp) vegetable oil
 4 boneless pork chops
 15 ml (1 tbsp) prepared mustard
 1 onion, finely chopped
 25 g (1 oz) butter
 15 g (½ oz) flour
 300 ml (½ pt) milk
 salt and pepper
 450 g (1 lb) potatoes, peeled and finely sliced

Pork and Potato Bake

Serves 4

Dish: 20 x 25 cm (8" x 10") rectangular dish**Oven Accessory:** glass turntable + metal tray

1. Mix the carrots, celery and oil together in dish. Cover and cook on **HIGH** power for 4-5 mins. or until softening.
2. Arrange the chops in a single layer on top of the vegetables, spread mustard over evenly.
3. Make the onion sauce by cooking the onion with half the butter on **HIGH** power for 3-4 mins. Add the flour and stir well. Gradually add the milk and cook on **HIGH** power for 1½ mins. Stir and cook for a further 1-2 mins. or until thick and cooked. Season to taste. Pour sauce over chops. Arrange potato slices on top, cover and cook on **HIGH** power for 5 mins.
4. Uncover, dot with remaining butter and cook on **Combination: Convection 170°C + LOW power** for 25-30 mins. or until potatoes are golden.

Ingredients

700 g (1½ lb) boneless leg of pork, cubed
 225 g (8 oz) onion, chopped
 450 g (1 lb) parsnips, sliced
 1 garlic clove, crushed
 15 ml (1 tbsp) ground coriander
 5 ml (1 tsp) cumin seeds or ground cumin
 30 ml (2 tbsp) flour
 300 ml (½ pt) beef stock
 300 ml (½ pt) apple juice
 salt and pepper

Harvest Pork Casserole

Serves 4-6

Dish: large casserole and lid**Oven Accessory:** glass turntable + metal tray

1. Place the cubed pork, chopped onion, sliced parsnips, crushed garlic, coriander and cumin in a large casserole dish.
2. Stir in the flour.
3. Gradually add the stock, apple juice and seasoning.
4. Cover and cook on Auto Program Casserole or cover and cook on **HIGH** power for 15 mins. Stir then cover and cook on **Combination: Convection 160°C + WARM power** for 1¼ - 1½ hours or until the meat is tender.

Ingredients

½ cauliflower, divided into florets
 3 carrots, peeled and sliced
 3 parsnips, peeled and sliced
 450 g (1 lb) Cumberland sausage
 15 ml (1 tbsp) sunflower oil
 1 onion, chopped
 30 ml (2 tbsp) mild curry paste
 400 g (14 oz) tin of mixed spicy beans

Cumberland Sausage Curry

Serves 4

Dish: large Pyrex® bowl**Oven Accessory:** glass turntable, metal tray + grill accessory + splash guard

1. Prepare the vegetables.
2. Grill the sausages under preheated grill on **Grill 1** for 10 mins or until browned and cut into 5 cm (2") chunks.
3. Place the onion in a large Pyrex® bowl with the sunflower oil and cook covered on **HIGH** power for 3 mins. or until soft.
4. Stir in the curry paste, add the vegetables, sliced sausage and beans plus 150 ml (¼ pt) boiling water. Cook on **HIGH** power for 10 mins. then **LOW** power for 15-20 mins, or until the vegetables are soft and the curry is piping hot.

Pasta, Rice and Beans

Ingredients

8 quick cooking cannelloni tubes
600 ml (1 pt) pouring white sauce
(see page 86)
50 g (2 oz) cheese, grated

Filling:

100 g (4 oz) defrosted spinach
50 g (2 oz) cooked ham, chopped
30 ml (2 tbsp) Parmesan cheese
1 egg, beaten
175 g (6 oz) cooked chicken, finely diced
15 ml (1 tbsp) parsley, finely chopped
15 ml (1 tbsp) spring onions, finely chopped
60 ml (4 tbsp) Parmesan cheese

Ingredients

225 g (8 oz) mixed dried pasta
i.e. tagliatelle, twists, shells
1 litre (1¾ pt) boiling water
15 ml (1 tbsp) oil
3 ml (½ tsp) salt
25 g (1 oz) butter
100 g (4 oz) mushrooms, peeled and sliced
198 g (7 oz) can tuna, drained

Sauce:

40 g (1½ oz) butter
40 g (1½ oz) flour
600 ml (1 pt) milk
30 ml (2 tbsp) Dry Vermouth (optional)
salt and pepper to taste
25 g (1 oz) cheese, grated
25 g (1 oz) breadcrumbs

Ingredients

2 onions, chopped
2 cloves garlic, crushed
30 ml (2 tbsp) oil
3 deseeded red peppers, chopped
397 g (14 oz) canned tomatoes
15 ml (1 tbsp) tomato puree
salt and pepper
450 g (1 lb) frozen spinach, defrosted and drained
450 g (1 lb) ricotta cheese
9 sheets lasagne, precooked
300 ml (½ pt) natural yoghurt
45 ml (3 tbsp) grated parmesan cheese

Cannelloni

Serves 4

Dish: deep baking dish approx. 20 cm x 25 cm (8" x 10")

Oven Accessory: glass turntable + metal tray

1. Prepare sauce. At the end of cooking, whisk in the grated cheese. Set aside.
2. Prepare filling by combining all filling ingredients. Fill cannelloni tubes from each end.
3. Pour half the sauce into the dish and then lay the cannelloni on top. Pour remaining sauce over and sprinkle with second measure of Parmesan cheese.
4. Cook on **Combination: Convection 190°C + SIMMER power** for 20-25 mins. or until the pasta is tender.

Tuna Pasta

Serves 4

Dish: 3 litre (6 pt) casserole dish

Oven Accessory: glass turntable + metal tray + low rack

1. Cook pasta in water with oil and salt covered on **HIGH** power for 10-12 mins. or until soft. Leave to stand for 2-3 mins. Drain.
2. Melt butter in small dish on **HIGH** power for approx. 45 secs. Add mushrooms and cover. Cook on **HIGH** power for 3-4 mins. or until soft.
3. To make sauce, melt butter on **HIGH** power for 30-40 secs. Stir in flour to make a roux. Gradually whisk in milk until well combined. Cook on **HIGH** power for 3-5 mins. or until smooth and glossy. Stir halfway through cooking. Add Vermouth and season.
4. Combine pasta, tuna and mushrooms in dish. Pour sauce over and stir to mix thoroughly. Sprinkle with cheese and breadcrumbs and cook on **Combination: TURBO-BAKE 230°C + Grill 3 + LOW power** for 10-12 mins. or until golden brown.

Spinach & Ricotta Lasagne

Serves 4-6

Dish: 2 ltr (4 pt) shallow dish

Oven Accessory: glass turntable + metal tray

1. Place one of the onions and a clove of garlic in a bowl with 1 tbsp oil and cook for 2-3 mins. on **HIGH** power or until soft.
2. Add the red peppers, tomatoes and tomato puree, season and cook on **HIGH** power for 5-6 mins. or until hot.
3. In another bowl, place the second onion and garlic clove with 1 tbsp oil. Cover and cook on high power for 2-3 mins. until soft. Add the defrosted, drained spinach and stir well. Cook on **HIGH** power for 2-3 mins. or until cooked. Drain.
4. In a 2 ltr (4 pt) shallow dish, place a layer of spinach. Top with ricotta cheese, then lasagne followed by the tomato sauce and a further layer of pasta. Spoon yoghurt onto the top and sprinkle with parmesan cheese.
5. Cook on **Combination: Convection 190°C + SIMMER power** for 30-40 mins. or until golden and piping hot.

Ingredients

175 g (6 oz) easycook brown rice
 450 ml ($\frac{3}{4}$ pt) hot chicken stock
 450 g (1 lb) smoked haddock
 30 ml (2 tbsp) lemon juice
 1 medium onion, chopped
 15 ml (1 tbsp) oil
 150 ml ($\frac{1}{4}$ pt) soured cream
 15 ml (1 tbsp) curry paste
 100 g (4 oz) frozen peas
 30 ml (2 tbsp) parsley, chopped
 2 hardboiled eggs, chopped

Ingredients

100 g (4 oz) green lentils
 15 ml (1 tbsp) oil
 1 large onion, sliced
 5 ml (1 tsp) grated root ginger
 1 garlic clove, crushed
 3 ml ($\frac{1}{2}$ tsp) turmeric
 5 ml (1 tsp) chilli powder
 10 ml (2 tsp) curry powder
 150 ml ($\frac{1}{4}$ pt) natural yoghurt
 100 g (4 oz) mushrooms, sliced
 2 tomatoes, peeled and chopped
 300 ml ($\frac{1}{2}$ pt) hot water
 50 g (2 oz) cashew nuts
 450 g (1 lb) cooked basmati rice

Garnish:

hard boiled egg slices and
 coriander leaves

Ingredients

40 g (1 $\frac{1}{2}$ oz) dried Cep mushrooms
 50 g (2 oz) butter
 1 clove garlic, finely chopped
 1 small onion, finely chopped
 freshly ground black pepper
 250 g (9 oz) Arborio rice
 300 ml ($\frac{1}{2}$ pt) hot vegetable stock
 12 basil leaves, torn

Kedgeree

Serves 4

Dish: large casserole**Oven Accessory: glass turntable**

1. Place the rice and chicken stock in casserole, cover and cook on **HIGH** power for 15-17 mins. or until tender.
2. Place the fish in a shallow dish, sprinkle with lemon juice, cover and cook on **HIGH** power for 5-6 mins. or until cooked. Skin and flake.
3. Place onion and oil in a small dish, cover and cook on **HIGH** power for 3-4 mins. or until softened.
4. Combine the soured cream with curry paste. Mix into rice then stir in flaked fish, onion, peas, parsley, eggs and seasoning. Cover and cook on **HIGH** power for 5 mins. or until piping hot.

Lentil Biryani

Serves 4-6

Dish: large casserole**Oven Accessory: glass turntable**

1. Soak the lentils in cold water for 1 hour then drain them.
2. Place the oil and onion in a large bowl. Cover and cook on **HIGH** power for 3 mins. or until softened.
3. Add the ginger, garlic, turmeric, chilli and curry powder. Cover and cook on **HIGH** power for 2 mins.
4. Add the yoghurt, mushrooms, tomatoes, water and lentils. Cover and cook on **HIGH** power for 25-30 mins. or until the lentils are tender and the liquid has evaporated.
5. Add the lentil mixture and cashew nuts to the cooked rice and mix thoroughly. Reheat on **HIGH** power if necessary. Garnish and serve.

Wild Mushroom and Basil Risotto

Serves 4

Dish: 3 litre (6 pt) casserole dish**Oven Accessory: glass turntable**

1. Soak mushrooms in 300 ml ($\frac{1}{2}$ pt) warm water.
2. Place the butter, garlic and onion in a large bowl, cover with cling film and cook on **HIGH** power for 3 mins, or until softened. Season with freshly ground black pepper.
3. Stir the rice into the butter mixture and add the hot stock and soaking liquid from the mushrooms. Cover and cook for a further 5 mins on **HIGH** power.
4. Stir the mushrooms into the rice mixture. Cover and cook for a further 5 mins. on **HIGH** power.
5. Stir and add the basil. Continue to cook for the final 5 mins. on **HIGH** power. Leave to stand for approx. 10 mins and then stir with a fork.

Ingredients

1 large aubergine, cubed
salt
350 g (12 oz) tagliatelle, fresh
1 onion
1 clove garlic, crushed
15 ml (1 tbsp) olive oil
397 g (14 oz) tin of chopped tomatoes
5 ml (1 tsp) basil
15 ml (1 tbsp) tomato puree
15 g (½ oz) butter
salt and pepper
8-10 black olives, stoned
100 g (4 oz) mozzarella, diced
30 ml (2 tbsp) parmesan cheese, grated

Ingredients

1 aubergine
2 leeks
1 red, 1 green pepper
1 onion
1 clove of garlic
45 ml (3 tbsp) olive oil
225 g (8 oz) pasta shapes
225 g (8 oz) fresh spinach
White Sauce
40 g (1½ oz) butter
40 g (1½ oz) flour
1 pt (600 ml) milk
15 ml (1 tbsp) mustard
50 g (2 oz) Cheddar cheese
150 g (5 oz) Boursin cheese
50 g (2 oz) Cheddar cheese for topping

Ingredients

1 medium onion, chopped
10 ml (2 tsp) vegetable oil
2 medium courgettes, sliced thickly
1 red pepper, seeded & chopped
2 medium carrots, peeled & thinly sliced
1 small cauliflower, cut into florets
100 g (4 oz) dried apricots, halved
2 cloves garlic, crushed
425 g (15 oz) can chick peas, drained
3 ml (½ tsp) each: ground turmeric, ground coriander, ground cumin
5 ml (1 tsp) paprika
2.5 cm (1") fresh root ginger, peeled and finely chopped
salt and pepper
450 ml (¾ pt) hot vegetable stock
chopped parsley to garnish

Tagliatelle Toscana

Serves 4

Dish: deep casserole dish**Oven Accessory:** glass turntable + metal tray + low rack

1. Sprinkle the aubergine with salt and leave for 20 mins, then rinse and dry.
2. Cook the pasta in 600 ml (1 pt) boiling water, covered, on **HIGH** power for 4 mins. or until tender. Drain.
3. Place onion, garlic and oil in a bowl, cover and cook on **HIGH** power for 2 mins. or until soft. Add the remaining ingredients except the mozzarella, tagliatelle and parmesan cheese, cover and cook on **HIGH** power for 6-8 mins.
4. Mix the drained pasta with the mozzarella. Place in a casserole dish. Pour the sauce over the top. Sprinkle with parmesan and cook on **Combination: TURBO-BAKE 230°C + Grill 1 + WARM** power for 6-8 mins. or until golden brown and piping hot.

Roast Vegetable and Pasta Gratin

Serves 4

Dish: 25 cm (10") round shallow Pyrex® dish**Oven Accessory:** glass turntable + metal tray + low rack

1. Chop all the vegetables into bite sized pieces and put in a roasting dish with the oil. Cook on **TURBO-BAKE 230°C + Grill 2** for 25-30 mins or on the Roast Vegetable program.
2. Cook the pasta shapes in 450 ml (¾ pt) boiling water on **HIGH** power for 5-6 mins or until soft. Drain. Wash the spinach and tear into small pieces and grate the cheese.
3. Make the white sauce as per instructions on page 86, add the mustard, cheese and Boursin cheese and stir thoroughly until smooth. Season well.
4. Mix the pasta, spinach and roast vegetables with the sauce and place in a large shallow dish. Sprinkle the top with cheese.
5. Cook on **Combination: TURBO-BAKE 230°C + Grill 3 + LOW** power for 10-15 mins or until golden brown.

Vegetable and Chick Pea Casserole

Serves 4

Dish: large casserole dish**Oven Accessory:** glass turntable

1. Place the onion and oil in a large casserole dish. Cover and cook on **HIGH** power for 3 mins. or until starting to soften.
2. Add the prepared vegetables, apricots, garlic, chick peas and stir in the spices, salt, pepper and stock.
3. Cover and cook on **HIGH** power for 15-20 mins, or until vegetables are soft. Stir two or three times during cooking. Serve with couscous or rice and garnish with parsley.

TIP

To prepare couscous: Place 300 ml (½ pt) vegetable stock in a bowl and 1.2 ml (¼ tsp) turmeric. Cook on **HIGH** power for 4 mins. or until boiling. Add 175 g (6 oz) couscous and allow to stand for 5 mins. Fluff up with a fork before serving.

Cheese and Egg Dishes

Ingredients

1 can ready to bake croissants
6 cheese slices
6 wafer thin slices of ham
egg for glazing

Ingredients

Base:

100 g (4 oz) self raising flour
50 g (2 oz) butter
100 g (4 oz) potato, cooked and sieved

Topping:

45 ml (3 tbsp) tomato puree
100 g (4 oz) Mozzarella cheese
1 onion, sliced
2 large mushrooms, sliced
1/2 green pepper, sliced
mixed herbs
seasoning

Ingredients

4 large muffins, halved
150 ml (1/4 pt) Dolmio® sauce or Passata
100 g (4 oz) garlic sausage, cubed
1 clove garlic, crushed
1 small onion, diced
100 g (4 oz) cheese, grated
56 g can anchovy fillets
black olives to garnish

Ham and Cheese Croissants

Serves 6

Oven Accessory: glass turntable + metal tray + low rack

1. Preheat the oven on **CONVECTION 180°C**.
2. Prepare croissants by placing a slice of cheese and ham on each piece of dough before rolling.
3. Place on a round baking tray, brush with egg and cook for 25-30 mins. or until golden and cooked through.

Potato Based Pizza

Serves 4

Dish: 24 cm (9 1/2") Pyrex® pizza dish or plate

Oven Accessory: glass turntable + metal tray

1. Rub butter into flour until it resembles fine breadcrumbs, add the cooked potato and work into a dough.
2. Line pizza dish with dough, spread with tomato puree, then layer remaining ingredients, finishing with the cheese. Cook on **Combination: Convection 230°C + WARM power** for 15-20 mins. or until browned.

Muffin Pizzas

Serves 4

Oven Accessory: glass turntable + grill accessory + metal tray + splash guard

1. Preheat Grill.
2. Place Dolmio® sauce, sausage, garlic and onion in a bowl and mix well.
3. Arrange muffin halves on grill accessory and toast on **Grill 1** for 3-4 mins. until browned. 4 halves at a time.
4. Spread muffins with the mixture. Top with cheese, anchovies and olives.
5. Cook on **Combination: Grill 1 + WARM power** for 5-7 mins. or until cheese has melted and is beginning to brown.

Ingredients

25 g (1 oz) butter
 25 ml (1½ tbsp) flour
 150 ml (¼ pt) milk
 3 eggs, separated
 salt and pepper
 75 g (3 oz) cheese, grated

Baked Soufflé

Serves 4

Dish: 15 cm (6") soufflé dish **Oven Accessory:** glass turntable + metal tray + low rack

1. Melt butter on **HIGH** power for 30 secs. Stir in flour. Cook on **HIGH** power for 30 secs.–1 min. Stir in milk gradually, whisk until smooth. Cook on **HIGH** power for 2 mins. or until thickened. Beat well. Cool.
2. Add egg yolks one at a time. Season and mix in cheese.
3. Whisk the egg whites until stiff and fold into cheese mixture.
4. Cook in preheated oven on **CONVECTION 180°C** for 20-30 mins. until risen and brown.

Variations: Add to egg mixture before folding in egg whites:

1. 75 g (3 oz) cooked ham
2. 50 g (2 oz) mushrooms
3. 75 g (3 oz) smoked salmon, finely sliced.

Ingredients

225 g (8 oz) shortcrust pastry
 1 medium onion, chopped
 15 ml (1 tbsp) oil
 6 streaky bacon rashers, or
 100 g (4 oz) ham cut into strips
 2 eggs
 150 ml (¼ pt) single cream
 salt and pepper to taste
 50 g (2 oz) cheddar cheese, grated

Quiche Lorraine

Serves 4

Dish: 23 cm (9") metal tin

Oven Accessory: glass turntable + metal tray

1. Roll out the pastry and use to line the flan dish. Prick base of pastry with a fork, chill for 15 mins. Pre-heat oven to **CONVECTION 210°C** and bake the case blind for 20 mins. or until cooked.
2. Place the onion and bacon in a small dish. Cover and cook on **HIGH** power for 4 mins. or until onion is soft. Drain and place in bottom of flan case.
3. Beat the eggs, cream, salt and pepper and pour over the bacon. Sprinkle with cheese. Cook on **Combination: Convection 190°C + WARM power** for 20-25 mins. or until just set and browned.

Ingredients

4 slices bread, buttered
 5 ml (1 tsp) Dijon mustard
 2 slices smoked ham
 100 g (4 oz) sliced cheese

Croque Monsieur

Serves 2

Oven Accessory: glass turntable + grill accessory + metal tray + splash guard

1. Place the bread, buttered side up on grill accessory and cook on preheated **Grill 1** for approximately 3-4 mins. or until browning.
2. On 2 slices of the bread, spread the untoasted sides with mustard and top with ham and cheese. Cover with the other slices, browned side uppermost.
3. Place back on the grill accessory and cook on **Combination: GRILL 2 + SIMMER power** for 1-2 mins. or until the cheese has melted.

Ingredients

175 g (6 oz) quick cooking macaroni
 40 g (1½ oz) butter
 1 small onion, finely chopped
 100 g (4 oz) bacon, chopped
 40 g (1½ oz) flour
 600 ml (1 pt) milk
 5 ml (1 tsp) french mustard
 150 g (5 oz) red cheese, grated
 salt and pepper
 30 ml (2 tbsp) fresh brown breadcrumbs

Ingredients

1 medium onion, finely diced
 15 ml (1 tbsp) olive oil
 175 g (6 oz) self-raising flour
 3 ml (½ tsp) salt
 3 ml (½ tsp) mustard powder
 3 ml (½ tsp) cayenne pepper
 seasoning
 25 g (1 oz) butter
 40 g (1½ oz) strong cheddar cheese, grated
 40 g (1½ oz) Parmesan cheese
 25 g (1 oz) black olives, stoned and chopped
 1 egg, beaten
 45 ml (3 tbsp) milk
 1 beaten egg for glazing

Ingredients

900 g (2 lb) potatoes thinly sliced
 25 g (1 oz) butter
 pinch grated nutmeg
 salt and pepper
 200 g (7 oz) Mozzarella cheese, thinly sliced
 225 g (8 oz) peppered salami, thinly sliced
 50 g (2 oz) fresh breadcrumbs
 50 g (2 oz) Parmesan cheese, grated

Macaroni Cheese

Serves 4

Dish: large dish and jug**Oven Accessory:** glass turntable + metal tray + low rack

1. Cook macaroni in 450 ml (¾ pt) boiling water. Cover and cook on **HIGH** power for 5-6 mins. or until soft. Drain.
2. Place butter, onion and bacon in a jug. Cover. Cook on **HIGH** power for 5 mins. or until onion is soft. Stir halfway through cooking.
3. Stir in flour and cook for 30 secs. on **HIGH** power.
4. Gradually add milk, stir well and season. Cook on **HIGH** power for 5-6 mins. or until sauce is thick and bubbling. Stir twice during cooking.
5. Add mustard and 100 g (4 oz) grated cheese. Add macaroni. Place the macaroni mixture in a large dish. Sprinkle with breadcrumbs and remaining cheese.
6. Cook on **Combination: TURBO-BAKE 230°C + Grill 3 + LOW** power for 10-12 mins. or until cheese starts to melt.

Cheese, Onion & Olive Scones**Dish:** round baking sheet**Oven Accessory:** glass turntable + metal tray + low rack

1. Place onion and oil in a bowl. Cover and cook on **HIGH** power for 2 mins. or until softened. Drain.
2. Sift together the flour, salt, mustard and cayenne with seasoning. Rub in the butter.
3. Mix in onion, cheeses and olives. Beat egg and milk together. Pour into flour mixture and bring to a soft dough.
4. On a floured surface roll out dough to approx. 2 cm thick. Cut out rounds using a 5 cm pastry cutter and brush with beaten egg.
5. Place half the dough rounds on a lightly greased baking sheet. Place on the low rack and cook in a pre-heated oven on **CONVECTION 200°C** for 15-20 mins. or until cooked and golden brown. Then repeat with the remaining scones.


Cheese and Salami Pie

Serves 4

Dish: 25 cm (10") round heatproof dish**Oven Accessory:** glass turntable + metal tray + low rack

1. Arrange ⅓ potatoes on base of dish. Dot with ½ the butter and sprinkle with nutmeg and salt and pepper.
2. Arrange ½ the Mozzarella and salami on top, cover with ½ the remaining potato, dot with remaining butter and season.
3. Top with remaining salami and Mozzarella and finish with potato slices. Cover and cook on **HIGH** power for 20 mins. or until potatoes are tender.
4. Uncover and sprinkle with the breadcrumbs mixed with the Parmesan. Place on low rack and cook in a preheated oven on **TURBO-BAKE 230°C + Grill 1** for 5-8 mins. or until starting to brown and crisp.


Vegetables and Vegetarian

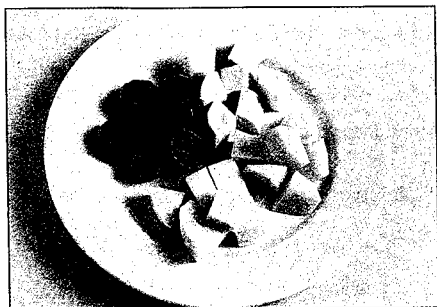


- Root vegetables. i.e. carrots, swede, should be cut into slices, strips or cubes.
- Do not mix fresh and frozen vegetables as the cooking times may be different.



- Cabbage should be shredded and cooked by power and time.
- Fresh vegetables require 90 ml (6 tbsp) of water. For each extra 450 g (1 lb) add an extra 90 ml (6 tbsp) of water and stir halfway.

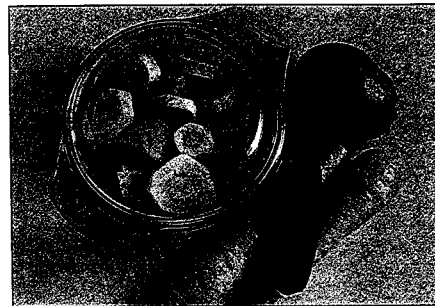


- If cooking potatoes with other vegetables, only cook with other ROOT vegetables.
- Never add salt to vegetables before microwaving. Remember the flavour of microwaved vegetables is much better than boiled.

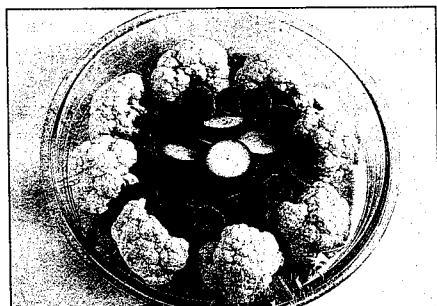

- Always cook vegetables in a dish that is a suitable size. Use flat dishes not basins. Always cover with microwave cling film or a lid.



- Certain vegetables i.e. broccoli and asparagus, should be arranged so that the tips are in the centre of the dish, as these require less cooking.

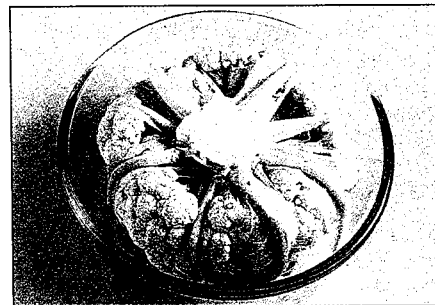


- Whole cauliflower should be cooked upside down on MEDIUM power for 10 mins. approx. with 90 ml (6 tbsp) water.

Jacket Potatoes

Varieties of potatoes vary in their suitability for cooking by microwave. We recommend Maris Piper for consistently good results. The cooking times given may need adjustment for other varieties. The ideal size of potato to be cooked by microwave is 175 g - 250 g (6-9 oz).

Before Cooking

Wash potatoes and prick skins several times. Spread around edge of turntable.

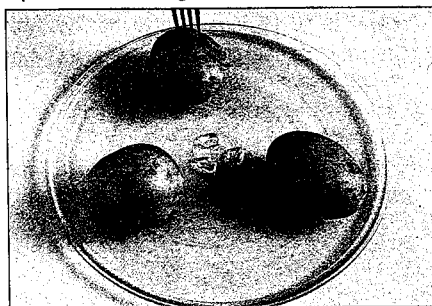

After Cooking

Remove from oven and wrap in aluminium foil to retain the heat. Leave to stand for 5 mins.



Ingredients

30 ml (2 tbsp) olive oil
 450 g (1 lb) onions, skinned and sliced
 900 g (2 lb) new potatoes, thinly sliced
 2 garlic cloves, skinned and crushed
 30 ml (2 tbsp) chopped fresh rosemary
 salt and pepper
 300 ml (10 fl.oz) single cream

Ingredients

1 large onion, chopped
 25 g (1 oz) butter
 1 clove of garlic, crushed
 225 g (8 oz) each of diced carrots,
 diced leeks, diced courgettes
 1 green pepper, chopped
 150 ml (1/4 pt) hot vegetable stock
 salt and pepper to taste
 300 ml (1/2 pt) prepared tomato sauce
 175 g (6 oz) pre-cooked lasagne
 225 g (8 oz) Mozzarella cheese

Ingredients

450 g (1 lb) leeks, sliced thinly
 450 g (1 lb) potatoes, sliced thinly
 150 g (5 oz) blue cheese
 225 g (8 oz) Greek yoghurt
 75 ml (5 tbsp) double cream
 50 g (2 oz) brown breadcrumbs
 salt and pepper

Potato & Rosemary Cake

Serves 4

Dish: 25 cm (10") flan dish**Oven Accessory:** glass turntable + metal tray

1. Place the oil and onions in a large bowl. Cover and cook on **HIGH** power for 3 mins. Add the potatoes and garlic, cover and cook on **HIGH** power for 5 mins or until softened.
2. Layer the potatoes, onions, rosemary and seasoning in the flan dish. Pour over the cream and lightly press down the potatoes.
3. Cook on **Combination: Convection 220°C + LOW** power for 30-35 mins. or until golden brown.

Vegetable Lasagne

Serves 4-6

Dish: large deep rectangular dish**Oven Accessory:** glass turntable + metal tray

1. Place onion and butter in a casserole dish, cover and cook on **HIGH** power for 3 mins. Add vegetables and stock, re-cover and cook on **HIGH** power for 8-10 mins. or until vegetables are soft. Season to taste.
2. Cover base of dish with a thin layer of tomato sauce, then a layer of lasagne on top followed by a layer of vegetable mixture. Thinly slice 175 g (6 oz) of the cheese and layer on top of vegetables. Continue layering until ingredients are all used ending with a tomato sauce layer.
3. Grate remaining cheese and arrange over top in 3 diagonal bands. Cook on **Combination: Convection 190°C + SIMMER** power for 30-35 mins. or until the pasta is cooked.

Leek & Potato Gratin

Serves 4

Dish: 25 cm (10") flan dish**Oven Accessory:** glass turntable + metal tray + low rack

1. Place the vegetables in a large bowl. Add 90 ml (6 tbsp) of water, cover and cook on **HIGH** power for 10-12 mins. or until the vegetables are softened.
2. Crumble or finely chop the cheese into a bowl and gradually blend in the yoghurt and the double cream.
3. Drain the vegetables and arrange in a flan dish. Season and pour over the blue cheese cream mixture.
4. Sprinkle with breadcrumbs, cook on **Combination: TURBO-BAKE 230°C + Grill 3 + LOW** power for 10 mins. or until golden brown.

Ingredients

450 g (1 lb) mixed vegetables eg. sweet potato, red pepper, leeks, aubergine, courgettes, onion
 1 clove garlic, crushed
 30 ml (2 tbsp) olive oil
 200 g (7 oz) can chopped tomatoes
 10 ml (2 tsp) tomato puree
 50 g (2 oz) gruyère cheese, grated
 100 g (4 oz) Boursin® cheese
 15 ml (1 tbsp) single cream
 25 g (1 oz) pinenuts
 225 g (8 oz) ready made puff pastry
 1 egg to glaze

Roast Vegetable Parcels

Serves 4

Dish: round baking sheet**Oven Accessory: glass turntable + metal tray + low rack**

1. Chop vegetables into 2.5 cm (1") chunks
2. Add garlic and oil, mix thoroughly with mixed vegetables. Place onto metal tray.
3. Cook on **Combination: TURBO-BAKE 220°C + Grill 2** for 25-30 mins until vegetables are browned and al dente.
4. Place the chopped tomatoes and puree in a heatproof bowl uncovered and cook on **HIGH** power for 5 mins then **MEDIUM** power for 10 mins or until mixture is reduced in volume and thickened.
5. Mix the tomato sauce with the cooked vegetables and pinenuts.
6. Mix together the gruyère cheese, Boursin® and single cream.
7. Roll out pastry until it measures approx 16" square. Divide into 4 equal squares.
8. Place 1/4 of the vegetable mixture in the centre of the square and top with 1/4 of the cheese mixture.
9. Bring the corners of the pastry to the centre, pressing the edges together. Seal with water. Glaze with beaten egg.
10. Cook in a preheated oven on **Convection 220°C** for 25-30 mins or until golden and cooked through.

Ingredients

450 g (1 lb) potatoes
 25 g (1 oz) butter
 30 ml (2 tbsp) oil

Roast Potatoes

Serves 4

Oven Accessory: glass turntable + metal tray

1. Peel and cut potatoes into quarters. Par boil and drain (see page 53).
2. Place potatoes, oil and butter on metal tray. Cook on **Combination: TURBO-BAKE 250°C + GRILL 1 + WARM** power for 25 mins. turning and basting potatoes during cooking, or until crisp and brown.

Ingredients

100 g (4 oz) button mushrooms
 100 g (4 oz) onion, chopped
 175 g (6 oz) fresh wholemeal breadcrumbs
 100 g (4 oz) ground cashew nuts
 1 egg
 3 ml (1/2 tsp) celery and garlic salt

Veggie Burgers

Serves 4

Oven Accessory: glass turntable + metal tray + grill accessory + splash guard

1. Place the mushrooms, onion, seasoning and all but a handful of breadcrumbs in a food processor. Whisk together and tip into a bowl, add the nuts and egg and blend with a fork.
2. Divide into four. Roll into balls and dip in the remaining breadcrumbs. Make into burger shapes. Preheat the grill and cook on **Combination: Grill 1 + WARM** power for 15 mins. or until browned. Turn half way.

Ingredients

1 quantity shortcrust pastry (page 88)
 175 g (6 oz) courgettes
 1 garlic clove, crushed
 175 g (6 oz) broccoli
 50 g (2 oz) peas
 175 g (6 oz) asparagus
 100 g (4 oz) tomatoes
 100 g (4 oz) full fat soft cheese
 150 ml (1/4 pt) single cream
 2 eggs + 1 egg yolk
 40 g (1 1/2 oz) mature cheddar

Ingredients

1 clove of garlic, halved
 675 g (1 1/2 lb) potatoes, sliced very thinly
 salt and pepper
 pinch nutmeg
 150 ml (1/4 pt) double cream
 25 g (1 oz) butter

Ingredients

1 red onion, cut into strips
 2 red peppers, deseeded and cubed
 1 aubergine, cubed
 2 courgettes, cubed
 350 g (12 oz) sweet potato, peeled and cubed
 4 garlic cloves, whole
 45 ml (3 tbsp) olive oil
 salt and pepper
 400 g (14 oz) canned, chopped tomatoes
 25 g (1 oz) sun-dried tomatoes, chopped
 225 g (8 oz) cottage cheese
 3 large eggs
 175 g (6 oz) cheddar cheese, grated
 45 ml (3 tbsp) natural yoghurt

Summer Vegetable Flan

Serves 6

Dish: 23 cm (9") flan dish**Oven Accessory: glass turntable + metal tray**

1. Preheat oven on **Convection 210°C**. Line the flan dish with the pastry and bake blind for 10 mins with baking beans. Remove baking beans and lining and bake for a further 10 mins until golden.
2. Thinly slice the courgettes, prepare the broccoli and peas place in a bowl with 90 ml (6 tbsp) of water and soften on **HIGH** power for 4-5 mins. Drain. Place in the pastry case with the asparagus and quartered tomatoes.
3. Beat the soft cheese with the cream and eggs, pour over the vegetables and sprinkle with cheese. Cook on **Combination: Convection 180°C + WARM power** for 35-40 mins or until just set.

Gratin Dauphinois

Serves 4-6

Dish: 20 cm (8") shallow dish**Oven Accessory: glass turntable + metal tray**

1. Rub halves of garlic around inside of dish and discard.
2. Layer the potato slices in the dish, seasoning with salt and pepper and nutmeg between each layer.
3. Pour the cream evenly over the top of the potatoes and dot with butter. Cook on **Combination: Convection 190°C + SIMMER power** for 30-35 mins. or until potatoes are cooked.

Roasted Vegetable Moussaka

Serves 4-6

Dish: 2 litre (4 pt) ovenproof dish**Oven Accessory: glass turntable, metal tray + low rack**

1. Place the prepared vegetables and garlic into an ovenproof dish. Sprinkle with oil and cook on **Combination: TURBO-BAKE 230°C + Grill 1 + SIMMER power** for 25 - 30 minutes, or on the Roast Vegetable program.
2. Stir in the tomatoes and sun-dried tomatoes. Season to taste.
3. Beat together the cottage cheese, eggs, cheddar cheese and yoghurt, then season.
4. Pour over the vegetables and cook on **Combination: TURBO-BAKE 250°C + Grill 1 + WARM power** for 15 minutes, or until golden brown.

Ingredients

350 g (12 oz) potatoes
 45 ml (3 tbsp) natural yoghurt
 10 ml (2 tsp) mango chutney
 3 ml (½ tsp) cumin, coriander and
 garam masala
 3 ml (½ tsp) turmeric
 10 ml (2 tsp) fresh coriander
 pinch chilli powder
 15 g (½ oz) sultanas
 salt and pepper

Ingredients

1 large onion
 4 sticks of celery
 15 ml (1 tbsp) olive oil
 350 g (12 oz) sliced mushrooms
 300 ml (½ pt) water
 5 ml (1 tsp) Marmite®
 3 ml (½ tsp) thyme
 Pinch ground bay leaf
 150 ml (¼ pt) sour cream
 Seasoning

Ingredients

100 g (4 oz) butter
 225 g (8 oz) plain flour
 50 g (2 oz) finely grated Parmesan
 1 red and 1 yellow pepper, diced into 4 cm
 pieces
 2 medium courgettes, sliced
 100 g (4 oz) aubergine, diced into 4 cm
 pieces
 15 ml (1 tbsp) olive oil
 100 g (4 oz) soft goat's cheese
 3 eggs, beaten
 75 ml (5 tbsp) creme fraiche or double cream
 15 ml (1 tbsp) chopped fresh parsley
 salt and pepper

Spicy Potatoes

Serves 4

Dish: 1 litre (2 pt) dish**Oven Accessory: glass turntable**

1. Cut the potatoes into large cubes and place in a large bowl with 6 tbsp water. Cover and cook on **HIGH** power for 6-8 mins. or until soft. Drain and set aside.
2. Mix the remaining ingredients together. Add the potatoes and mix well. Serve either hot or cold.

Mushroom Stroganoff

Serves 4

Dish: 3 litre (6 pt) dish**Oven Accessory: glass turntable**

1. Finely chop the onion + celery and place in a bowl with the oil and soften on **HIGH** power for 3-4 mins.
2. Add all other ingredients, except the cream, mix well. Cover and cook on **HIGH** power for 10 mins stirring well. When cooked stir in the sour cream and serve.

Goat's Cheese Tart with Roasted Vegetables

Serves 4

Dish: 23 cm (9") flan tin**Oven Accessory: glass turntable, metal tray**

1. Rub the butter into the flour until the mixture resembles fine breadcrumbs. Stir in the parmesan, add 2-3 tbsps cold water and mix to a firm dough.
2. Roll out and line the flan ring. Prick the base with a fork and allow to rest for 15 mins.
3. Cover the pastry with greaseproof, add baking beans and cook in a preheated oven on **Convection 200°C** for 10 mins. Remove the paper and beans and cook for a further 5 minutes or until cooked. Allow to cool.
4. Place the prepared vegetables on the Grill Accessory and drizzle with olive oil. Cook on **Combination: Grill 1 + SIMMER power** for 10-12 mins or until lightly browned. Turn halfway during cooking.
5. Place the vegetables in the flan case and dot teaspoons of the goat's cheese around the vegetables.
6. Beat together the eggs and creme fraiche until smooth, add the parsley and seasoning. Pour carefully over the filling.
7. Cook on **Combination: Convection 190°C + WARM power** for 20-25 mins. or until set and lightly browned.

Ingredients

15 ml (1 tbsp) oil
 1 onion, finely chopped
 1 green pepper, chopped
 1 chilli, chopped
 2 carrots, diced
 5 ml (1 tsp) chilli powder
 3 ml (½ tsp) cumin
 175 g (6 oz) bulgar wheat
 396 g (14 oz) can chopped tomatoes
 30 ml (2 tbsp) tomato puree
 450 ml (¾ pt) water
 396 g (14 oz) can red kidney beans, drained

Ingredients

2 eggs
 450 g (1 lb) potatoes
 100 g (4 oz) green cabbage
 1 onion
 75 g (3 oz) butter
 salt and black pepper
 300 ml (½ pt) cheese sauce
 75 g (3 oz) hazelnuts, chopped
 100 g (4 oz) granary breadcrumbs
 50 g (2 oz) cheddar cheese, grated

Ingredients

1 aubergine, sliced
 5 ml (1 tsp) salt
 1 courgette, sliced
 1 onion, sliced
 1 green pepper, trimmed and sliced
 1 clove of garlic, peeled and crushed
 396 g (14 oz) can of tomatoes
 30 ml (2 tbsp) olive oil
 salt and pepper to taste

Vegetarian Chilli

Serves 4

Dish: large casserole + lid**Oven Accessory: glass turntable**

1. Place oil, onion, pepper, chilli and carrots in a large casserole, cover and cook on **HIGH** power for 4-5 mins. or until softened.
2. Add chilli and cumin. Stir in bulgar wheat, chopped tomatoes, tomato puree and water. Cover and cook on **HIGH** power for 10 mins. Stir in red kidney beans, cover and cook on **HIGH** power for 2-3 mins.

Nutty Potato Crumble

Serves 6

Dish: large 25 cm (10") ovenproof dish**Oven Accessory: glass turntable + metal tray**

1. Hard boil the eggs (see page 48 for instructions for poached eggs). Thickly slice the potatoes, place in a casserole dish with 90 ml (6 tbsp) water and cook, covered on **HIGH** power for 10-12 mins. or until soft. Drain and set aside.
2. Shred the cabbage, thinly slice the onion and with 25 g (1 oz) of the butter put into a glass bowl. Cover and cook on **HIGH** power for 5-6 mins. or until softened.
3. Arrange potatoes, cabbage, onion and chopped eggs in an ovenproof dish. Season well. Pour over cheese sauce (see page 86). Mix together the nuts and breadcrumbs and crumble over the vegetables. Dot with remaining butter and sprinkle over the grated cheese.
4. Bake on **Combination: Convection 160°C + LOW power** for 20-25 mins. or until golden and piping hot.

Ratatouille

Serves 4

Dish: 20 cm (8") casserole**Oven Accessory: glass turntable**

1. In a colander sprinkle aubergine slices with salt and leave for 30 mins. to remove bitter juices. Rinse with cold water.
2. Combine all ingredients in a casserole. Cover and cook on **HIGH** power for 15 mins. or until vegetables are soft. Stir halfway through cooking time.

Ingredients

4 red peppers, large
 100 g (4 oz) unsmoked streaky bacon, diced
 100 g (4 oz) wholemeal bread, crusts removed and cut into small cubes
 50 ml (2 tbsp) fresh basil, finely shredded
 50 g (2 oz) Parmesan, grated
 150 g (5 oz) goat's cheese, diced
 100 g (4 oz) cherry tomatoes, halved
 50 ml (2 tbsp) olive oil

Ingredients

1 cauliflower, trimmed
 90 ml (6 tbsp) water
 25 g (1 oz) butter
 25 g (1 oz) flour
 3 ml (½ tsp) French mustard
 300 ml (1½ pt) milk
 seasoning to taste

Topping:

75 g (3 oz) grated red cheese
 15 ml (1 tbsp) brown breadcrumbs

Ingredients

2 medium aubergines, diced
 salt
 2 cloves of garlic, chopped
 pinch cayenne pepper
 10 ml (2 tsp) ground coriander
 5 ml (1 tsp) ground cumin
 5 ml (1 tsp) turmeric
 15 ml (1 tbsp) oil
 2.5 cm (1") root ginger, peeled and sliced
 1 small cauliflower, divided into florets
 2 medium potatoes, diced
 100 g (4 oz) green beans, sliced
 1 fresh chilli, deseeded and sliced
 150 ml (¼ pt) vegetable stock
 397 g (14 oz) can chopped tomatoes
 100 g (4 oz) cashew nuts

Red Peppers Stuffed with Bacon and Goat's Cheese

Serves 4

Dish: 20 cm (8") Pyrex® shallow dish**Oven Accessory:** glass turntable + metal tray

1. Cut a thin slice off the top of each pepper to remove the stalk and the seeds.
2. Place the bacon and bread in a bowl and cook uncovered on **HIGH** power for 4-5 mins., or until crisp.
3. Add the basil, Parmesan, goat's cheese and tomatoes. Stir well.
4. Spoon the stuffing into the peppers and arrange them closely together in the baking dish.
5. Spoon over the olive oil and cook on **Combination: TURBO-BAKE 250°C + Grill 3 + SIMMER** power for 15 minutes, or until the peppers are tender.

Cauliflower Cheese

Serves 4

Dish: shallow casserole**Oven Accessory:** glass turntable + metal tray

1. Place cauliflower upside down in a bowl. Add water. Cover and cook on **MEDIUM** power for 10 mins. or until tender. Drain.
2. Melt butter on **HIGH** power for 15-30 secs. Stir in flour and mustard. Cook for a further 15 secs. Add milk gradually. Stir well and season. Cook on **HIGH** power for 2-3 mins. or until sauce is thick and bubbling. Stir once halfway during cooking.
3. Stir in 60 g (4 tbsp) grated cheese. Pour the sauce over the cauliflower. Top with remaining cheese and breadcrumbs.
4. Cook on **Combination: Convection 220°C + WARM** power for 10-15 mins. or until golden brown.

Vegetable Curry

Serves 4

Dish: 3 litre (6 pt) casserole**Oven Accessory:** glass turntable

1. Sprinkle the aubergine liberally with salt in a colander. Stand for 30 mins. to remove bitter juices. Rinse well under cold water and drain.
2. Combine garlic, spices and oil in casserole, cover and cook on **HIGH** power for 2 mins.
3. Add all other ingredients to casserole, except cashews. Cover and cook on **HIGH** power for 10 mins. then **SIMMER** power for 30-40 mins. or until vegetables are soft. Stir occasionally.
4. Sprinkle with cashews and serve with boiled rice.

N.B. This recipe is best cooked in advance, chilled and then reheated to allow the flavours to develop.

Sauces

CONTAINER SIZE

Always use a container or jug at least twice the capacity of the sauce, to avoid boiling over.

COVERING

DO NOT cover sauces when cooking.

Ingredients

30 g (1 oz) butter
30 g (1 oz) flour
600 ml (1 pt) milk

Variations of White Sauce

Parsley

Onion

Cheese

Ingredients

30 ml (2 tbsp) custard powder
15 ml (1 tbsp) sugar
600 ml (1 pt) cold milk

Ingredients

3 egg yolks
30 ml (2 tbsp) white wine vinegar
100 g (4 oz) chilled, unsalted butter, cut into cubes
pepper

STIRRING – IMPORTANT

Sauces/gravy should be thoroughly stirred before, during and after cooking, to avoid any eruptions and to result in a smooth sauce.

REHEATING

Sauces can be made in advance and reheated by microwave. Reheat on HIGH power and stir halfway.

POWER LEVEL

Most sauces require HIGH Power for cooking. Sauces containing eggs should be cooked on SIMMER power.

WOODEN SPOONS

Do not leave wooden spoons in the sauce when cooking. The wood may dry out and burn. NEVER LEAVE metal spoons in the sauce.

White Pouring Sauce

Dish: 1 litre (2 pt) jug

Oven Accessory: glass turntable

1. Melt butter in jug on **HIGH** power for 20-40 secs.
2. Stir in the flour to make a roux.
3. Add the milk gradually stirring continuously until well combined.
4. Cook for 2 mins. on **HIGH** power. Stir and cook for a further 3 mins. Sauce should be smooth and glossy and coat the back of a spoon.

Stir 60 ml (4 tbsp) chopped parsley and 15 ml (1 tbsp) lemon juice into sauce halfway through cooking time.

Cook 1 small onion in the butter for 30 secs. on **HIGH** power before adding the flour and milk. Stir in 75 g (3 oz) grated cheese at the end of cooking time.

Custard

Dish: 1 litre (2 pt) jug

Oven Accessory: glass turntable

1. Mix together the custard powder, sugar and a little milk to form a smooth paste.
2. Blend in the remaining milk, whisking well.
3. Cook on **HIGH** power for 4-6 mins. Whisk well halfway through cooking time and again at the end.

Hollandaise Sauce

Dish: 1 litre (2 pt) jug

Oven Accessory: glass turntable

1. Place egg yolks and vinegar in a jug. Beat well.
2. Drop cubes of butter on top. Cook on **HIGH** power for 15 secs.
3. Whisk. Cook on **HIGH** power for 10 secs.
4. Whisk again and cook on **HIGH** power for 10 secs. Repeat 10 secs. stages until sauce is thick and creamy.
5. Season and serve immediately with salmon steaks or asparagus spears.

N.B. This sauce must not boil or eggs will curdle.

Ingredients

1 medium onion, finely chopped
 1 celery stick, finely chopped
 1 carrot, finely chopped
 25 g (1 oz) butter
 2 cloves garlic, crushed
 2 x 396 g (14 oz) cans of tomatoes
 3 ml ($\frac{1}{2}$ tsp) each of basil, oregano and ground bay leaves
 150 ml ($\frac{1}{4}$ pt) red wine or vegetable stock
 salt and pepper

Ingredients

25 g (1 oz) butter
 15 ml (1 tbsp) custard powder
 50g (2 oz) caster sugar
 150 ml ($\frac{1}{4}$ pt) orange juice
 150 ml ($\frac{1}{4}$ pt) double cream

Ingredients

2 Mars bars
 60 ml (4 tbsp) milk

Ingredients

meat or poultry dripping with sediment
 30 ml (2 tbsp) flour
 300 ml ($\frac{1}{2}$ pt) stock
 salt and pepper

Tomato Sauce

Serves 4

Dish: large casserole**Oven Accessory:** glass turntable

1. Place onion, celery, carrot and butter in casserole, cover and cook on **HIGH** power for 4-5 mins. or until soft. Add the garlic, tomatoes, herbs and wine or stock.
2. Re-cover and cook on **MEDIUM** power for 10-15 mins. Liquidise then press through a sieve for a smooth sauce.

Creamy Orange Sauce

Serves 4

Dish: 1 litre (2 pt) jug**Oven Accessory:** glass turntable

1. Melt butter on **HIGH** power for 30 secs. Stir in custard powder, sugar, orange juice and cream.
2. Cook on **HIGH** power for 2-3 mins. stirring occasionally, until mixture boils and thickens.

Mars Bar Sauce

Serves 4

Dish: 1 litre (2 pt) jug**Oven Accessory:** glass turntable

1. Cut each bar into four. Place in jug with the milk.
2. Cook on **HIGH** power for 2-3 mins. or until melted, stirring twice. Serve hot over ice-cream or sponge pudding.

*Gravy***Dish:** 1 litre (2 pt) jug**Oven Accessory:** glass turntable

1. Scrape dripping and sediment from roasting dish into the jug.
2. Stir flour into dripping.
3. Gradually blend in stock.
4. Cook on **HIGH** power for 2-3 mins. stirring halfway through. Season and serve.

Pastry

Ingredients

225 g (8 oz) plain flour
pinch salt
100 g (4 oz) margarine
45 ml (3 tbsp) cold water

Ingredients

50 g (2 oz) butter
150 ml (1/4 pt) water
65 g (2 1/2 oz) plain flour sifted
2 eggs, lightly beaten

Ingredients

225 g (8 oz) self-raising flour
3 ml (1/2 tsp) salt
100 g (4 oz) shredded suet
105 ml (7 tbsp) cold water

Ingredients

1 small potato, thinly sliced
200 g (7 oz) puff pastry
1 small onion, sliced
small apple, peeled, cored and sliced
salt and pepper to taste
75 g (3 oz) cheese, grated or crumbled, eg.
Stilton, Roule etc.

Glaze:

1 egg, beaten

Shortcrust Pastry

1. Place flour and salt into a mixing bowl. Rub the margarine into the flour until the mixture resembles fine breadcrumbs.
2. Sprinkle the water over and mix in using a round bladed knife.
3. Knead lightly for a few seconds until it forms a firm, smooth dough. If possible, rest for 15 mins. before rolling out.

Choux Pastry

Dish: large jug

Oven Accessory: glass turntable

1. Place butter and water in a large jug and heat on **HIGH** power for 2-3 mins. or until boiling.
2. Immediately tip in all the flour and beat well until mixture is smooth. Cool slightly.
3. Beat in eggs one at a time, beating vigorously until mixture is smooth and glossy.

Suetcrust Pastry

1. Mix together flour, salt and suet.
2. Add water and mix to a soft dough. Knead lightly until smooth.

Savoury Potato Plait

Serves 4-6

Dish: baking sheet (round)

Oven Accessory: glass turntable + metal tray

1. Cook potato in a shallow dish with 60 ml (4 tbsp) water, covered for 3 mins. on **HIGH** power. Drain.
2. Roll out the pastry to an oblong 25 x 27 cm (10 x 11"). Lift onto baking sheet. With a knife, cut each side of the long edges diagonally at 2.5 cm (1") intervals, to give strips which will become plaits.
3. Arrange layers of potato, onion and apple down the centre of the pastry. Season. Sprinkle over the cheese.
4. Brush the pastry strips with beaten egg and fold alternately over the mixture to form a plait.
5. Glaze the complete plait with beaten egg. Preheat oven on **Convection 210°C**. Cook on **Combination: Convection 230°C + SIMMER power** for 15-20 mins. or until crisp and golden.

Ingredients

350 g (12 oz) shortcrust pastry
beaten egg to glaze

Filling:

350 g (12 oz) lean minced steak
1 medium onion, chopped
450 ml (¾ pt) hot beef stock
15 ml (1 tbsp) tomato puree
5 ml (1 tsp) yeast extract (Marmite®)
salt and pepper
10 ml (2 tsp) gravy thickening

Ingredients

1 quantity of suet pastry (page 88)
75 ml (5 tbsp) seedless raspberry jam
milk to glaze

Ingredients

30 ml (2 tbsp) caster sugar
5 ml (1 tsp) cinnamon
30 ml (2 tbsp) sultanas
2 cooking apples, peeled, cored and sliced
15 ml (1 tbsp) lemon juice
350 g (12 oz) puff pastry

Minced Beef and Onion Pie

Serves 4

Dish: large casserole + lid + 20 cm (8") pie plate

Oven Accessory: glass turntable + metal tray

1. Combine all filling ingredients except thickening in casserole dish. Cover and cook on **HIGH** power for 5 mins. then **MEDIUM** power for 15 mins. Mix gravy thickening with water and stir into meat. Leave to cool. Preheat oven on **Convection 210°C**.
2. Roll out half the pastry to fit pie plate. Remove mince with a slotted spoon, reserving gravy for serving and fill pie. Roll out remaining pastry for a lid and place on top of mince, sealing the edges with water. Cut 2 slits in top of pastry and glaze top with egg. Cook on **AUTO PROGRAM PASTRY**. Approx. cooking time 20-25 mins. or **Combination: Convection 220°C + SIMMER power** for 20-25 mins. or until cooked.

Baked Jam Roly Poly Pudding

Serves 4

Dish: 1 kg (2 lb) loaf dish

Oven Accessory: glass turntable + metal tray

1. Roll out pastry to approx. 23 x 32 cm (9 x 13").
2. Spread the jam over the pastry leaving 1cm (½") border all round. Brush the edges with milk and roll the pastry up evenly, starting at one short side and sealing the edges well.
3. Brush top with milk and place in loaf dish. Preheat oven on **Convection 210°C**. Cook on **Combination: Convection 220°C + SIMMER power** for 15-20 mins. or until golden.

Apple Pie

Serves 4-6

Dish: 20 cm (8") pie plate

Oven Accessory: glass turntable + metal tray

1. Mix together sugar, cinnamon and sultanas.
2. Toss apples in lemon juice. Sprinkle sugar mixture over.
3. Divide pastry in half. Roll out half and line base of plate.
4. Place apple filling on top of pastry. Roll out remainder of pastry and cut to a circle for lid.
5. Seal edges, crimp and brush top with egg. Preheat oven on **Convection 210°C**. Cook on **AUTO PROGRAM PASTRY**. Approximate cooking time 20-24 mins. or **Combination: Convection 220°C + SIMMER power** for 20-25 mins. or until cooked.

Ingredients

1 quantity of choux pastry (page 88)
150 ml (1/4 pt) whipping cream
100 g (4 oz) icing sugar, sieved
10 ml (2 tsp) cocoa powder
15 ml (1 tbsp) hot water

Ingredients

225 g (8 oz) shortcrust pastry (page 88)

Filling:

45 ml (3 tbsp) cornflour
150 ml (1/4 pt) water
2 lemons, juice and grated rind of
100 g (4 oz) sugar
2 egg yolks

Meringue:

100 g (4 oz) caster sugar
2 egg whites

Ingredients

175 g (6 oz) shortcrust pastry
45 ml (3 tbsp) jam
100 g (4 oz) butter
100 g (4 oz) sugar
2 eggs
2 drops almond essence
100 g (4 oz) self raising flour
25 g (1 oz) ground almonds
25 g (1 oz) flaked almonds

Chocolate Eclairs

Makes 16

Dish: baking sheet (round)

Oven Accessory: glass turntable + metal tray + low rack

1. Place the choux pastry into a forcing bag fitted with a plain 1 cm (1/2") nozzle. Pipe fingers 9 cm (3 1/2") long on lightly greased, slightly wetted baking sheet.
2. Pre-heat the oven on **Convection 210°C** and cook for approximately 15-20 mins. Pierce each eclair and return for a further 5-10 mins. to crisp if necessary. When cooked cool on a wire rack.
3. Whip the cream until stiff and fill the eclairs.
4. Dissolve cocoa in hot water and stir into icing sugar, beating well until smooth, add extra water if required. Ice the filled eclairs and leave until set.

Lemon Meringue Pie

Serves 6

Dish: 20 cm (8") flan dish

Oven Accessory: glass turntable + metal tray + low rack

1. Roll out pastry to line flan dish. Prick all over with a fork. Chill.
2. Cook on **HIGH** power for 3-4 mins. or until dry.
3. Place cornflour, water and lemon juice and rind in a jug. Heat on **HIGH** power for 2 mins. Whisk until smooth. Add sugar. Cool slightly. Add egg yolks. Mix well. Pour into pastry case.
4. Whisk egg whites stiffly. Add sugar gradually – whisking after each addition.
5. Pile meringue onto lemon filling. Pre-heat oven on **Convection 190°C** and cook for 25-30 mins. until lightly browned.

Bakewell Tart

Serves 6

Dish: 23 cm (9") flan dish

Oven Accessory: glass turntable + metal tray + low rack

1. Roll out pastry to line dish. Rest for 10 mins. Cook on **Combination: TURBO-BAKE 250°C + Grill 3 + SIMMER** power for 8-9 mins. or until beginning to dry or bake blind on **Convection 210°C** for 20 mins. Spread with jam.
2. Cream butter and sugar. Gradually beat in eggs, essence and fold in flour and ground almonds. Spread over the jam and sprinkle with flaked almonds.
3. Cook on **Combination: TURBO-BAKE 250°C + GRILL 3 + LOW** power for 8 mins or until just cooked. Stand for 5 mins. before serving.

Ingredients

Pastry:

175 g (6 oz) plain flour
50 g (2 oz) caster sugar
100 g (4 oz) butter
1 egg

Filling:

1 lb plums
100 g (4 oz) Amaretti biscuits, crushed

Glaze

3 tbsp glacé icing

Tarte Normande

Serves 6

Dish: 24 cm (9") flan tin

Oven Accessory: glass turntable + metal tray
(+ low rack if using Convection)

1. Rub the butter into the flour and sugar, then mix to a smooth dough with the egg. Knead lightly, cover and allow to rest in the refrigerator. (Food processor can be used.)
2. Cut the plums in half and remove the stones, then press some of the crushed biscuit into the cavity in each half.
3. Roll out just over half the pastry thinly and line the flan tin. Sprinkle the remaining crushed biscuits over the base and arrange the filled plums over the top. Dampen the edges with water, roll out the rest of the pastry and fit over the top. Seal the edges together.
4. Drizzle the glacé icing (pouring consistency) over the surface and allow to rest in the refrigerator for 20 mins. Bake in a preheated oven on **Convection 180°C** for 40-45 mins. or until the top is browned and the juices bubble through, or on **Combination: Convection 200°C + WARM power** for 25 mins.

Ingredients

Pastry:

100 g (4 oz) margarine
25 g (1 oz) butter
175 g (6 oz) plain flour
pinch salt

Filling:

3 eggs
15 ml (1 tbsp) milk
150 ml (1/4 pt) maple/corn syrup
50 g (2 oz) butter
175 g (6 oz) demerara sugar
3 ml (1/2 tsp) vanilla essence
175 g (6 oz) pecan nuts

Pecan Pie

Serves 8

Dish: 23 cm (9") flan tin

Oven Accessory: glass turntable + metal tray + low rack

1. Cream together fats. Gradually stir in the sieved flour and salt, to form a smooth dough and chill.
2. Place in flan tin, press mixture evenly over the base and up the sides. Pre-heat oven on **Convection 200°C** and bake blind for 15-20 mins. or until dry.
3. Beat together the eggs and milk in a bowl.
4. In a large Pyrex® bowl place the maple syrup, butter, sugar and vanilla essence. Cook on **HIGH** power for 2-3 mins. or until the sugar has dissolved.
5. Beat the sugar mixture into the eggs.
6. Place the pecan nuts into the pastry case and pour over the syrup mixture.
7. Cook on **Convection 150°C** for 30-35 mins. or until set.

Ingredients

125 g (1 oz) butter
200 g (7 oz) leeks, chopped
50 g (2 oz) plain flour
450 ml (3/4 pt) milk
150 g (5 oz) stilton
400 g (14 oz) cooked chicken, cubed
250 g (9 oz) ready prepared shortcrust pastry, chilled

Chicken & Stilton Pie

Serves 4

Dish: 20 cm (8") gratin dish

Oven Accessory: glass turntable + metal tray

1. Place the butter and leeks in a bowl, cover and cook on **HIGH** power for 4-5 minutes or until soft.
2. Add the flour, stir well then gradually add the milk and cook on **HIGH** power for 4 mins stirring throughout or until the sauce has thickened. Preheat the oven on **Convection 210°C**.
3. Finely chop the cheese and add to the sauce, mix in the chicken.
4. Grate the pastry on top of the chicken mixture and cook on **Combination: Convection 210°C + SIMMER power** for 25-30 mins. or until cooked and browned.

Desserts

Ingredients

butter for greasing
225 ml (8fl. oz) evaporated milk
350 ml (12fl. oz) water
50 g (2 oz) short grain rice
25 g (1 oz) caster sugar

Ingredients

150 g (5 oz) self-raising flour
pinch of salt
50 g (2 oz) caster sugar
50 g (2 oz) suet
1 egg
150 ml (1/4 pt) milk
30 ml (2 tbsp) jam or golden syrup
Optional: Add 1 tbsp of sultanas.

Ingredients

15 ml (1 tbsp) brown sugar
small can of pineapple slices, drained
4 glacé cherries, halved
100 g (4 oz) margarine
100 g (4 oz) caster sugar
2 eggs
100 g (4 oz) self-raising flour
30 ml (2 tbsp) milk

Creamy Rice Pudding

Serves 2

Dish: large bowl

Oven Accessory: glass turntable

1. Butter the bowl. Mix the milk and water together. Pour into the bowl and stir in the rice and sugar. Cover.
2. Cook on **HIGH** power for 5-6 mins. or until the liquid is boiling.
3. Immediately reduce to **SIMMER** power and cook for 30-35 mins. or until starting to thicken. Stir with a fork to break up any lumps after every 15 mins. and at the end of the cooking time.
4. Leave to stand for 5 mins. to thicken further before serving.

Steamed Suet Sponge Pudding

Serves 4

Dish: 1 litre (2 pt) pudding basin

Oven Accessory: glass turntable

1. In a mixing bowl, sift together the flour and salt. Stir in sugar and suet.
2. Make a well in the centre and add beaten egg and milk. Mix to a soft dropping consistency.
3. Put the jam in the base of the greased pudding basin and pour pudding mixture over. Cook on **HIGH** power for 5-5½ mins. until firm.

Pineapple Upside Down Pudding

Serves 4

Dish: 20 cm (8") round dish, lightly greased

Oven Accessory: glass turntable + metal tray

1. Sprinkle sugar on base of dish, arrange pineapple slices and cherry halves on top of sugar in the base.
2. Cream together the margarine and sugar until light and fluffy. Beat in the eggs gradually. Fold in the flour and mix to a soft consistency with the milk.
3. Spoon the mixture over the pineapple and cook on **Combination: Convection 170°C + WARM power** for 25-30 mins. or until cooked and golden brown. Leave to cool slightly before turning upside down on a serving plate.

Ingredients

150 ml ($\frac{1}{4}$ pt) water
 100 g (4 oz) caster sugar
 3 eggs
 3 ml ($\frac{1}{2}$ tsp) vanilla essence
 30 ml (2 tbsp) caster sugar
 300 ml ($\frac{1}{2}$ pt) cold milk

Ingredients

100 g (4 oz) butter or margarine
 50 g (2 oz) light brown sugar
 30 ml (2 tbsp) golden syrup
 225 g (8 oz) rolled oats
 450 g (1 lb) plums, stoned and thinly sliced
 5 ml (1 tsp) ground cinnamon

Ingredients

75 g (3 oz) butter
 175 g (6 oz) digestive biscuits, crushed
 5 ml (1 tsp) cinnamon

Filling:

175 g (6 oz) cream cheese
 175 g (6 oz) cottage cheese
 75 g (3 oz) caster sugar
 25 g (1 oz) cornflour
 1 lemon, grated rind of
 150 ml ($\frac{1}{4}$ pt) soured cream
 2 eggs, separated
 50 g (2 oz) sultanas

Crème Caramel

Serves 4

Dish: 15 cm (6") soufflé dish**Oven Accessory: glass turntable**

1. Put water and the 100 g (4 oz) of sugar in a soufflé dish. Cook on **HIGH** power for 2-3 mins. or until sugar has dissolved. Continue cooking on **HIGH** power for 6-10 mins. until sugar has caramelised, keeping a close watch as it can burn easily. **CAUTION** – Remove from oven very carefully (the base will be extremely hot) and cool.
2. Beat eggs, essence, caster sugar and milk together and strain over caramel.
3. Cook on **SIMMER** power for 13-15 mins. or until starting to set around edge of dish. The custard will continue to set on cooling. Refrigerate for several hours before turning out.

N.B. Individual Crème Caramels can be prepared by dividing the above ingredients between 4 individual 3½" ramekins. Dissolve sugar in the water on **HIGH** power for 1-2 mins before putting in ramekins. Cook the sugar solution for approx. 8-9 mins. on **HIGH** power, then cook the custards for approx. 11-13 mins. on **SIMMER** power.

Plum & Oat Layer

Makes 8 slices

Dish: 20 cm (8") ceramic flan dish**Oven Accessory: glass turntable + metal tray + low rack**

1. Place the butter, sugar and syrup in a bowl. Cook on **HIGH** power for 1-2 mins. or until melted. Stir in the rolled oats.
2. Spread half the oat mixture into the dish. Arrange the plums over the top in overlapping rows and sprinkle with cinnamon.
3. Sprinkle the remaining oat mixture over the plums and gently press down.
4. Cook on **Combination: TURBO-BAKE 250°C + Grill 3 + LOW power** for 8-10 mins. or until the mixture is firm and golden brown.
5. Cut into slices while hot, then allow to cool in the dish.

Baked Lemon Cheesecake

Serves 8

Dish: 20 cm (8") deep Pyrex® dish, greased**Oven Accessory: glass turntable + metal tray + low rack**

1. Melt butter on **HIGH** power for 1-2 mins. or until melted. Stir in biscuits and cinnamon. Press into base of dish.
2. Blend cream cheese and cottage cheese together until smooth, add sugar, cornflour, lemon rind, soured cream and egg yolks.
3. Whisk egg whites until stiff and carefully fold into the cheese mixture. Sprinkle the sultanas over the biscuit base and pour over the filling mixture.
4. Cook on **Combination: TURBO-BAKE 250°C + Grill 3 + LOW power** for 8-9 mins. or until the filling has set and is golden brown. Chill before serving.

Ingredients**Pudding:**

75 g (3 oz) plain chocolate
 30 ml (2 tbsp) milk
 175 g (6 oz) margarine
 175 g (6 oz) light muscovado sugar
 2 eggs
 175 g (6 oz) fresh white breadcrumbs
 30 ml (2 tbsp) cocoa powder

Sauce:

225 g (8 oz) vanilla flavoured toffees
 150 ml (1/4 pt) milk
 15 g (1/2 oz) butter

Ingredients

6 slices of bread, buttered and cut in half diagonally
 75 g (3 oz) mixed dried fruit
 450 ml (3/4 pt) milk
 3 eggs
 25 g (1 oz) caster sugar
 3 ml (1/2 tsp) nutmeg

Ingredients

4 medium sized apples
 30 ml (2 tbsp) sugar
 25-50 g (1-2 oz) mixed dried fruit
 25 g (1 oz) butter

Chocolate Saucy Pudding

with toffee sauce

Dish: 1.2 litre (2 pt) pudding basin**Oven Accessory:** glass turntable

1. Line the base of a 1.2 litre (2 pt) pudding basin with a circle of greaseproof paper.
2. Melt the chocolate with the milk on **HIGH** power for 1 min. – mix until smooth.
3. Mix the margarine and sugar together, add the cooled chocolate and eggs.
4. Add the breadcrumbs and cocoa powder and mix well.
Fill the basin with the mixture and cook on **HIGH** power for 6-7 mins. or until cooked. Leave to stand for 5 mins. before turning out.
5. Meanwhile, prepare the sauce by combining all ingredients in a large jug and cook on **HIGH** power for 2-3 mins. or until smooth. Stir vigorously and pour over the pudding.

Bread and Butter Pudding

Serves 4

Dish: 20 x 25 cm (8 x 10") oblong, greased dish**Oven Accessory:** glass turntable + metal tray

1. Arrange the bread and fruit in the prepared dish.
2. Warm the milk for 3 mins. on **MEDIUM** power but do not allow to boil.
3. Beat together the eggs and sugar, add the milk, stirring well.
4. Pour the mixture over the bread, sprinkle with nutmeg and leave to stand for 15 mins. Cook on **Combination: Convection 190°C + WARM power** for 15-20 mins. or until set and browned.

Baked Apples

Serves 4

Dish: 20 cm (8") shallow dish**Oven Accessory:** glass turntable

1. Core the apples and score the skin around the middle.
2. Mix together the sugar and fruit and fill the centres of the apples.
3. Dot the top with butter. Stand the apples in a suitable dish and cook on **HIGH** power for 5½-7 mins. Stand for 5 mins. before serving.

NB The apples will look quite green when removed from the oven, but they should feel slightly soft when tested with a sharp knife. During the standing time, the colour will become dull and the apples will be tender. The apples will overcook very easily, so take care to undercook slightly.
 For 1 baked apple cook for 2-3 mins. For 2 baked apples cook for 3-5 mins.

Ingredients

675 g (1 lb 8 oz) fresh fruit,
prepared (e.g. apples, plums, rhubarb,
gooseberries, blackcurrants)
sugar to taste

Crumble Topping:

75 g (3 oz) butter
175 g (6 oz) plain flour
75 g (3 oz) sugar

Fruit Crumble

Serves 4

Dish: suitable sized, heatproof dish**Oven Accessory:** glass turntable + metal tray + low rack

1. Layer prepared fruit in the dish. Add sugar to taste, depending on the sharpness of the fruit.
2. Rub butter into the flour until mixture resembles fine breadcrumbs. Stir in the sugar.
3. Sprinkle the crumble over the fruit, so that it is completely covered.
4. Cook on **Combination: CONVECTION 230°C + SIMMER power*** for 15 - 20 minutes, or until golden brown.

* Or: For NN-A850 use Auto Crumble program.

Ingredients

1 cooking apple, peeled and grated
1 carrot, peeled and grated
1 orange, juice and grated rind of
400 g (14 oz) mixed dried fruit
45 ml (3 tbsp) brandy
15 ml (1 tbsp) black treacle
50 g (2 oz) self-raising flour
pinch of salt
15 ml (1 tbsp) cocoa
5 ml (1 tsp) mixed spice
3 ml (½ tsp) nutmeg
100 g (4 oz) shredded suet
150 g (5 oz) fresh breadcrumbs
50 g (2 oz) mixed peel
50 g (2 oz) flaked almonds
2 eggs, beaten

Christmas Pudding

Serves 6-8

Dish: 1.3 litre (2½ pt) pudding basin lightly greased**Oven Accessory:** glass turntable

1. Place apple and carrot in a large bowl. Cover and cook on **HIGH** power for 5 mins. Beat well to make a thick puree.
 2. Stir in juice, rind and mixed fruit. Cook on **HIGH** power for 2 mins. Stir in brandy and treacle. Stand for 5 mins. Beat in rest of ingredients.
 3. Press into the pudding basin. Cover with greaseproof paper and cook on **HIGH** power for 4 mins. Stand for 5 mins. Cook on **HIGH** power for another 2 mins. or until just firm.
- NB. One of the advantages of using your microwave to make this traditional pudding is that it can be made the week before Christmas and stored in a cool dry place. Do not attempt to make the pudding earlier than this, since the flavour will not improve with keeping, unlike a traditionally steamed pudding.

Ingredients

75 g (3 oz) butter
75 g (3 oz) golden syrup
75 g (3 oz) soft dark sugar
4 bananas, peeled and sliced
150 ml (¼ pt) double cream
150 ml (¼ pt) milk
250 g (9 oz) Italian bread i.e. Panettone,
sliced

*Italian Banana and Toffee Pudding***Dish:** 21 cm x 23 cm (8" x 9") Pyrex® dish**Oven Accessory:** glass turntable + metal tray + low rack

1. Place the butter, syrup and sugar in a bowl and cook on **HIGH** power for 3 - 4 minutes, or until bubbling. Stir frequently. Stir in the bananas.
2. Place the cream and milk in a bowl and cook on **HIGH** power for 1 - 2 minutes, or until warm.
3. Place half the sliced bread in the base of the dish and pour over half of the warm milk.
4. Spoon over half of the banana and toffee mixture, and then repeat the layers.
5. Cook on **Combination: TURBO-BAKE 250°C + Grill 3 + WARM power** for 15 minutes, or until golden brown.

Baking Guidelines

Cakes marked with an asterisk * are suitable for use on AUTO CAKE program on NN-A880 oven.

COVERING

Just as you wouldn't cover a cake baked in a traditional oven, NEVER cover your cakes.

DISH SIZE/SHAPE

Always use the exact dish size stated in the following recipes, otherwise cooking times and results will be affected.

Ingredients

800 g (1 lb 12 oz) currants
375 g (13 oz) sultanas
375 g (13 oz) raisins
250 g (9 oz) glacé cherries
150 g (5 oz) almonds, flaked
600 g (1 lb 5 oz) plain flour
5 ml (1 tsp) mixed spice
5 ml (1 tsp) cinnamon
500 g (1 lb 2 oz) butter or margarine
500 g (1 lb 2 oz) sugar
½ lemon, grated rind of
9 eggs
45 ml (3 tbsp) brandy

Ingredients

175 g (6 oz) butter or margarine
175 g (6 oz) caster sugar
3 eggs
175 g (6 oz) self-raising flour

MIXING/BEATING

Cakes cooked by microwave need to be well mixed, but not over beaten. Generally it is unnecessary to cream butter and sugar or beat eggs in an electric mixer or food processor. Do not attempt to cook whisked/fatless sponges, or any cakes containing whisked egg white.

EGGS

The following recipes have been tested using medium eggs. Using a different size of egg may affect cooking times.

Celebration Cake

Dish: 27 cm (11") round tin, greased and lined

Oven Accessory: glass turntable + metal tray + low rack

1. Prepare the tin by lining with a double layer of greaseproof paper on the inside and tie a double band of brown paper around the outside.
2. Mix together all the fruit and nuts.
3. Sift flour and spices.
4. Cream the butter, sugar and lemon rind until pale and fluffy. Add the eggs one at a time, beating well after each addition.
5. Fold in half the flour using a metal spoon, then fold in the rest and add the brandy. Lastly fold in the fruit.
6. Spoon mixture into the tin and spread evenly, removing all air pockets. Make a small dip in the centre.
7. Cook in a pre-heated oven on **Convection 140°C** for 2 hrs. then reduce temperature to 130°C for 2½ hours or until cooked. To avoid overbrowning on top, cover with several thicknesses of greaseproof paper secured with cocktail sticks after 1½ hours. Leave cake to cool in tin and store wrapped tightly in tin foil for approx. 1-2 months before use.

Victoria Sandwich

Dish: 20 cm (8") cake tin, greased and lined

Oven Accessory: glass turntable + metal tray + low rack

1. Cream butter and sugar until pale and fluffy. Add the eggs a little at a time beating well after each addition.
2. Fold in half the flour, using a metal spoon, then fold in the remaining flour.
3. Spoon the mixture into the tin and level with a knife.
4. Cook in a pre-heated oven on **Convection 180°C** for 30-35 mins. or until cooked.
5. When the cake is cool, cut in half horizontally and sandwich together with cream and jam and dust with icing sugar or fill with a filling of your choice.

Ingredients

225 g (8 oz) plain flour
 pinch salt
 10 ml (2 tsp) ground ginger
 10 ml (2 tsp) baking powder
 3 ml (½ tsp) bicarbonate of soda
 100 g (4 oz) soft brown sugar
 75 g (3 oz) butter or margarine
 75 g (3 oz) treacle
 75 g (3 oz) golden syrup
 150 ml (¼ pt) milk
 1 egg, beaten

Ingredients

150 g (5 oz) butter
 10 ml (2 tsp) grated lemon rind
 125 g packet of cream cheese
 225 g (8 oz) caster sugar
 3 eggs, beaten
 100 g (4 oz) plain flour
 100 g (4 oz) self-raising flour
 150 g (5 oz) sultanas
 150 g (5 oz) glacé cherries

Ingredients

250 g (9 oz) butter
 225 g (8 oz) caster sugar
 5 eggs
 275 g (10 oz) plain flour
 30 ml (2 tbsp) baking powder
 salt
 grated rind of an orange
Syrup:
 125 ml (4 fl.oz) fresh orange juice
 15 ml (1 tbsp) grated orange rind
 75 g (3 oz) icing sugar

*Gingerbread **

Dish: 18 cm (7") square tin lined with 3 layers of greaseproof paper

Oven Accessory: glass turntable + metal tray

1. Sift the flour, salt, ginger, baking powder and bicarbonate of soda.
2. Warm the sugar, fat, treacle and syrup on **HIGH** power for 30-60 secs.
3. Whisk the milk and egg together. Make a well in the centre of the dry ingredients and pour in the liquid and syrup, mixing thoroughly.
4. Pour the mixture into the cake tin and cook on **Combination: Convection 160°C + WARM power** for 30-35 mins. or until just firm.

*Fruity Cream-cheese Cake **

Dish: 20 cm (8") round cake tin, lined

Oven Accessory: glass turntable + metal tray

1. Cream together butter, lemon rind, cream cheese and sugar until light and fluffy.
2. Add eggs a little at a time beating well after each addition.
3. Fold in sifted flours, sultanas and quartered cherries. Spread mixture into tin. Cook on **Combination: Convection 160°C + WARM power** for 45-50 mins. or until cooked.

*Orange Syrup Cake **

Dish: 23 cm (9") round tin, base lined

Oven Accessory: glass turntable + metal tray

1. Beat butter and sugar until light and creamy. Gradually beat in the eggs.
2. Sift the flour, baking powder and salt over the creamed mixture and lightly fold in with the finely grated rind of one orange.
3. Turn the mixture into the prepared tin and cook on **Combination: Convection 160°C + SIMMER power** for 20-25 mins. or until cooked.
4. Meanwhile, heat the orange juice, orange rind and icing sugar on **HIGH** power for 2-3 mins. or until the sugar dissolves.
5. When cake is cooked, remove from the oven. Prick all over with a skewer and pour over the syrup. Leave overnight before removing from the tin.

Ingredients

250 g (9 oz) plain flour
 10 ml (2 tsp) bicarbonate of soda
 10 ml (2 tsp) baking powder
 10 ml (2 tsp) cinnamon
 10 ml (2 tsp) nutmeg
 250 g (9 oz) dark brown sugar
 225 ml (8 fl.oz) vegetable oil
 3 eggs, beaten
 350 g (12 oz) carrots, grated
 75 g (3 oz) sultanas
Cream Cheese Topping:
 75 g (3 oz) butter
 100 g (4 oz) cream cheese
 225 g (8 oz) icing sugar

Ingredients

175 g (6 oz) margarine
 175 g (6 oz) brown sugar
 3 eggs
 150 g (5 oz) wholemeal self raising flour
 100 g (4 oz) self raising flour
 Almond essence
 450 g (1 lb) cooking apples, peeled, cored
 and thinly sliced
 Juice of $\frac{1}{2}$ a lemon
 25 g (1 oz) brown sugar
 2 ml ($\frac{1}{4}$ tsp) nutmeg
 3 ml ($\frac{1}{2}$ tsp) cinnamon
 Slivered almonds

Ingredients

1 banana, large
 3 ml ($\frac{1}{2}$ tsp) vanilla flavouring
 75 g (3 oz) butter
 100 g (4 oz) granulated sugar
 150 g (5 oz) self-raising flour
 3 ml ($\frac{1}{2}$ tsp) salt
 $1\frac{1}{2}$ ml ($\frac{1}{4}$ tsp) bicarbonate of soda
 2 eggs

Carrot Cake ***Dish: 23 cm (9") round tin, base lined****Oven Accessory: glass turntable + metal tray**

1. Sieve the flour, bicarbonate of soda and baking powder into a bowl with the cinnamon and nutmeg.
2. Mix in the brown sugar and make a well in the centre.
3. Add the oil and beaten eggs. Beat well until all the ingredients are combined. Stir in the grated carrot and sultanas, spoon into the prepared cake tin and cook on **Combination: Convection 160°C + WARM power** for 40 mins. or until cooked and well risen. Allow to cool in the tin.
4. Cream the butter and cream cheese until smooth. Stir in sieved icing sugar.
5. Decorate the cooled cake with the cream cheese topping.

Spicy Apple Cake ***Serves 10-12****Dish: 20 cm (8") round cake tin, lined****Oven Accessory: glass turntable + metal tray**

1. Cream together margarine and sugar until light and fluffy, gradually add the beaten eggs.
2. Fold in the flours and a few drops of almond essence.
3. In a separate bowl combine apple slices, lemon juice, sugar, nutmeg and cinnamon. Mix well.
4. Place $\frac{2}{3}$ rds of cake mixture into prepared tin. Arrange the drained apple mixture on top, leaving a space around the edge. Top with remaining cake mixture, sprinkle with almonds and cook on **Combination: Convection 160°C + WARM power** for 45-50 minutes or until cooked.

Banana Cake ***Dish: 18 cm (7") cake tin, lined with greaseproof paper****Oven Accessory: glass turntable + metal tray**

1. Peel the banana and mash until smooth with the vanilla flavouring.
2. Place the butter and sugar in a bowl and melt on **HIGH** power for 1 minute, or until soft.
3. Stir in the flour, salt and bicarbonate of soda. Beat in the eggs and mashed Banana.
4. Spoon into the prepared cake tin and cook on **Combination: CONVECTION 160°C + WARM power** for 20 minutes, or until cooked.

Ingredients

100 g (4 oz) currants
 100 g (4 oz) sultanas
 100 g (4 oz) raisins
 50 g (2 oz) whole almonds, blanched and chopped, reserve 6 whole for decoration
 225 g (8 oz) butter or margarine
 225 g (8 oz) soft brown sugar
 grated rind of one lemon
 4 eggs
 275 g (10 oz) plain flour
 100 g (4 oz) chopped mixed peel.

Ingredients

100 g (4 oz) soft margarine
 100 g (4 oz) caster sugar
 2 eggs, beaten
 115 g (4½ oz) self raising flour
 2 ml (¼ tsp) salt
 3 ml (½ tsp) mixed spice
 15 ml (1 tbsp) Camp coffee essence
 30 ml (2 tbsp) milk
 10 ml (2 tsp) black treacle
 50 g (2 oz) chopped walnuts

Icing:

50 g (2 oz) soft margarine
 225 g (8 oz) icing sugar
 15 ml (1 tbsp) Camp coffee essence
 15 ml (1 tbsp) water
 15 ml (1 tbsp) milk

Ingredients

75 g (3 oz) self-raising flour
 75 g (3 oz) porridge oats
 50 g (2 oz) dark muscovado sugar
 75 g (3 oz) butter
For the Topping:
 25 g (1 oz) butter
 3 eggs, beaten
 175 g (6 oz) light muscovado sugar
 150 g (5 oz) raisins
 75 g (3 oz) dessicated coconut
 1 lemon, grated rind plus 30 ml juice

*Dundee Cake ****Dish: 20 cm (8") round tin, greased and lined****Oven Accessory: glass turntable + metal tray**

1. Mix the chopped nuts, fruit and flour together.
2. Cream the fat, sugar and lemon rind until pale and fluffy. Beat in the eggs one at a time.
3. Fold in the flour, fruit, peel and nuts. Spoon mixture into tin and hollow out the centre slightly. Split the reserve almonds, and arrange on top. Cook on **Combination: Convection 160°C + WARM power** for 55 - 60 mins.

*Coffee Walnut Cake ****Dish: 18 cm (7") round cake tin, greased and lined****Oven Accessory: glass turntable + metal tray**

1. Cream margarine and sugar until light and fluffy. Gradually add the eggs. Fold in the dry ingredients. Add coffee essence, milk, treacle and walnuts. Stir well.
2. Spoon into tin and cook on **Combination: Convection 160°C + WARM power** for 25-30 mins. Cool. Cut in half.
3. Beat all icing ingredients together until smooth. Sandwich cake together with half the icing and spread the remainder over the top. Decorate with whole walnuts.

*Lemon and Raisin Flapjacks***Dish: 21 cm x 23 cm (8" x 9") Pyrex® dish, greased****Oven Accessory: glass turntable + metal tray + low rack**

1. Place the flour, oats and sugar in a bowl and rub in the butter. Press the mixture into the greased dish and press until smooth.
2. Cook on **HIGH** power for 3 mins. or until firm. Allow to cool.
3. Place the butter in a small bowl and cook on **HIGH** power for 30 - 60 seconds or until melted.
4. Mix all the topping ingredients together.
5. Pour over the base and cook on **Combination: TURBO-BAKE 250°C + Grill 3 + SIMMER power** for 8 - 9 minutes or until firm and golden brown. Divide into equal pieces and allow to cool.

Ingredients**Basic Cookie Dough:**

100 g (4 oz) butter
 100 g (4 oz) caster sugar
 1 egg, beaten
 175 g (6 oz) plain flour

Variations:**White Chocolate and Pistachio Nut**

100 g (4 oz) white chocolate, chopped
 50 g (2 oz) pistachio nuts, chopped

Marzipan and Cherry

100 g (4 oz) glacé cherries
 50 g (2 oz) marzipan, chopped

Peanut Butter

100 g (4 oz) peanuts
 50 g (2 oz) peanut butter, crunchy

Chocolate Chunk

75 g (3 oz) white chocolate, chopped
 75 g (3 oz) dark chocolate, chopped

Ingredients

100 g (4 oz) plain chocolate
 100 g (4 oz) butter
 100 g (4 oz) soft dark brown sugar
 100 g (4 oz) self-raising flour
 10 ml (2 tsp) cocoa powder
 pinch salt
 2 eggs, beaten
 3 ml (½ tsp) vanilla essence
 100 g (4 oz) walnuts, chopped

Ingredients

225 g (8 oz) self-raising flour
 pinch salt
 5 ml (1 tsp) baking powder
 50 g (2 oz) butter
 25 g (1 oz) caster sugar
 50 g (2 oz) sultanas
 150 ml (¼ pt) milk
 beaten egg to glaze

American Cookies

Dish: round metal baking tray **Oven Accessory:** glass turntable + metal tray + low rack

1. Cream together the butter and sugar until pale, then beat in the egg.
2. Mix in the flour until well combined and add the chosen additions.
3. Place walnut-sized spoonfuls of dough well apart on a round baking tray, flatten slightly with a fork and cook in a pre-heated oven on **Convection 170°C** for 10-15 mins. or until golden.
4. Remove from baking sheet and allow to cool on a wire rack.
5. Repeat with remaining mixture.

Boston Brownies

Dish: 20 cm (8") square dish lined with greaseproof **Oven Accessory:** glass turntable + metal tray + low rack

1. Place chocolate and butter in a bowl and cook on **HIGH** power for 1 min. or until chocolate has melted.
2. Stir in all other ingredients and beat well.
3. Pour into dish and cook on **Combination: TURBO-BAKE 250°C + Grill 3 + SIMMER** power for 6-7 mins. or until firm. Allow to cool and then cut into squares.

Fruit Scones

Makes 10

Dish: baking sheet (round) **Oven Accessory:** glass turntable + metal tray + low rack

1. Sift the flour, salt and baking powder together. Rub in fat until the mixture resembles fine breadcrumbs. Add sugar and sultanas.
2. Make a well in the centre and stir in enough milk to form a soft dough.
3. Knead lightly. Pat out to 2cm (¾") thick and cut into 10 rounds with a 5 cm (2") cutter. Place on baking sheet, brush with beaten egg and cook in a pre-heated oven on **Convection 210°C** for 15 mins. or until well risen and golden brown.

Preserves

STERILIZING JARS

Jam jars can be sterilized by microwave ready for your jams. Half fill with water and heat them on HIGH power until water boils (approx. 3 mins. for 2 jars). Empty and drain upside down on kitchen paper. The jars should be warm when filled with jam.

If you wish to cook larger quantities than given in the recipes below, revert to the traditional hob method, using a traditional recipe.

Ingredients

450 g (1 lb) soft fruit, washed
450 g (1 lb) caster sugar
30 ml (2 tbsp) lemon juice
5 ml (1 tsp) butter

Ingredients

4 lemons, grated rind and juice of
450 g (1 lb) caster sugar
4 eggs, beaten
100 g (4 oz) butter

Ingredients

450 g (1 lb) seville oranges
1 lemon
900 ml (1½ pts) water
450 g (1 lb) sugar
knob of butter

DISH SIZE

Always use a very large pyrex bowl. DO NOT attempt to use jam pans or saucepans in your microwave.

DO NOT LEAVE JAMS UNATTENDED DURING COOKING BECAUSE OF THE HIGH SUGAR CONTENT.

COVERING

Do not cover preserves whilst cooking, apart from if recommended in the recipe.

DO NOT USE YOUR MICROWAVE TO STERILIZE BABIES' BOTTLES.

DO NOT SEAL PRESERVING JARS IN YOUR MICROWAVE.

SETTING POINT

To determine whether setting point is reached, place a couple of drops of jam or marmalade on a cold saucer (put one in the fridge whilst making the jam). Leave to cool. The jam should wrinkle on the surface when your finger pushes across the top.

Soft Fruit Jam

Makes approx. 1½ lbs jam

Dish: large bowl

Oven Accessory: glass turntable

1. Place all ingredients in a large bowl and stir. Cook on **HIGH** power for 5 mins. (10-15 mins. if using frozen fruit), stirring frequently. Continue to cook in one minute intervals until sugar has dissolved.
2. Wash down any sugar crystals from around the bowl.
3. Bring mixture to the boil and continue to cook until setting point is reached – approx. 15-25 mins. Test regularly for setting point.

Lemon Curd

Makes 2 lbs

Dish: large bowl

Oven Accessory: glass turntable

1. Place all ingredients in bowl. Mix well.
2. Cook on **HIGH** power for 1 min. Stir. Continue to cook in 1 minute stages until mixture starts to thicken, then cook for 30 secs. at a time until mixture coats back of spoon. (The eggs will curdle if overcooked).
3. The mixture will thicken on cooling. Pot into warm jars. Cover with a circle of waxed paper and a jam pot cover.

Orange Marmalade

Makes 1½-2lbs

Dish: large bowl

Oven Accessory: glass turntable

1. Grate oranges and lemon ensuring all the pith is left on the fruit.
2. Place the peeled fruit in a food processor and chop until the pips are broken.
3. Place the chopped mixture in a large bowl and pour over boiling water. Cover and cook on **HIGH** power for 10 mins.
4. Strain the mixture through a sieve into another large bowl pressing the pulp well until all the juice is extracted. Discard the pulp.
5. Stir the shredded rind into the hot juice and cook uncovered on **HIGH** power for 10 mins. until rind is tender, stirring occasionally. Stir in the sugar until dissolved.
6. Cook on **HIGH** for 8 mins covered. Stir in the butter and cook to setting point 4-6 mins.
7. Leave to stand for 10 mins then pour into warmed sterilized jars.

Ingredients

675 g (1½ lb) plums or damsons
 200 ml (7fl. oz) water
 675 g (1½ lb) sugar
 30 ml (2 tbsp) lemon juice
 5 ml (1 tsp) butter

Ingredients

675 g (1½ lb) tomatoes
 225 g (8 oz) cooking apples, peeled and sliced
 1 medium onion, chopped
 100 g (4 oz) granulated sugar
 30 ml (2 tbsp) tomato puree
 5 ml (1 tsp) salt
 200 ml (7 fl.oz) white distilled vinegar
 10 ml (2 tsp) ground ginger
 2 ml (¼ tsp) cayenne pepper
 3 ml (½ tsp) mustard powder

Ingredients

225 g (8 oz) aubergines, chopped
 225 g (8 oz) frozen cauliflower florets
 225 g (8 oz) frozen diced mixed peppers
 225 g (8 oz) frozen courgette slices
 100 g (4 oz) onion, chopped
 175 g (6 oz) salt
 1.5 litre (3 pt) water
 75 g (3 oz) sugar
 10 ml (2 tsp) dry English mustard powder
 3 ml (½ tsp) ground ginger
 450 ml (¾ pt) white vinegar
 30 ml (2 tbsp) plain flour
 5 ml (1 tsp) turmeric

Plum Jam

Makes approx. 2-2½ lbs jam

Dish: large bowl**Oven Accessory: glass turntable**

1. Prick the plums and place in a large bowl with the water. Cook on **HIGH** power for 5-10 mins. or until the fruit is soft. Add the rest of ingredients. Cook on **HIGH** power for 5 mins stirring frequently.
2. Wash down any sugar crystals from around the bowl and bring to the boil on **HIGH** power. Continue to cook until setting point is reached – approx. 15-20 mins.
3. Leave to cool slightly, remove the stones, then pot, seal and label.

Tomato Chutney

Makes approx. 2 lbs

Dish: large bowl**Oven Accessory: glass turntable**

1. Prick the tomatoes and place in a bowl. Cover with boiling water and leave for 5 mins. Drain. Peel off skin and roughly chop flesh.
2. Blend apple and onion in a food processor to a thick puree.
3. Combine all ingredients together in a bowl. Cook on **HIGH** power for 25-30 mins. stirring occasionally, or until the mixture is thick with no excess liquid.
4. Leave to stand covered for 10 mins. then stir and pour into sterilized jars. Cover and label.

Piccalilli

Makes 3½lb

Dish: large bowl**Oven Accessory: glass turntable**

1. Dissolve the salt in the water. Place vegetables in a bowl and pour water over. Leave for 24 hours.
2. Drain and thoroughly rinse the vegetables in cold water, draining well.
3. Mix together the sugar, mustard, ginger and 300 ml (½ pt) of the vinegar. Add the vegetables and mix well. Cover and cook on **HIGH** power for 15 mins.
4. Blend the flour and turmeric with the remaining vinegar and stir into the mixture. Cook uncovered on **HIGH** power for 5 mins.
5. Fill warmed sterilized jars with the mixture. Cover and seal.

Bread

The main advantage of using the microwave when making bread is that the dough can be proved by microwave as long as microsafe dishes are used.

TO PROVE DOUGH

Use Multi-stage function program to prove on **HIGH** power for 10 secs.

STAND for 10 mins. then **HIGH** power for 10 secs.

Leave in oven until dough has doubled in size.

Ingredients

450 g (1 lb) strong plain flour
1 sachet dried yeast
5 ml (1 tsp) salt
15 g (1 tbsp) fat
300 ml (1/2 pt) warm water

Ingredients

225 g (8 oz) streaky bacon, chopped
1 small onion, finely chopped
1/2 quantity of bread dough
100 g (4 oz) cheddar cheese, grated
1 medium tomato, sliced

Glaze:

1 egg, beaten

NB: If cooking on Convection or Combination and using metal loaf tins, prove on Convection 40°C NOT by microwave.

The microwave is also useful for defrosting and warming frozen bread products, taking individual slices or items from the freezer as required.

Traditional hard crusted breads and rolls cannot be cooked successfully in the microwave because of its moist heat.

However, they can be cooked by Combination in 1/2 - 3/4 of the conventional cooking time whilst retaining a browned crisp traditional appearance.

It is necessary to preheat the oven on **Convection 210°C** before selecting a combination setting.

Standard Bread Dough

Makes 2 loaves or 12 rolls

Dish: 2 x 450 g (1 lb) loaf tin, lightly greased

Oven Accessory: glass turntable + metal tray

1. In a large bowl, combine the flour, yeast and salt. Rub in the fat.
2. Add the warm water then mix to a dough.
3. Turn onto a floured surface and knead for 10 mins. Divide into two and place in a loaf tin until the dough has doubled in size in a warm place or on **Convection 40°C**. To prove by microwave, see instructions above. Pre-heat the oven on **CONVECTION 210°C**.
4. Cook on **Combination: Convection 220°C + SIMMER power** for 10-12 mins. Repeat with second loaf.

Wholemeal Bread

Use 225 g (8 oz) each of wholemeal and strong white flour.

Granary Bread

Use 450 g (1 lb) granary flour instead of strong white flour.

Picnic Plait

Serves 6

Dish: round baking tray

Oven Accessory: glass turntable + metal tray

1. Combine bacon and onion in a small bowl, cover and cook on **HIGH** power for 2-3 mins. or until soft. Drain.
2. Roll dough to 25 x 30 cm (10 x 12") rectangle. With a sharp knife make diagonal slits down the long sides at 2.5 cm (1") intervals, leaving the centre 7.5 cm (3") uncut.
3. Layer filling ingredients along centre of dough, season and fold up alternate strips of dough to form a plait. Seal well at ends.
4. Brush with beaten egg and leave to prove in a warm place or on **CONVECTION 40°C**. Pre-heat the oven on **CONVECTION 210°C**. Cook on **Combination: Convection 220°C + SIMMER power** for 15-20 mins. or until golden brown.

Traditional Sunday Lunch for 4

STEP BY STEP

Apple Pie

Prepare and cook Apple Pie – see page 89.

Potatoes

Prepare 900 g (2 lb) new potatoes. Place in a medium casserole dish with 150 ml ($\frac{1}{4}$ pt) of water. Cover and cook on **HIGH** power for 18-20 mins. or until boiled and cooked. Drain and leave to one side.

Vegetables

Cut 1 medium sized cauliflower into florets. Place in a medium casserole with 90 ml (6 tbsp) water. Cover and cook on **HIGH** power for 12 mins. or until cooked.

Place 225 g (8 oz) frozen peas in a suitable sized dish. Cover and cook on **HIGH** power for 5 mins. Drain and add to the cauliflower in a microsate serving dish. Leave to one side.

Meat

Place 3-4 lb joint of beef on low rack on metal tray + splashguard and cook on **AUTO PROGRAM BEEF**. When cooked remove meat from oven and tent in foil and keep warm.

Spoon off 45 ml (3 tbsp) of meat juices into a jug for gravy.

Place 10 ml (2 tsp) oil in 4 individual Yorkshire Pudding tins. Place on low rack on metal tray and preheat oven on **Convection 220°C**.

Once oven has preheated pour Yorkshire batter into heated oil in tins. Cook for 20-25 mins. or until Yorkshires are well risen and browned.

To Serve:

Remove Yorkshires on metal tray from oven. Reheat vegetables and make gravy using **HIGH** power (see page 87).

Menu

Roast Beef
Gravy
Yorkshire Puddings
New Potatoes
Cauliflower, Peas
Apple Pie

Time Plan

11.00am	Prepare and cook apple pie.
12 noon	Parboil potatoes.
12.12pm	Cook cauliflower and peas.
12.35pm	Put beef in oven to cook. Make Yorkshire batter.
1.25pm	Take beef out of the oven – tent in foil and leave to stand.
1.30pm	Cook Yorkshires. Carve meat.
1.50pm	Prepare gravy and cook. Reheat vegetables.
2.00pm	Place Apple Pie in oven to warm through.

Ingredients

100 g (4 oz) plain flour
pinch salt
2 eggs
300 ml ($\frac{1}{2}$ pt) milk

Yorkshire Puddings

Serves 4

Dish: individual Yorkshire tins **Oven Accessory:** glass turntable + metal tray + low rack

1. Place flour and salt in a mixing bowl. Make a well in the centre and break in eggs.
2. Beat eggs into flour and gradually add milk, beating well until smooth. Stand until required.
3. Divide 10 ml (2 tsp) oil between 4 individual Yorkshire Pudding tins. Place on low rack on metal tray and preheat oven to **Convection 220°C**.
4. Pour batter into heated oil in tins and cook for 20-25 mins. or until well risen and brown.

Questions and Answers

Q My microwave oven causes interference with my TV, is this normal?

A Some radio and TV interference might occur when you cook with the microwave oven. This interference is similar to the interference caused by small appliances such as mixers, vacuums, hair dryers, etc. It does not indicate a problem with your oven.

Q My oven has an odour and generates smoke when using the CONVECTION, COMBINATION and GRILL function. Why?

A It is essential that your oven is wiped out regularly particularly after cooking by COMBINATION or GRILL. Any fat and grease that builds up will begin to smoke if not cleaned.

Q Sometimes warm air comes from the oven vents. Why?

A The heat given off from the cooking food warms the air in the oven cavity. This warmed air is carried out of the oven by the air flow pattern in the oven. There isn't an airtight seal to the air therefore steam can escape. There are no microwaves in the air, or steam. The oven vents should never be blocked during cooking.

Technical Specifications

Rated Voltage:	230-240 V 50 Hz
Operating Frequency:	2,450 MHz
Input Power:	Max 2840 W
	Microwave 1340 W
	Grill 1560 W
	Convection 1330 W
Output Power:	1000 W (IEC-705)
	Grill 1500 W
	Convection 1250 W
Outer Dimensions:	530 mm (W) x 508 mm (D) x 344 mm (H)
Oven Cavity Dimensions:	350 mm (W) x 360 mm (D) x 250 mm (H)
Weight:	20.5 kg
Weight and Dimensions are approximate.	

Building-in Your Oven

1. In case of fitting into an oven housing, please use Panasonic's Trim Kit

NN-TKA80W - White
NN-TKA80C - Brown
2. Microwave ovens should **not be built** into a unit **directly above** a top front venting conventional cooker. This will invalidate your one year guarantee.
3. A microwave which is built in must be more than 850 mm above floor level. Read Trim-Kit instructions carefully before installation.

It is recommended that the microwave oven is placed below a conventional oven to avoid heat damage to the fascia of the microwave.

However if it is necessary to install the microwave above, then a gap of at least 15 cm (6 inches) is required from the top of the conventional oven casing to the bottom of the trim kit.

Index

A

Adapting Recipes.....	55
Apples, poached and stewed.....	50
Apple Pie	89
Arching.....	7
Auto Sensor Cooking.....	34-35
Auto Weight Cooking.....	36-40
Auto Weight Defrosting.....	16-19

B

Babies Bottles, reheating.....	7, 41, 42
Bacon	
rashers	47
steaks.....	47
Baked Apples.....	94
Baking Guidelines.....	96
Beans, cooking chart	47
Beef	
guidelines.....	64
cooking charts.....	47
Belgian Beef Casserole	68
Hungarian Goulash.....	69
Lasagne.....	67
Savoury Mince.....	67
Shepherds Pie	67
Steak and Kidney Pudding	68
Tacos	68
Beefburgers, cooking chart.....	47-48
Boil in the bag fish	50
Bread	
reheating charts.....	42
cooking charts.....	47
recipes	103
Building in	105

C

Cakes

American Cookies.....	100
Banana Cake.....	98
Boston Brownies.....	100
Carrot Cake	98
Celebration Cake.....	96
Coffee Walnut Cake.....	99

Dundee Cake.....	99
Fruit Scones.....	100
Fruity Cream Cheesecake.....	97
Gingerbread.....	97
Lemon and Raisin Flapjacks.....	99
Orange Syrup Cake.....	97
Spicy Apple Cake.....	98
Victoria Sandwich	96

Cheese and Egg Dishes

Baked Souffle	77
Cheese, Onion and Olive Scones	78
Cheese and Salami Pie	78
Croque Monsieur	77
Ham and Cheese Croissants.....	76
Macaroni Cheese.....	78
Muffin Pizzas	76
Potato Based Pizza	76
Quiche Lorraine	77

Chicken

guidelines.....	64
cooking charts.....	48
Cheesy Aubergine Chicken	66
Chicken Satay.....	65
Coq au vin.....	65
Creamy Chicken Gratin	65
Crispy Chicken with Hot Salsa.....	66
Lemon and Ginger Poussin with Onions	66
Christmas Pudding	95
reheating.....	6, 43
Cleaning your microwave	4, 10
Cling Film.....	9, 12
Combination Cooking	27-33
Containers to use.....	11-12
Control Panel.....	13
Convection Cooking	23-24
Cooking Charts.....	47-54
Custard	86

D

Defrosting

guidelines.....	18
charts.....	19

E

Eggs poached/scrambled	48-49
------------------------------	-------

F

Fish

guidelines.....	59
cooking charts.....	49-50
Bouillabaise.....	62
Coubliac.....	61
Crispy Mussels.....	63
Family Fish Pie.....	61
Fish Curry.....	62
Haddock and Spinach Florentine.....	62
Mixed Seafood Gratin.....	63
Salmon and Vegetable Mornay.....	60
Special Occasion Fish Pie.....	60
Stuffed Citrus Trout.....	59
Trout Parcels with Orange and Mustard.....	61
Tuna Fish Cakes.....	60
Tuna and Sweetcorn Lasagne.....	63
Fruit, poached and stewed.....	50
Fruit Crumble.....	95

G

Game, cooking charts.....	50
General Guidelines.....	9-10
Gravy.....	87
Grilling.....	21-22

H

Hollandaise Sauce.....	86
------------------------	----

J

Jacket Potatoes.....	53, 79
Jam.....	101-102

K

Kedgeriee.....	74
Kidney Turbigo.....	70

L

Lamb

guidelines.....	64
cooking charts.....	50-51
Chops.....	50
Lamb Kebabs.....	70
Madras Curry.....	69
Moussaka.....	69

Lemon Curd.....	101
Lentils	
cooking charts.....	47
Lentil Biryani.....	74

M

Maintenance.....	4
Meat and Poultry recipes	64-72
Microwave power levels.....	15
Microwave principles.....	8
Milk puddings.....	53
Mince pies, reheating.....	41, 44

O

Orange Marmalade.....	101
-----------------------	-----

P

Pasta, Rice and Bean recipes

Cannelloni.....	73
Kedgeriee.....	74
Lentil Biryani.....	74
Roast Vegetable and Pasta Gratin.....	75
Spinach and Ricotta Lasagne.....	73
Tagliatelle Toscana.....	75
Tuna Pasta.....	73
Vegetable and Chick Pea Casserole.....	75
Wild Mushroom and Basil Risotto.....	74

Pastry

Choux Pastry.....	88
Shortcrust Pastry.....	88
Suetcrust Pastry.....	88

Pastry Recipes

Apple Pie.....	89
Baked Jam Roly Poly Pudding.....	89
Bakewell Tart.....	90
Chicken and Stilton Pie.....	91
Chocolate Eclairs.....	90
Lemon Meringue Pie.....	90
Minced Beef and Onion Pie.....	89
Pecan Pie.....	91
Savoury Potato Plait.....	88
Tarte Normande.....	91
Pizzas.....	51

Pork

guidelines.....	64
cooking charts.....	52
Chops.....	52
Casserole Pork with Herby Dumplings.....	71
Glazed Gammon.....	70

Harvest Pork Casserole.....	72
Hawaiian Ribs.....	71
Pork and Potato Bake.....	72
Porridge.....	52

Preserves

Lemon Curd.....	101
Orange Marmalade.....	101
Piccalilli.....	102
Plum Jam.....	102
Soft Fruit Jam.....	101
Tomato Chutney.....	102

Puddings and Desserts

Baked Apples.....	94
Baked Lemon Cheesecake.....	93
Bread and Butter Pudding.....	94
Christmas Pudding.....	95
Chocolate Saucy Pudding.....	94
Crème Caramel.....	93
Creamy Rice Pudding.....	92
Fruit Crumble.....	95
Italian Banana and Toffee Pudding.....	95
Pineapple Upside Down Pudding.....	92
Plum and Oat Layer.....	93
Steamed Suet Sponge Pudding.....	92

R

Reheating

guidelines.....	41
Reheating Charts.....	42-46
Rice, cooking.....	52
Roast Potatoes.....	81

S

Sauces

guidelines.....	86
Creamy Orange Sauce.....	87
Custard.....	86
Gravy.....	87
Hollandaise Sauce.....	86
Mars Bar Sauce.....	87
Tomato Sauce.....	87
White Pouring Sauce.....	86

Sausages

Cooking.....	53
Cumberland Sausage Curry.....	72
Toad in the Hole.....	71
Shielding.....	18

Soups and Starters

Baked Stuffed Tomatoes.....	58
-----------------------------	----

Carrot and Celery Soup.....	56
Cheesy Chicken and Bacon Rolls.....	58
Cream of Mushroom Soup.....	56
Goats Cheese and Basil Ciabatta.....	57
Mushroom Paté.....	57
Pizza Pies.....	56
Pork and Chicken Terrine.....	57
Smoked Haddock Samosas.....	58
Standing Times.....	9
Sunday Lunch.....	104

T

Technical Specification.....	105
Turkey cooking charts.....	53

V

Vegetables

guidelines.....	79
cooking charts.....	53-54
Cauliflower Cheese.....	85
Goats Cheese Tart with Roasted Vegetables.....	83
Gratin Dauphinoise.....	82
Leek and Potato Gratin.....	80
Mushroom Stroganoff.....	83
Nutty Potato Crumble.....	84
Potato and Rosemary Cake.....	80
Ratatouille.....	84
Red Peppers Stuffed with Bacon and Goat's Cheese.....	85
Roast Potatoes.....	81
Roast Vegetable Moussaka.....	82
Roast Vegetable Parcels.....	81
Spicy Potatoes.....	83
Summer Vegetable Flan.....	82
Vegetarian Chilli.....	84
Vegetable Curry.....	85
Vegetable Lasagne.....	80
Veggie Burgers.....	81
Victoria Sandwich.....	96

W

White Sauce.....	86
------------------	----

Y

Yorkshire Puddings.....	104
-------------------------	-----